
TECHNICAL MANUAL

DIRECT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE AND SPECIAL TOOLS)

AIR CONDITIONER, VERTICAL: COMPACT,
SELF-CONTAINED, AIR COOLED, ELECTRIC MOTOR DRIVEN
115 VOLTS, A.C. 50/60 HERTZ, SINGLE PHASE
9,000 BTU/HR COOLING, 6,000 BTU/HR HEATING
(HARVEY W. HOTTEL MODEL CV-9-5/6-15

FSN 4120-935-1609

HEADQUARTERS, DEPARTMENT OF THE ARMY

6 SEPTEMBER 1974

TECHNICAL MANUAL }
No. 5-4120-337-34P }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D. C., 6 September 1974

DIRECT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST

AIR CONDITIONER, VERTICAL: COMPACT,
SELF-CONTAINED, AIR COOLED, ELECTRIC MOTOR DRIVEN
115 VOLTS, A.C. 50/60 HERTZ, SINGLE PHASE
9,000 BTU/HR COOLING, 6,000 BTU/HR HEATING
(HARVEY W. HOTTEL MODEL CV-9-5/6/15)
FSN 4120-935-1609

Current as of 15 July 1974

		Listing Page	Illustration Figure
SECTION	I. INTRODUCTION -----		
	II REPAIR PARTS LIST -----	1	
Group	01. Casing, guards, grilles, drain tubes, panels and filter -----	1	1
	02. Junction box assembly -----	6	2
	03. Control panel assembly -----	12	3
	04. Block-off panel assembly -----	14	4
	05. Fan assembly-----	14	5
	06. Motor assembly -----	16	6
	07. Heater assembly-----	16	7
	08. Wiring harnesses clamps -----	17	8
	09. Mist eliminator, evaporator and condenser coils, valves, dehydrator, receiver, sight glass and piping -----	19	9
	10. Valves, pressure switches and piping-----	24	10
	11. High and low pressure switches and enclosure -----	28	11
	12. Compressor assembly -----	28	12
	13. Accessory items -----	29	13
SECTION	III. SPECIAL TOOLS LIST (Nonapplicable)		
	IV. FEDERAL STOCK NUMBER AND REFERENCE NUMBER INDEX -----	44	

Section I.

INTRODUCTION

1. Scope

This manual lists repair parts, special tools, test, measurement, and diagnostic equipment (TMDE), and other support equipment required for operation and performance of direct support, and general support maintenance of the air conditioner.

2. General

a. *Section II — Repair Parts List.* A list of repair parts authorized at the direct support and general support levels for the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending numerical sequence, with the parts in each group listed in figure and item number sequence,

b. *Section III — Special Tools List.* Not applicable.

c. *Section IV — Federal Stock Number and Reference Number Index.* A list, in ascending numerical sequence, of all Federal stock numbers appearing in the listings, followed by a list, in alphanumeric sequence, of all reference numbers appearing in the listings. Federal stock number and reference numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

The following provides an explanation of columns found in the tabular listing in Section II.

a. *Source, Maintenance, and Recoverability Codes (SMR).*

(1) *Source Code.* Source codes are assigned to support items to indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
PA	Item procured and stocked for anticipated or known usage.

Code	Definition
PB	Item procured and, stocked for insurance purpose because essentiality dictates that a minimum quantity be available in the supply systems.
PC	Item procured and stocked and which otherwise would be (coded P4 except that it is deteriorative in nature.
PD	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
PE	Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
PF	Support equipment which will not be stocked but which will be centrally procured on demand.
PG	Item procured and stocked to provide for sustained support for the life of the equipment. It applied to an item peculiar to the equipment which, because of probable discontinuance or shutdown of production facilities, would prove uneconomical to reproduce at a later time.
KD	An item of a depot overhaul/repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.
KF	An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can, be replaced at organizational or intermediate levels of maintenance.
KB	Item included in both a depot overhaul/repair kit and a maintenance kit,
MO	Item to be manufactured or fabricated at organizational level.
M-F	Item to be manufactured or fabricated at the direct support maintenance level,
MH	Item to lx, manufactured or f fabricated at the general support maintenance level.
MD	Item to be manufactured or fabricated at the depot maintenance level.
AO	Item to be assembled at organizational level.
AF	Item to be assembled at direct support maintenance level.
AH	Item to be assembled at general support maintenance level.
AD	Item to be assembled at depot maintenance level.
XA	Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
XB	Item is not procured or stocked. If not available through salvage, requisition.

Code	Definition
XD	A support item that is not stocked. When required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA or XD.

(2) Maintenance Code. Maintenance codes are assigned to indicate the levels of maintenance authorized to use and repair support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
C	Crew or operator maintenance performed within organizational maintenance.
O	Support item is removed, replace, used at the organizational level.
I	Support item is removed, replaced, used by the direct support element of integrated direct support maintenance.
F	Support item is removed, replaced, used at the direct support level.
H	Support item is removed, replaced, used at the general support level.
D	Support items that are removed, replaced, used at depot, mobile depot, specialized repair activity only.

NOTE

Codes "I" and "F" will be considered the same by direct support units.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application/Explanation
O	The lowest maintenance level capable of complete repair of the support item is the organizational level.
F	The lowest maintenance level capable of complete repair of the support item is the direct support level.
H	The lowest maintenance level capable of complete repair of the support item is the general Support level.

Code	Application/Explanation
D	The lowest maintenance level capable of complete repair of the support item is the depot level.
L	Repair restricted to designated specialized repair activity.
Z	Nonreparable No repair is authorized.
B	No repair is authorized. The item may be reconditioned by adjusting, lubricating, etc., at the user level. No parts or special tools are procured for the maintenance of this item.

(3) Recoverability Code. Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Recoverability Code	Definition
Z	Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.
O	Reparable item. When uneconomically reparable, condemn and dispose at organizational level.
F	Reparable item. When uneconomically reparable, condemn and dispose at the direct support level.
H	Reparable item. When uneconomically reparable, condemn and dispose at the general support level.
D	Reparable item. When beyond lower level repair capability, return to depot. Condemnation and disposal not authorized below depot level.
L	Reparable item, Repair condemnation, and disposal not authorized below depot/specialized repair activity level.
A	Item requires special handling or condemnation procedures because of specific reasons (i.e., precious metal content, high dollar value, critical material or hazardous material). Refer to appropriate manuals/directives for specific instructions.

b. Federal Stock Number. Indicates the Federal stock number assigned to the item and will be used for requisitioning purposes.

c. Description. Indicates the Federal item name and a minimum description required to identify the item. The last line indicates the reference number followed by the applicable Federal Supply Code for Manufacturers (FSCM) in parentheses. The FSCM is used as an element in item identification to designate manufacturer or distributor or Government agency, etc., and is identified in SB708-42. Items that are included in kits and sets are listed, below the name of the kit or set with quantity of each item in the kit or set indicated in front of the item name.

d. Unit of Measure(U/M). Indicates the standard or basic quantity by which the listed item is used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation, e.g., ea, in, pr, etc., and (is the basis used to indicate quantities and allowances in subsequent columns.