

TECHNICAL MANUAL

ORGANIZATIONAL, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS LIST)

AIR CONDIONER, SPLIT PACKAGE,
18,000 BTU/HR COOLING
30.000 BTU/HR HEATING
208 VOLT, 3 PHASE, 400 HERTZ

KECO MODEL F18H4-2
NSN 4120-01-069-1321

AIRTACS MODEL MSP-18-4-08
NSN 4120-01-266-7597

FERANGE MODEL FAC-MH-18S
NSN 4120-01-363-8137

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

HEADQUARTERS, DEPARTMENT OF THE ARMY

24 MAY 1982

TECHNICAL MANUAL

No. 5-4120-359-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 24 May 1982

ORGANIZATIONAL, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR
PARTS AND SPECIAL, TOOLS)

FOR

AIR CONDITIONER, SPLIT PACKAGE,
18,000 BTU/HR COOLING
30,000 BTU/HR HEATING
208 VOLT, 3 PHASE, 400 HERTZ

KECO MODEL F18H4-2
NSN 4120-01-069-1321

AIRTACS MODEL MSP-18-4-08
NSN 4120-01-266-7597

FERANGE MODEL FAC-MH-18S
NSN 4120-01-363-8137

Current as of 4 March 1982

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us now. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located on back of this manual direct to: U.S. Army Aviation and Troop Command ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63129-1798. A reply will be furnished to you.

TABLE OF CONTENTS

		Page	Illustration Figure
SECTION I.	INTRODUCTION	1	
SECTION II.	REPAIR PARTS LIST	7	
Group 01	AIR CONDITIONER ASSEMBLY		
	Final Assembly Items	7	1
Group 02	EVAPORATOR ASSEMBLY		
	Evaporator Assembly and Outside Covers.	9	2
	Wiring Harnesses and Temperature Sensing Probe	13	3
	Fan Parts, Evaporator Section	15	4
	Fan Motor, Evaporator Section	17	5
	Heaters,Evaporator Section	21	6
	Heaters, Evaporator Section	22.1	6A
	Refrigeration Components, Evaporator Section	23	7
	Housing, Evaporator Section	27	8

DISTRIBUTION STATEMENT A: Approved for Public Release; Distribution is Unlimited.

TABLE OF CONTENTS (cont)

			Page	Illustration Figure
Group	03	ELECTRICAL MODULE ASSEMBLY		
		EVAPORATOR SECTION		
		Evaporator Electrical Module Cover and Harnesses	31	9
		Evaporator Electrical Module Internal Components. . .	37	10
Group	04	CONDENSER ASSEMBLY		
		Condenser Assembly, Top and Front Outside Covers	39	11
		Rear, Left and Right Side Outside Covers, Condenser Section	41	12
		Wiring Harnesses, Condenser Section	43	13
		Air Damper Controls, Condenser Section.	47	14
		Blower, Condenser Section	49	15
		Motor, Condenser Blower	51	16
		Refrigerant Hoses, Condenser Section	53	17
		Refrigerant Piping, Condenser Section	57	18
		Refrigerant Piping, Condenser Section	60.1	18A
		Pressure Switches, Relief Valve and Condenser Coil	61	19
		Compressor	63	20
		Compressor	64.1	20A
		Housing, Condenser Section	65	21
Group	05	ELECTRICAL MODULE ASSEMBLY, CONDENSER SECTION		
		Electrical Control Module, Condenser Section	67	22
Group	06	REMOTE CONTROL ASSEMBLY		
		Remote Control Assembly	71	23
		Maintenance Set	75	24
		Maintenance Seat	76.1	25
Group	07	BULK ITEMS		
		Bulk Items	77	
III.		SPECIAL TOOLS LIST (Not Applicable)		
IV.		NATIONAL STOCK NUMBER-PART NUMBER INDEX .	78	

ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)

SECTION I. INTRODUCTION

1. SCOPE.

This manual lists spares and repair parts; special tools special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational, direct support, and general support maintenance of the Keco Model F18H4-2. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. GENERAL.

This Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence. Bulk materials are listed in NSN sequence.

b. *Section III. Special Tools List.* A list of special tools, special TMDE, and other special support equipment authorized for the performance of maintenance.

c. *Section IV. National Stock Number and Part Number Index.* A list in National Item Identification Number (NIIN) sequence of all National Stock Numbers (NSN) appearing in the listings, followed by a list in alpha-numeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. This index is followed by a cross-reference list of reference designators to figure and item numbers.

3. EXPLANATION OF COLUMNS.

a. *Illustration.* This column is divided as follows:

(1) *Figure Number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item Number.* The number used to identify item called out in the illustration.

b. *Source, Maintenance and Recoverability (SMR) Codes*

(1) *Source Code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

CODE

DEFINITION

PA	Item procured and stocked for anticipated or known usage.
PB	Item procured and stocked for insurance purpose because essentially dictates that a minimum quantity be available in the supply system.
PC	Item procured and stocked and which otherwise would be coded PA except that it is deteriorative in nature.

CODE	DEFINITION
PD	Support item, excluding support equipment, procured for initial issue or outfitting and stocked only for subsequent or additional initial issues or outfittings. Not subject to automatic replenishment.
PE	Support equipment procured and stocked for initial issue or outfitting to specified maintenance repair activities.
PF	Support equipment which will not be stocked but which will be centrally procured on demand.
PG	Item procured and stocked to provide for sustained support for the life of the equipment. It is applied to an item peculiar to the equipment which, because of probable discontinuance or shutdown of production facilities, would prove uneconomical to reproduce at a later time.
KD	An item of a depot overhaul repair kit and not purchased separately. Depot kit defined as a kit that provides items required at the time of overhaul or repair.
KF	An item of a maintenance kit and not purchased separately. Maintenance kit defined as a kit that provides an item that can be replaced at organizational or intermediate levels of maintenance.
KB	Item included in both a depot overhaul repair kit and a maintenance kit.
MO	Item to be manufactured or fabricated at the organizational level.
MF	Item to be manufactured or fabricated at the direct support maintenance level.
MH	Item to be manufactured or fabricated at the general support maintenance level.
MD	Item to be manufactured or fabricated at the depot maintenance level.
AO	Item to be assembled at organizational level.
AF	Item to be assembled at direct support maintenance level.
AH	Item to be assembled at general support maintenance level.
AD	Item to be assembled at depot maintenance level.
XA	Item is not procured or stocked because the requirements for the item will result in the replacement of the next higher assembly.
XB	Item is not procured or stocked. If not available through salvage, requisition.
x c	Installation drawing, diagram, instruction sheet, field service drawing, that is identified by manufacturer's part number.
XD	A support item that is not stocked. When required item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) Maintenance Code. Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance: