

TECHINICAL MANUAL

**ORGANIZATIONAL AND DIRECT SUPPORT
REPAIR PARTS AND SPECIAL TOOLS LIST**

**AIR CONDITIONER, MULTIPURPOSE,
TYPE I CONFIGURATION,
18,000 BTU/HR, 120/208 VOLT, 50/60 HZ,
3-PHASE, 5-HIGH STACK
CONFIGURATION
(TIERNAY MODEL TM-18K-120/208-3-60)
NSN 4120-01-077-6931**

Approved for public release; distribution is unlimited.

*This manual supersedes TM 5-4120-364-23P, 30 July 1980, including all changes

HEADQUARTERS, DEPARTMENT OF THE ARMY

10 OCTOBER 1989

TECHNICAL MANUAL

NO. 5-4120-364-29P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON D.C., 10 October 1989

TECHNICAL MANUAL

ORGANIZATIONAL AND DIRECT SUPPORT
REPAIR PARTS AND SPECIAL TOOLS LIST

for

AIR CONDITIONER, MULTI-PURPOSE, TYPE 1 CONFIGURATION,
18,000 BTU/HR, 120/208 VOLT, 50/60 HZ, 3-PHASE, 5-HIGH STACK CONFIGURATION
(TIERNAY MODEL TM-18K-120/208-3-60) NSN 4120-01-077-6931

Current as of 15 July 1989

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2026-2 located in the back of this manual direct to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. A reply will be furnished directly to you.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		Page	IIIus/ Figure
Section I.	INTRODUCTION	1	
Section II.	REPAIR PARTS LIST		
Group 01	Evaporator Fan Section		
	Evaporator Fan Section, Covers, Panels and Frame	1-1	1
	Evaporator Fan Section, Fan Housings and Fans	2-1	2
	Evaporator Fan Section, Fan Motor and Mountings	3-1	3
Group 02	Evaporator Coil Section		
	Evaporator Coil Section, Covers, Panels and Frame	4-1	4
	Evaporator Coil and Component	5-1	5
	Evaporator Coil Mounting	6-1	6
Group 03	Condenser Fan Section		
	Condenser Fan Section, Covers, Panels and Frames . . .	7-1	7
	Control Panel and Controls	8-1	8
	Condenser Fan Section, Fan Housings and Fans	9-1	9
	Condenser Fan Section, Fan Motor and Mounting	10-1	10
	Filter Drier, Sight Glass and Mounting	11-1	11
Group 04	Condenser Coil Section		
	Condenser Coil Section, Covers, Panels and Frame	12-1	12
	Condenser Coil and Mounting Components	13-1	13

*This manual supersedes TM 5-4120-364-23P, 30 July 1980, including all changes.

		Page	Illust/ Figure
Group 05	Compressor Section		
	Compressor Section Covers, Panels and Frames	14-1	14
	Motor Compressor Assembly Mounting and Components	15-1	15
	Motor and Compressor Assembly	16-1	16
	High Pressure Switch	17-1	17
	Electrical Contactor	18-1	18
	Starter Box	19-1	19
Section III	Special Tools List		
Section IV.	Cross Reference Index	I-1	
	National Stock Number Index	I-1	
	Part Number Index	I-4	
	Figure and Item Number Index	I-14	

ORGANIZATIONAL AND DIRECT SUPPORT
REPAIR PARTS AND SPECIAL TOOLS LIST

AIR CONDITIONER, MULTI-PURPOSE, TYPE 1 CONFIGURATION,
18,000 BTU/H+R, 120/2085 VOLT, 50/80 HZ, 3-PHASE, 5-HIGH STACK CONFIGURATION
(TIERNAY MODEL TM-18K-120/208-3-60) NSN 4120-01-077-0931

SECTION I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of organizational and direct support maintenance of the Air Conditioner. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List . A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).


b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-references Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item number in alphanumeric sequence and cross references NSN, FSCM and part number.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration,

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisition information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

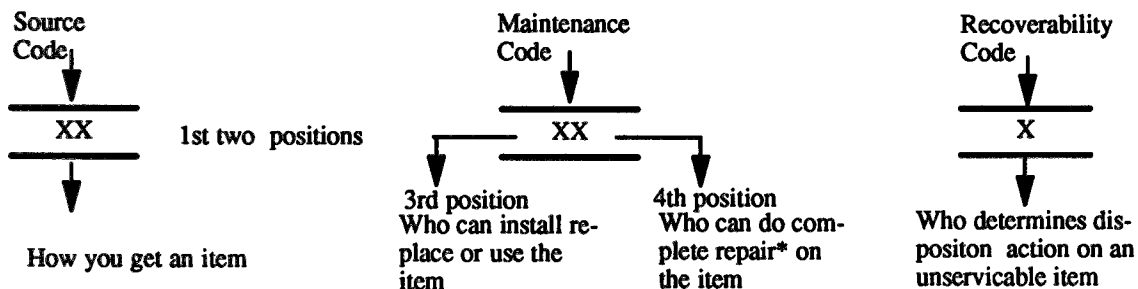

NOTE

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) **Source Code.** The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

Code	Explanation
PA PB PC** PD PE PF PG	Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3d position of the SMR code.
KD KF KB	**NOTE: Items coded PC are subject to deterioration. Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3d position of the SMR code. The complete kit must be requisitioned and applied.
MO-(Made at org. AVUM Level MF-(Made at DS/ AVUM Level MH-(Made at GS Level) ML—Made at Specialized Repair Activity (SRA)j MD-(Made at Depot)	Explanation Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. If the item is authorized to you by the 3d position code of the SMR code, but the sourced code indicates it is made at a higher level, order the item from the higher level of maintenance.