


**TECHNICAL MANUAL
OPERATOR'S, ORGANIZATIONAL, DIRECT
SUPPORT, AND GENERAL SUPPORT
MAINTENANCE MANUAL**

**AIR CONDITIONER,
BASE MOUNTED, AIR COOLED,
208 VAC, 3-PHASE, 60 Hz,
SINGLE PACKAGE,
36,000 BTU/HR**

NSN 4120-01-122-0629

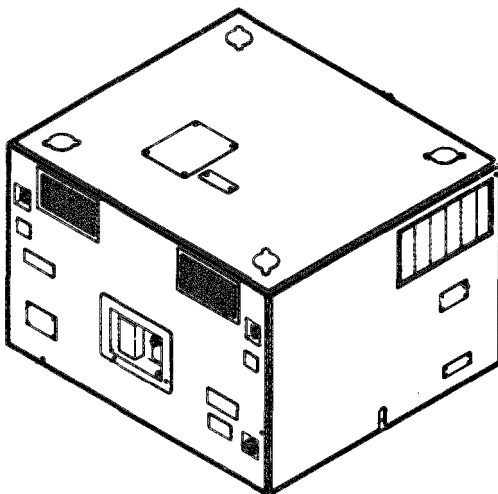

CHAPTER 1	INTRODUCTION
CHAPTER 2	OPERATING INSTRUCTIONS
CHAPTER 3	OPERATOR'S MAINTENANCE INSTRUCTIONS
CHAPTER 4	ORGANIZATIONAL MAINTENANCE INSTRUCTIONS
CHAPTER 5	DIRECT SUPPORT MAINTENANCE INSTRUCTIONS
CHAPTER 6	GENERAL SUPPORT MAINTENANCE INSTRUCTIONS
APPENDIX A	REFERENCES
APPENDIX B	MAINTENANCE ALLOCATION CHART
APPENDIX C	COMPONENTS OF END ITEM LIST
APPENDIX D	EXPENDABLE SUPPLIES AND MATERIALS LIST
APPENDIX E	WIRE LIST AND DIAGRAMS
	GLOSSARY
	ALPHABETICAL INDEX

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 21 October 1983

OPERATOR'S, ORGANIZATIONAL, DIRECT SUPPORT,

AND GENERAL SUPPORT MAINTENANCE MANUAL

AIR CONDITIONER, BASE MOUNTED, AIR COOLED,

208 VAC, 3-PHASE, 60 HZ,

SINGLE PACKAGE, 36,000 BTU/HR

PART NO. 97403-13219E0790

M O D E L	NSN
UAC40-5/6-08	4120-01-122-0629
2463T100-1	4120-01-218-6912

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistake or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Troop Support Command, ATTN: AMSTR-MCTS, 4300 Goodfellow Boulevard, St. Louis, MO 63120-1798. A reply will be furnished directly to you.

TABLE OF CONTENTS

	Page
CHAPTER 1. INTRODUCTION	
Section I. General Information-----	1-1
Section II. Equipment Description and Data-----	1-3
Section III. Principles of Operation-----	1-6
CHAPTER 2. OPERATING INSTRUCTIONS	
Section I. Description and Use of Operators's Controls and Indicators-----	2-1
Section II. Operator Preventive Maintenance Checks and Services-----	2-1
Section III. Operation Under Usual Conditions-----	2-5

TABLE OF CONTENTS (continued)

		Page
Section	IV. Operation Under Unusual conditions -----	2-7
CHAPTER	3. OPERATOR'S MAINTENANCE INSTRUCTIONS	
Section	I. Lubrication Instructions -----	3-1
Section	II. Troubleshooting -----	3-1
CHAPTER	4. ORGANIZATIONAL MAINTENANCE INSTRUCTIONS	
Section	I. Repair Parts, Special Tools, TMDE, and Support Equipment -----	4-1
Section	II. Service upon Receipt of Equipment -----	4-2
Section	III. Preventive Maintenance Checks and Services -----	4-7
Section	IV. Troubleshooting -----	4-12
Section	V. Maintenance Procedures -----	4-20
Section	VI. Preparation for Storage or Shipment -----	4-134
CHAPTER	5. DIRECT SUPPORT MAINTENANCE INSTRUCTIONS	
Section	I. Repair parts, Special Tools TMDE, and Support Equipment -----	5-1
Section	II. Troubleshooting -----	5-2
Section	III. Maintenance Procedures -----	5-7
CHAPTER	6. GENERAL SUPPORT MAINTENANCE INSTRUCTIONS	
Section	I. Troubleshooting -----	6-1
Section	II. Maintenance Procedures -----	6-2
APPENDIX		
	A. References -----	A-1
	B. Maintenance Allocation Chart -----	B-1
	C. Components of End Item List -----	C-1
	D. Expendable Supplies And Materials List -----	D-1
	E. Wire List and Diagram-----	E-1
	F. Glossary-----	F-1
	ALPHABETICAL INDEX -----	INDEX- 1

CHAPTER 1

INTRODUCTION

CHAPTER OVERVIEW

The purpose of this chapter is twofold:

- a. To provide you with the standard data required in all manuals (i.e. forms and record data).
- b. To acquaint you with the air conditioner. This is done by giving you a physical and functional description of those major equipment parts that you are likely to come in contact with.

INDEX

SECTION		PAGE
I.	General Information.	1-1
II.	Equipment Description.	1-3
III.	Technical Principles of Operation.	1-6

SECTION I. GENERAL INFORMATION

1. Fresh air dampers
2. Air filter panel
3. Return air damper
4. Condenser coil guard
5. Main power connector
6. Rotary control switch
7. Thermostat
8. Evaporator fan outlets
9. Maintenance panel

