

TECHNICAL MANUAL

**ORGANIZATIONAL, DIRECT SUPPORT
AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST**

**AIR CONDITIONER, BASE MOUNTED,
AIR COOLED, 208 VAC, 3-PHASE, 60 HZ,
SINGLE PACKAGE, 36,000 BTU/HR**

MODEL UAC 40-5/6-08

NSN 4120-01-122-0629

MODEL 2643T100-1

NSN 4120-01-218-6912

Approved for public release; distribution is unlimited.

*This manual supersedes TM 5-4120-375-24P, 4 May 1984, including all changes.

HEADQUARTERS, DEPARTMENT OF THE ARMY
10 OCTOBER 1989

TECHNICAL MANUAL

No. 5-4120-375-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 10 October 1989**Organizational, Direct Support and General Support Maintenance
Repair Parts and Special Tools List
for****AIR CONDITIONER, BASE MOUNTED, AIR COOLED,
208 VAC, 3-PHASE, 60 HZ, SINGLE PACKAGE, 36,000 BTU/HR**MODEL UAC 40-5/6-08
NSN 4120-01-122-0629
MODEL 2643T100-1
NSN 4120-01-218-6912

Current as of 16 June 1989

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Troop Support Command, ATTN: AMSTR-MCTS, 4300 Goodfellow Boulevard, St. Louis, MO 63120-1798. A reply will be furnished directly to you.

Approved for public release; distribution is unlimited:**TABLE OF CONTENTS**

		Page	Illust/ Figure
Section I.	Introduction	1	
Section II.	Repair Parts List		
Group 01	Covers, Panels, Guards, and Screens		
	Top, Front, and Right Side Panels	1-1	1
	Back and Left Side Panels	2-1	2
	Control Box Assembly	3-1	3
Group 02	Air Filters, Dampers, Condensate Drains		
	Air Filters and Dampers	4-1	4
	Condensate Drains	5-1	5
Group 03	Junction Box and Wiring Harness		
	Junction Box and Wiring Harness	6-1	6
	Junction Box Assembly	7-1	7
Group 04	Electric Motors, Fans, and Housings		
	Electric Motors, Fans, and Housings	8-1	8
Group 05	Refrigeration System		
	Refrigeration System	9-1	9
	Pressure Switch Assembly	10-1	10
	Frame and Attaching Plates	11-1	11
	Frame	12-1	12

*This manual supersedes TM 5-4120-375-24P, 4 May 1984 including all changes

		Page	Illust/ Figure
Section III.	Special Tools List		
Section IV.	Cross Reference Indexes	I-1	
	National Stock Number Index	I-1	
	Part Number Index	I-4	
	Figure & Item Number Index.	I-15	

TM 5-4120-375-24P

ORGANIZATIONAL, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

AIR CONDITIONER, BASE MOUNTED, AIR COOLED,
208 VAC, 3-PHASE, 60 HZ, SINGLE PACKAGE, 36,000 BTU/HR
MODEL UAC 40-5/6-06, NSN 4120-01-122-0629,
MODEL 264100-1, NSN 4120-01-216-6912

SECTION I. INTRODUCTION

1. SCOPE. TM RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit and Intermediate direct support maintenance of the Air Conditioner, Base Mounted, Air cooled Section. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).


b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-references Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item number in alphanumeric sequence and cross references NSN, FSCM and part number.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

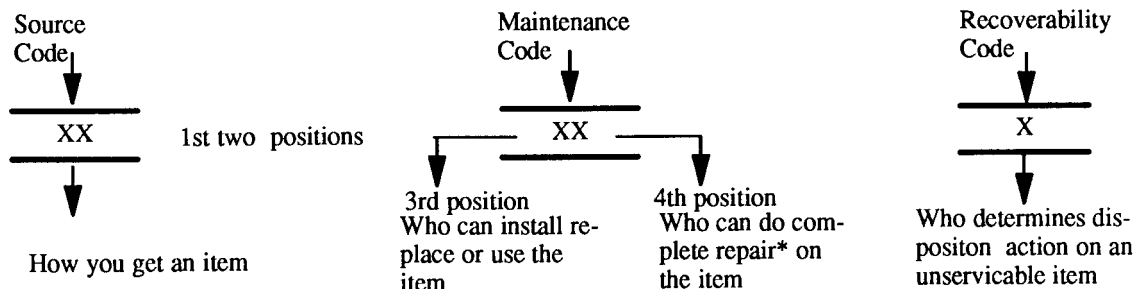

NOTE

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

Code	Explanation
PA PB PC** PD PE PF PG	Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3d position of the SMR code.
KD KF KB	*NOTE: Items coded PC are subject to deterioration. Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3d position of the SMR code. The complete kit must be requisitioned and applied.
MO—(Made at org. AVUM Level MF—(Made at DS/ AVUM Level MH—(Made at GS Level) ML—Made at Specialized Repair Activity (SRA) MD—(Made at Depot)	Explanation Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. If the item is authorized to you by the 3d position code of the SM R code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.