


TECHNICAL MANUAL
ORGANIZATIONAL, DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
FOR
AIR CONDITIONER, HORIZONTAL, COMPACT
36,000 BTU/HR, COOLING
31,000 BTU/HR, HEATING
208 VOLT, 3 PHASE, 50/60 HERTZ
MODEL CH40-5/6-08
NSN: 4120-01-122-0628

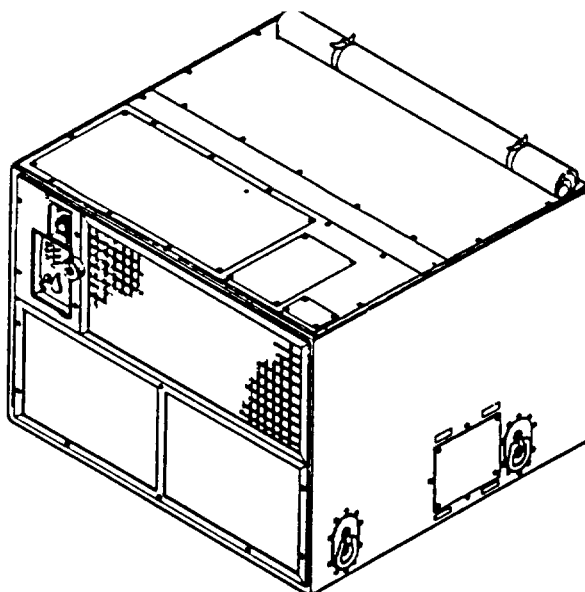

This copy is a reprint which includes
current pages from Changes 1 and 2.

TECHNICAL MANUAL

NO. 5-4120-376-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 12 December 1985

Organizational, Direct Support and
General Support Maintenance
Repair Parts and Special Tools List
FOR
AIR CONDITIONER, HORIZONTAL, COMPACT
36,000 BTU/HR, COOLING
31,000 BTU/HR, HEATING
208 VOLT, 3-PHASE, 50/60 HERTZ
MODEL CH40-5/6-08
NSN 4120-01-122-0628

Current as of 12 June 1985

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes, or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. You may also submit your recommended changes by E-mail directly to <mpmt%avma28@st-louis-emh7.army.mil>. A reply will be furnished directly to you. Instructions for sending an electronic 2028 may be found at the back of this manual immediately preceding the hard copy 2028.

TABLE OF CONTENTS

		Page	Illus Figure
Section I.	INTRODUCTION	1	
Section II.	REPAIR PARTS LIST	1-1	
Group 01	Top Covers and Front Louvers.....	1-1	1
Group 02	Condenser Guard, Covers, Ventilation Air Filter and Lifting Rings	2-1	2
Group 03	Condenser Fans and Support Assembly.....	3-1	3
Group 04	Condenser Fan Motor Assembly	4-1	4
Group 05	Condensate Drain Assembly	5-1	5
	Housing and Mounting Base Assembly	6-1	6
	Evaporator Fan Motor Assembly	7-1	7
Group 06	Ventilation Damper Assembly	8-1	8
Group 07	Condenser Louver Actuator and Control Assembly	9-1	9
Group 08	Refrigerant Valves and Related Tubing	10-1	10
Group 09	Dehydrator and Related Tubing	11-1	11
Group 10	Pressure Switches, Liquid Receiver, Sight Indicator, Charging Valves and Related Tubing	12-1	12
Group 11	Compressor, Accumulator, and Related Parts.....	13-1	13
Group 12	Evaporator and Condenser Coils and Related Compartment Parts.....	14-1	14

TABLE OF CONTENTS (Cont)

		Page	Illus Figure
Group 13	Control Module	15-1	15
	Junction Box Assembly	16-1	16
	Wiring Harness.....	17-1	17
*Group 14	Ambient Thermostat and Auxiliary Power Inlet	18-1	18
Group 15	Heater, Transformer, Rectifier and Related Parts.....	19-1	19
Group 16	Louver and Condenser Fan Housing Assembly.....	20-1	20
Group 17	Housing (Hardware) Assembly.....	21-1	21
	Housing Insulation	22-1	22
Group 99	Bulk	Bulk-1	
Section III.	SPECIAL TOOLS LIST (NOT APPLICABLE)		
Section IV.	NATIONAL STOCK NUMBERS AND REFERENCE NUMBER INDEX.....	I-1	

**ORGANIZATIONAL, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST**

Section I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of organizational, direct support, and general support maintenance of the Air Conditioner, Model CH40-5/6-08. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).


b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

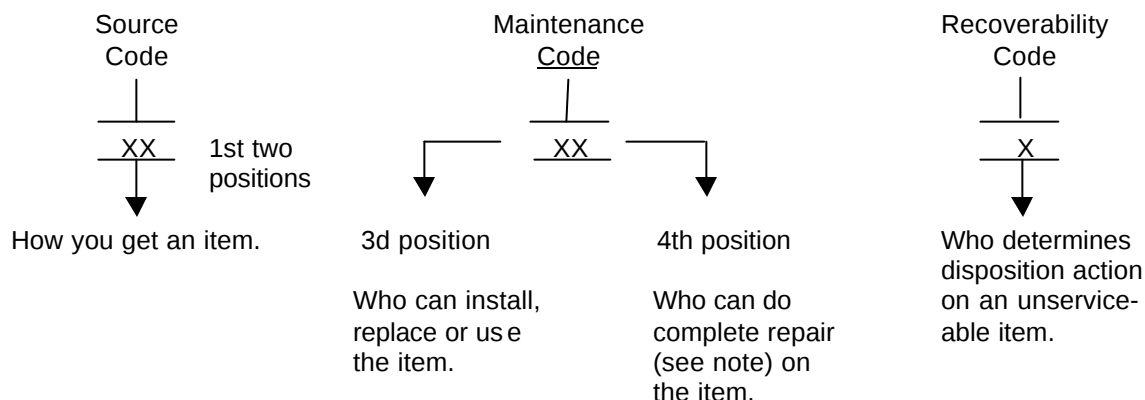

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

Code	Explanation
PA PB PC** PD PE PF PG	Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3d position of the SMR code. **NOTE: Items coded PC are subject to deterioration.
KD KF KB	Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3d position of the SMR code. The complete kit must be requisitioned and applied.
MO-- (Made at org/AVUM Level) MF-- (Made at DS/AVUM Level) MH-- (Made at GS Level) ML-- (Made at Specialized Repair Activity (SRA)) MD- (Made at Depot)	Explanation Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in the RPSTL. If the item is authorized to you by the 3d position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.
AO- (Assembled by org/AVUM Level) AF- (Assembled by DS/AVIM Level) AH- (Assembled by GS Category) AL- (Assembled by SRA) AD- (Assembled by Depot)	Explanation Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the level of maintenance indicated by the source code. If the 3d position code of the SMR code authorizes you to replace the item, but the source code indicates the items are assembled at a higher level, order the item from the higher level of maintenance.