
TECHNICAL MANUAL

**ORGANIZATIONAL, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST**

**AIR CONDITIONER, HORIZONTAL
COMPACT 18,000 BTU/HR
208-VOLT, 3-PHASE, 50/60 HERTZ
NSN 4120-01-136-9836**

Approved for public release; distribution is unlimited.

***This manual supersedes TM 5-4120-379-24P, 31 August 1984**

HEADQUARTER, DEPARTMENT OF THE ARMY

2 APRIL 1990

TECHNICAL MANUAL

NO. 5-4129-379-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 2 April 1990

Organizational, Direct Support, and General Support Maintenance
Repair Parts and Special Tools List
for

**AIR CONDITIONER, HORIZONTAL COMPACT
18,000 BTU/HR
208-VOLT, 3-PHASE, 50/60 HERTZ
NSN 4120-01-136-9836**

Current as of 17 October 1989

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find mistakes, or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. You may also submit your recommended changes by E-mail directly to <mpmt%avma28@st-louis-emh7.army.mil>. A reply will be furnished directly to you. Instructions for sending an electronic 2028 may be found at the back of this manual immediately preceding the hard copy 2028.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		PAGE	ILLUS/ FIGURE
Section I.	Introduction	1	
Section II.	Repair Parts List		
Group 01.	Final Assembly		
	Data Plates and Installation Hardware.....	1-1	1
Group 02.	Housing Covers, Panels, Grilles, Screens, and Information Plates		
	Canvas Cover.....	2-1	2
	Top Covers and Grilles.....	3-1	3
	Condenser Guard and Louvers	4-1	4
Group 03.	Air Circulating and Condensate Drain System		
	Air Filter and Mist Eliminator	5-1	5
	Fresh Air Inlet Vent Control and Damper	6-1	6
	Condensate Drain Tubing.....	7-1	7
Group 04.	Electrical		
	Control Module Assembly.....	8-1	8
	Junction Box.....	9-1	9
	Junction Box Wiring Harness.....	10-1	10
	Transformer and Rectifier, Wiring Harness	11-1	11
	Wiring Harness and Terminal Boards	12-1	12

*This manual supersedes TM 5-4120-379-24P, dated 31 August 1984.

		PAGE	ILLUS/ FIGURE
Group 05.	Evaporator Fan, Motor and Heater		
	Evaporator Fans	13-1	13
	Evaporator Fan Motor	14-1	14
	Heater Elements and Thermostat Switch.....	15-1	15
Group 06.	Condenser Fan, Motor and Louver Actuating Cylinder		
	Condenser Fan Motor	16-1	16
	Actuating Cylinder and Linkage.....	17-1	17
	Condenser Fan.....	18-1	18
Group 07.	Refrigerator System		
	Evaporator Coil and Tubing	19-1	19
	Pressure Cut-Out Switches, Charging Valves, and Pressure Relief Valve	20-1	20
	Condenser Coil, Solenoid Valves, and Receiver.....	21-1	21
	Compressor Assembly	22-1	22
Group 08.	Housing		
	Housing.....	23-1	23
Group 09.	Bulk Materials		
	Bulk	Bulk-1	Bulk
Section III.	Special Tools List (Not Applicable)		
Section IV.	Cross Reference Indexes	I-1	
	National Stock Number Index	I-1	
	Part Number Index	I-6	
	Figure and Item Number Index.....	I-21	

ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST

AIR CONDITIONER, HORIZONTAL COMPACT
18,000 BTU/HR 208-VOLT, 3-PHASE, 50/60 HERTZ
NSN 4120-01-136-9836

SECTION I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorized spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of organizational, direct support, and general support maintenance of the Air Conditioner. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. This list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).

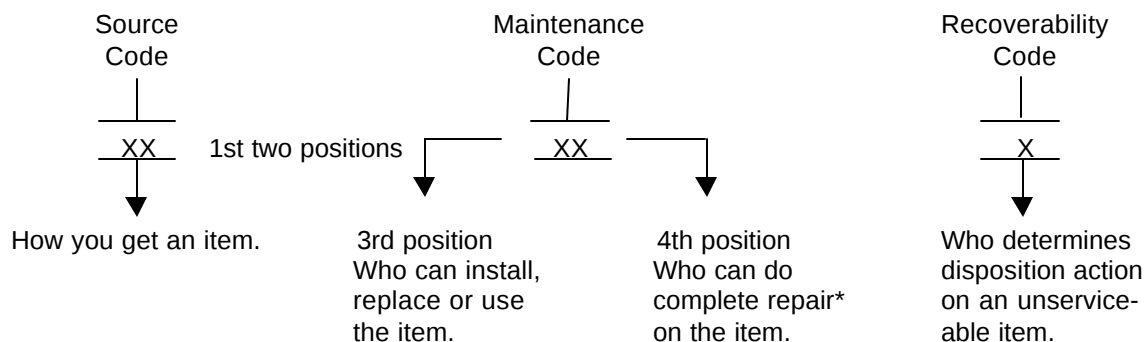
b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-references Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all parts numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item number in alphanumeric sequence and cross references NSN, FCSM and part number.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III)

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

**NOTE**

***Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.**

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

Code

Code	Explanation
PA PB PC** PD PE PF PG	Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3d position of the SMR code.
KD KF KB	

****NOTE: Items coded PC are subject to deterioration.**

Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3d position of the SMR code. The complete kit must be requisitioned and applied.

MO - (Made at org. AVUM Level)
MF - (Made at DS/ AVUM Level)
MH - (Made at GS Level)
ML - Made at Specialized Repair Activity (SRA))
MD - (Made at Depot)

Explanation

Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. If the item is authorized to you by the 3d position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.