
TECHNICAL MANUAL

**ORGANIZATIONAL, DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LIST**

FOR

**AIR CONDITIONER, HORIZONTAL COMPACT
9,000 BTU/HR**

208-VOLT, 3 PHASE, 50/60 HERTZ

MODEL F9000H-3S

NSN4120-01-164-7420

HEADQUARTERS, DEPARTMENT OF THE ARMY

5 AUGUST 1985

TECHNICAL MANUAL

No. 5-4120-383-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C. 5 August 1985**Organizational, Direct Support and
General Support Maintenance
Repair Parts and Special Tools List
FOR****AIR CONDITIONER, HORIZONTAL COMPACT 9,000 BTU/HR
208-VOLT, 3 PHASE, 50/60 HERTZ
MODEL F9000H-3S, NSN 4120-01-164-7420****Current as of 26 April 1985****REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS**

You can help improve this manual. If you find any mistake or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028, (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Troop Support Command, ATTN: AMSTR-MPS, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. A reply will be furnished directly to you.

TABLE OF CONTENTS

	Page	Illus Figure
Section I. INTRODUCTION	1-1	
Section II. REPAIR PARTS LIST	1-1	
Group 01 Housing Covers, Panels, Grilles, Screens, and Information Plates. . . .	1-1	
Fabric Cover.	1-1	1
Top, Front, and Side Covers, Louvers, and Instruction Plates. . . .	2-1	2
Rear Guards and Louvers.	3-1	3
Group 02 Air Circulating and Condensate Drain System.	4-1	
Air Filter and Mist Eliminator.	4-1	4
Damper Controls, Linkages and Fittings.	5-1	5
Condensate Drain Tubes	6-1	6
Group 03 Electrical.	7-1	
Control Module	7-1	7
Junction Box	8-1	8
Wiring Harnesses and Terminal Boards.	9-1	9
Transformer and Rectifier Assembly.	10-1	10
Group 04 Evaporator Fan, Motor and Heater.	11-1	
Evaporator Fan Assembly.	11-1	11
Motor Assembly, Evaporator Fan(IMC)	12-1	12
Motor Assembly, Evaporator Fan(Welco)	13-1	13
Heater Elements and Thermostat	14-1	14

TABLE OF CONTENTS – Continued

	Page	Illus Figure
Group 05	Condenser Fan and Motor	15-1
	Condenser Fan and Housing Assembly	15-1 15
	Motor Assembly, Condenser Fan	16-1 16
Group 06	Refrigeration System	17-1
	Evaporator Coil and Piping	17-1 17
	Pressure Switches, Charging Valves, and Relief Valve	18-1 18
	Condenser Coil and Piping	19-1 19
	Compresor.	20-1 20
Group 07	Housing	21-1
	Housing	21-1 21
Group 08	Accessory/Loose Items	22-1
	Accessory/Loose Items	22-1 22
Group 09	Bulk Material	Bulk-1
Section III.	SPECIAL TOOLS LIST (NOTAPPLICABLE)	
Section IV.	NATIONAL STOCK NUMBERANDPART NUMBER INDEX	I-1

ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

Section I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts: special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of organizational, direct support, and general support maintenance of the Air Conditioner. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections.

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figures(s).


b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

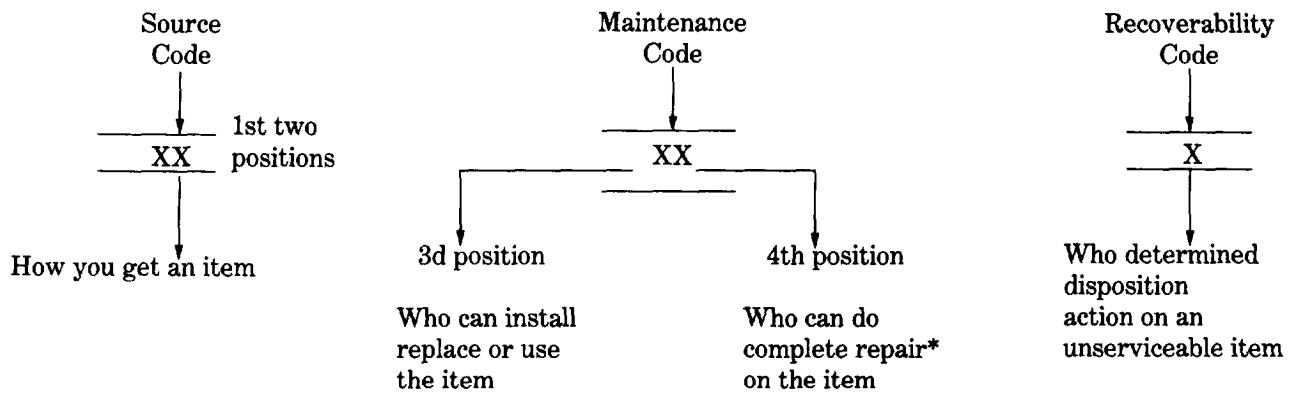

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) **Source Code.** The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

Code	Explanation
PA PB PC** PD PE PF PG	Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3d position of the SMR code. **NOTE: Items coded PC are subject to deterioration.
KD KF KB	Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3d position of the SMR code. The complete kit must be requisitioned and applied.
MO—(Made at org/ AVUM Level) MF—(Made at DS/ AVUM Level) MH—(Made at GS Level) ML—(Made at Spe- cialized Repair Act (SRA)) MD—(Made at Depot)	Explanation Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in the RPSTL. If the item is authorized to you by the 3d position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.
AO—(Assembled by org/AVUM Level) AF—(Assembled by DS/AVIM Level) AH—(Assembled by GS Category) AL—(Assembled by SRA) AD—(Assembled by Depot)	Explanation Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the level of maintenance indicated by the source code. If the 3d position code of the SMR code authorizes you to replace the item, but the source code indicates the items are assembled at a higher level, order the item from the higher level of maintenance.