


TECHNICAL MANUAL

**OPERATOR'S, ORGANIZATIONAL,
DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE MANUAL**

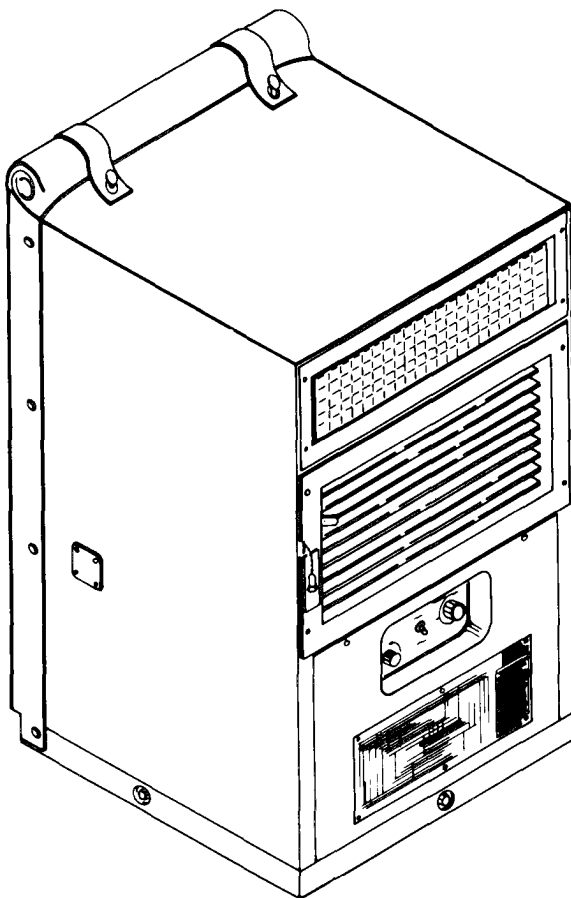

**AIR CONDITIONER, VERTICAL, COMPACT,
6,000 BTU/HR
115 VOLT, SINGLE PHASE, 50/60 HERTZ**

NSN 41 20-01-203-8656

INTRODUCTION	1
OPERATING INSTRUCTIONS	2
OPERATOR'S MAINTENANCE INSTRUCTIONS	3
ORGANIZATIONAL MAINTENANCE INSTRUCTIONS	4
DIRECT SUPPORT MAINTENANCE INSTRUCTIONS	5
GENERAL SUPPORT MAINTENANCE INSTRUCTIONS	6
REFERENCES	A
MAINTENANCE ALLOCATION CHART	B
COMPONENTS OF END ITEM AND BASIC ISSUE ITEMS LIST	C
ADDITIONAL AUTHORIZATION LIST	D
EXPENDABLE SUPPLIES AND MATERIALS LIST	E
INDEX	I

TECHNICAL MANUAL
TM5-4120-387-14

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C. 21 November 1986

OPERATOR'S, ORGANIZATIONAL,
DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE MANUAL
FOR
AIR CONDITIONER, VERTICAL, COMPACT,
6,000 BTU/HR
115 VOLT, SINGLE PHASE, 50/60 HERTZ

NSN 4120-01-203-8656

REPORTING OF ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual, If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and blank forms) or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Troop Support Command, Attention: AMSTR-MCTS, 4300 Goodfellow Boulevard, St. Louis, Missouri 63120-1798. A reply will be furnished to you.

TABLE OF CONTENTS

	Page
CHAPTER 1. INTRODUCTION	1-1
Section I General Information	1-1
Section II Equipment Description	1-3
Section III Technical Principles of Operation	1-7
CHAPTER 2. OPERATING INSTRUCTIONS	2-1
Section I Description and Use of Operator's Controls and Indicators . .	2-1
Section II Operator Preventive Maintenance Checks and Services (PMCS) . .	2-5
Section III Operation Under Usual Conditions	2-15
Section IV Operation Under Unusual Conditions	2-33
CHAPTER 3. OPERATOR'S MAINTENANCE INSTRUCTIONS	3-1
Section I Lubrication Instructions	3-1
Section II Troubleshooting Procedures	3-2

TABLE OF CONTENTS (Cont.)

	Page
CHAPTER 4. ORGANIZATIONAL MAINTENANCE INSTRUCTIONS	4-1
Section I Repair Parts, Special Tools, TMDE, and Support Equipment . . .	4-1
Section II Service Upon Receipt of Equipment	4-2
Section III Preventive Maintenance Checks and Services (PMCS)	4-14
Section IV Troubleshooting	4-31
Section V Maintenance Procedures	4-50
Section VI Preparation for Storage or Shipment	4-152
CHAPTER 5. DIRECT SUPPORT MAINTENANCE INSTRUCTIONS	5-1
Section I General Information	5-1
Section II Maintenance Procedures	5-2
CHAPTER 6. GENERAL SUPPORT MAINTENANCE INSTRUCTIONS	6-1
Section I General Information	6-1
Section II Maintenance Procedures	6-2
APPENDIX A. REFERENCES	A-1
APPENDIX B. MAINTENANCE ALLOCATION CHART	B-1
APPENDIX C. COMPONENTS OF END ITEM AND BASIC ISSUE ITEMS LISTS	C-1
APPENDIX D. ADDITIONAL AUTHORIZATION LIST	D-1
APPENDIX E. EXPENDABLE SUPPLIES AND MATERIALS LIST	E-1
ALPHABETICAL INDEX	I-1

LIST OF FIGURES

	Figure Number	Page
Air Conditioner	1-1	1-0
Location of Major Components	1-2	1-4
Refrigeration Schematic	1-3	1-8
Operator's Controls Front	2-1	2-2
Operator's Control Rear	2-2	2-3
Fabric Cover	2-3	2-16
Air Openings and Drains	2-4	2-18
VENTILATE Control Setting.	2-5	2-20
Fresh Air Damper (Door) Adjustment	2-6	2-20
Louver Adjustment	2-7	2-21
LO HEAT Control Setting.	2-8	2-22
Fresh Air Damper (Door) Adjustment	2-9	2-23
Louver Adjustment	2-10	2-23
HI HEAT Control Setting.	2-11	2-24
Fresh Air Damper (Door) Adjustment	2-12	2-25
Louver Adjustment	2-13	2-25
Fabric Cover	2-14	2-26
Fabric Cover	2-15	2-27
COOL Control Setting	2-16	2-27
Fresh Air Damper (Door) Adjustment	2-17	2-28
Louver Adjustment	2-18	2-29
OFF Setting	2-19	2-29
Information Plates Front.	2-20	2-31
Information Plates Rear.	2-21	2-32
CBR Filter Location	2-22	2-35
Unpacking	4-1	4-3
Installation Dimensions	4-2	4-5
Alternate Input Power Locations	4-3	4-8
Cover Plate Removal/Installation	4-4	4-9
Receptacle	4-5	4-10
Fabric Cover Removal	4-6	4-12
Wiring Diagram (Sheet 1 of 2)	4-7	4-15
Wiring Diagram (Sheet 2 of 2)	4-7	4-16
Electrical Schematic	4-8	4-17
Fabric Cover	4-9	4-51
CBR Duct Cover	4-10	4-53
Access (Charging Valves) Cover	4-11	4-54
Connector Cover Plates	4-12	4-55
Access Plate	4-13	4-56
Discharge (Outlet) Grille Assembly	4-14	4-58
Intake Grille Assembly	4-15	4-59
Condenser Air Discharge Guard	4-16	4-61
Condenser Coil Guard	4-17	4-62
Fresh Air (Inlet) Screen.	4-18	4-63
Top Panel	4-19	4-64
Lower Panel	4-20	4-65
Conditioned Air Filter.	4-21	4-66

LIST OF FIGURES (Cont.)

	Figure Number	Page
Mist Eliminator	4-22	4-68
Lower Panel	4-23	4-71
Junction Box Removal/Installation	4-24	4-72
Reset Control	4-25	4-73
Transformer (T)	4-26	4-74
Capacitor	4-27	4-76
Circuit Breaker (CB)	4-28	4-79
Fuses (F1 and F2)	4-29	4-80
Rectifier (CR)	4-30	4-83
Time Delay Relay (K6)	4-31	4-85
Time Delay Relay (K9)	4-32	4-87
Compressor Relay (K1)	4-33	4-90
Heater Relay (K2)	4-34	4-92
Junction Box Wiring Harnesses	4-35	4-93
Terminal Boards (TB1 and TB2)	4-36	4-95
Junction Box Housing and Cover	4-37	4-96
Circuit Breaker External Reset	4-38	4-97
Wiring Harnesses	4-39	4-99
Control Panel	4-40	4-105
Wiring Harness, Control Panel	4-41	4-107
Temperature Control Thermostat (S1)	4-42	4-109
Node Selector (Rotary) Switch (S)	4-43	4-112
Switch Position and Terminal Identification	4-44	4-113
Two-Speed Fan (Toggle) Switch	4-45	4-115
Control Panel Housing	4-46	4-117
Compressor Motor Start Capacitor	4-47	4-119
Fan Motor Capacitor	4-48	4-122
Compressor Motor Run Capacitor	4-49	4-125
Armature Relay (KI0)	4-50	4-127
Fan Relay (K7)	4-51	4-129
Thermostat Test Setup	4-52	4-131
Ambient Air Thermostat (S2)	4-53	4-132
Heater Cutout (Thermostat) Switch (S3)	4-54	4-134
Electric Heater (Elements) (HR1 thru HR6)	4-55	4-136
Heater Support	4-56	4-137
Evaporator Fan	4-57	4-139
Condenser Fan	4-58	4-141
Evaporator and Condenser Fan Motor (B2)	4-59	4-143
Evaporator Coil	4-60	4-146
Condenser Coil	4-61	4-147
Condensate Traps	4-62	4-149
Evaporator and Condenser Fan Motor	5-1	5-4
Access (Charging Valves) Cover	5-2	5-7
Discharging Refrigerant	5-3	5-8
Nitrogen Purging Connection	5-4	5-10
Evacuation of Refrigeration System	5-5	5-15
Refrigerant Charging	5-6	5-17

LIST OF FIGURES (Cont.)

	Figure Number	Page
Charging Valves Caps and Cover	5-7	5-20
Access (Charging Valves) Cover	5-8	5-21
Pressure Test Connection	5-9	5-21
Desiccant Refrigerant Dehydrator (Filter Drier)	5-10	5-27
Low Pressure Cut-Out Switch (S6)	5-11	5-29
High Pressure Cut-Out Switch (S5)	5-12	5-31
Fan Speed Pressure Control Switch(S8)	5-13	5-34
Charging Valves	5-14	5-37
Solenoid Valve Coil Replacement	5-15	5-40
Solenoid Valves (L1 and L2)	5-16	5-42
Liquid Quench Expansion Valve	5-17	5-44
Compressor Schematic	5-18	5-47
Compressor Replaceable Items	5-19	5-49
Compressor (81)	5-20	5-52
Liquid Sight Indicator (Sight Glass)	5-21	5-56
Liquid Quench Expansion Valve	5-22	5-58
Evaporator Coil	5-23	5-63
Pressure Regulating Valve	5-24	5-66
Receiver	5-25	5-68
Fluid Pressure Relief Valve	5-26	5-70
Condenser Coil	5-27	5-71
Fresh Air Damper	5-28	5-75

LIST OF TABLES

	Page
Table 2-1. Operator Preventive Maintenance Checks and Services	2-6
2-2. Operator Control Settings	2-19
3-1. Troubleshooting	3-2
4-1. Organizational Preventive Maintenance Checks and Services (PMCS)	4-18
4-2. Troubleshooting	4-32
4-3. Wire List	4-101
5-1. Pressure-Temperature Relationship of Saturated Refrigerant-22	5-25
5-2. Normal Operating Pressures (in full cooling DECREASE mode)	5-26
5-3. Normal Operating Pressures (in By-Pass Cycle)	5-26

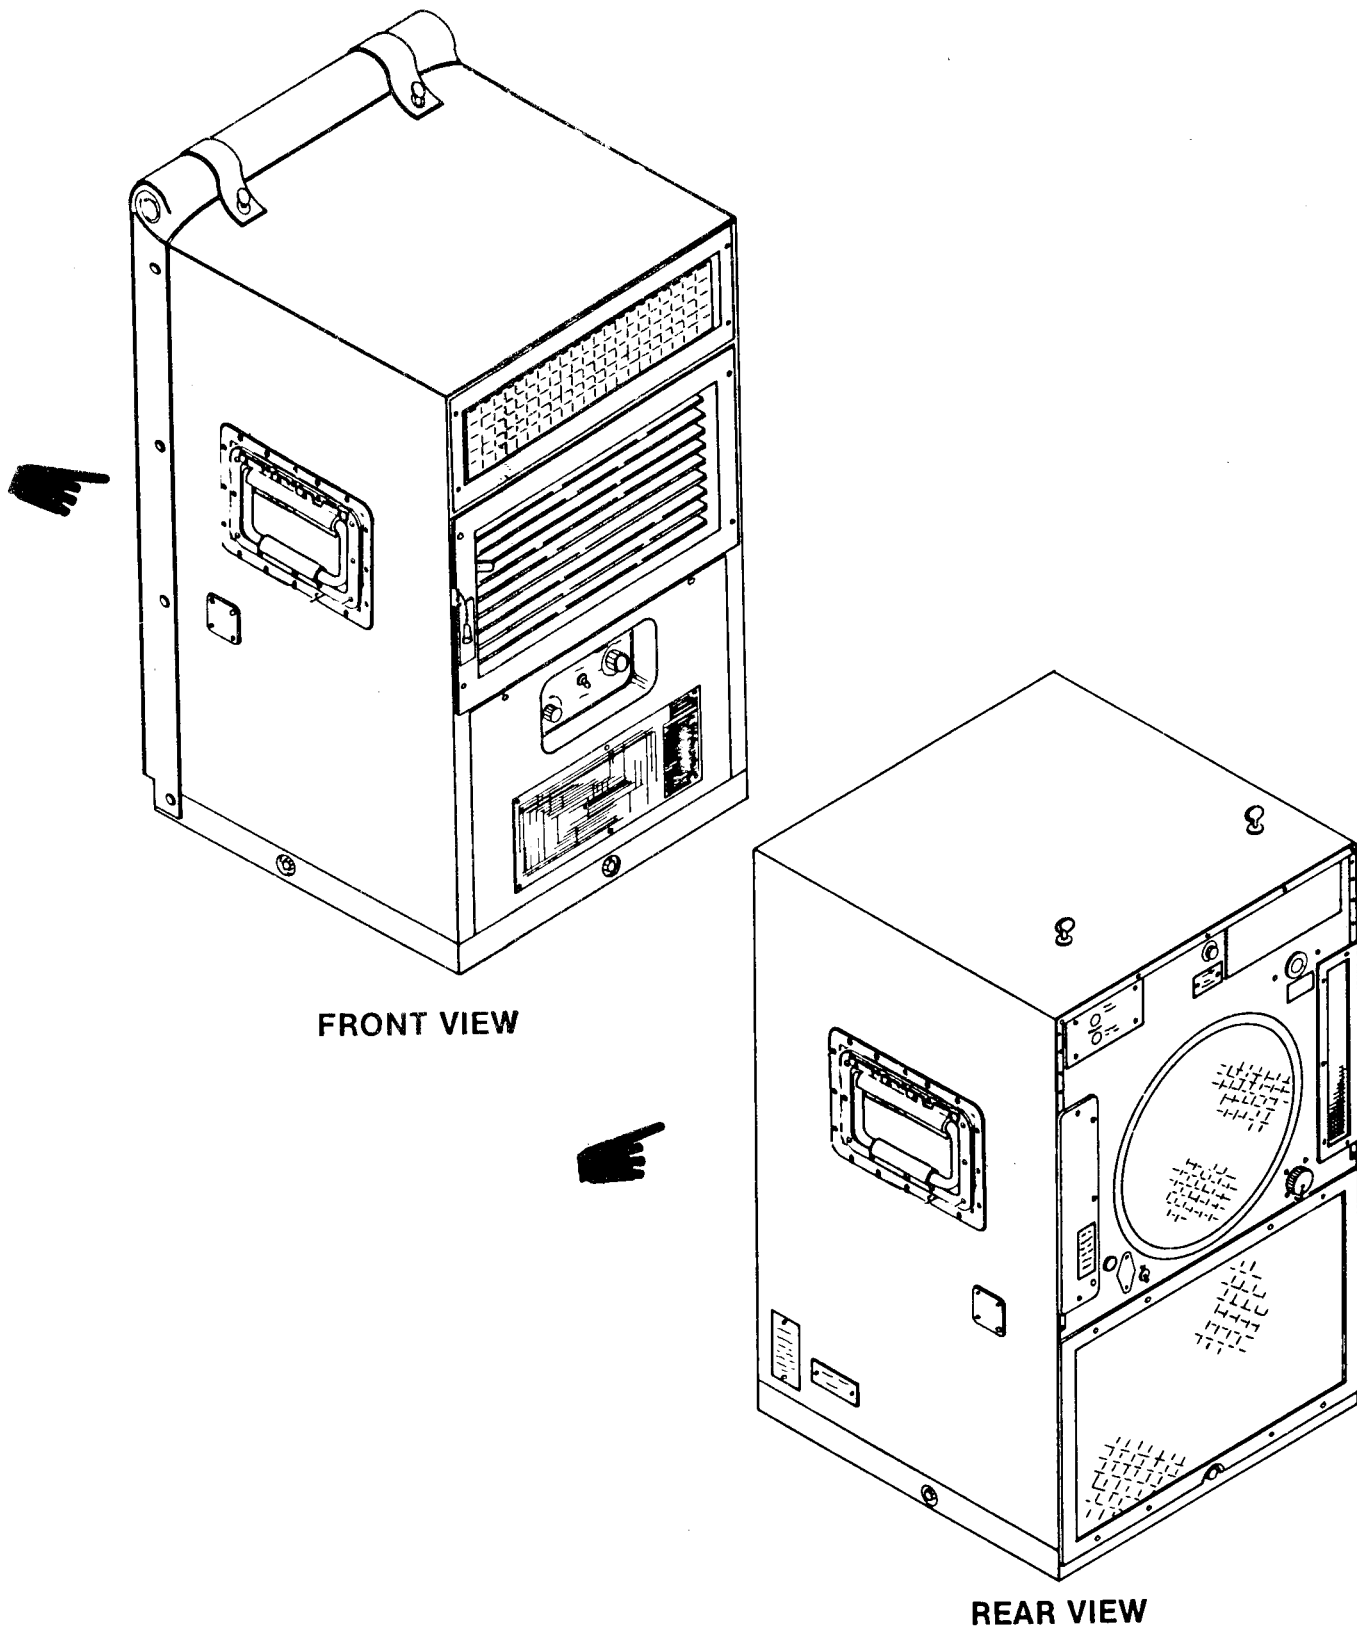


Figure 1-1. Air Conditioner