

***TM 9-4120-360-24P**

TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST**

**AIR CONDITIONER, VERTICAL, COMPACT,
TYPE 1, VERTICAL SIZE C, 18,000 BTU/HR.,
208 VOLT, 3 PHASE,
50/60 HERTZ, KECO MODEL F18T-2
NSN 4120-00-168-1781**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

* This manual supersedes TM 5-4120-360-24P, dated 28 October 1979.

**HEADQUARTERS, DEPARTMENT OF THE ARMY
31 AUGUST 1993**

TECHNICAL MANUAL

NO. 9-4120-360-24P

HEADQUARTERS
DEPARTMENTS OF THE ARMY
WASHINGTON D. C., 31 August 1993

TECHNICAL MANUAL

Unit, Direct Support and General Support
Maintenance Repair Parts and Special Tools List

Air Conditioner, Vertical, Compact,
Type 1, Vertical Size C, 18,000 BTU/HR.,
208 Volt, 3 Phase,
50/60 Hertz, Keco Model F18T-2
NSN 4120-00-168-1781

Current as of 23 April 1993

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. A reply will be furnished directly to you.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

	Page	Illus/ Figure
section I. INTRODUCTION	1	
section II. REPAIR PARTS LIST		
Group 01 Casing and Related Parts		
Connector, Cover, and Instruction Plates	1-1	1
Casing, Panels, Grilles, Filter and Drain Tubes	2-1	2
Group 02 Control Panel and Junction Box		
Junction Box Assembly	3-1	3
Control Panel Assembly	4-1	4
RFI Filter Assembly	5-1	5
Group 03 Compressor Assembly		
Compressor Assembly and Base Hardware	6-1	6
Group 04 Pressure Control Switch		
Hi and Lo Pressure Switch and Enclosure	7-1	7
Group 05 Refrigerant Components		
Condenser Coil, Valve, Tubing, and Dehydrator	8-1	8
Evaporator Coil, Refrigerant Tubing, Fittings and Valves	9-1	9
Solenoid Valve Assembly (J5 and L1)	10-1	10
Solenoid Valve Assembly (J6 and L2)	11-1	11

*This manual supersedes TM 5-4120-360-24P, dated 28 October 1979.

Group 06	Heater Assembly		
	Heater Assembly.	12-1	12
Group 07	Fans and Motor		
	Fan and Baffle Assembly	13-1	13
	Motor Assembly	14-1	14
Group 08	Wiring Harnesses		
	Junction Box Wire Harness Assemblies	15-1	15
	Wire Harness, Control Box	16-1	16
	Heater and RFI Filter Wire Harness Assemblies	17-1	17
	Wiring Harness and Clamp	18-1	18
Group 09	Bulk Materials	BULK-1	
Section III.	SPECIAL TOOLS LIST (Not Applicable)		
Section IV.	CROSS REFERENCE INDEXES		
	National Stock Number Index	I-1	
	Part Number Index	I-4	
	Figure and Item Number Index	I-15	

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

Section I. INTRODUCTION

SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support, and general support maintenance of the Air Conditioner, 18,000 BTU/HR. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:


a. **Section II. Repair Parts List.** A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. This list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Items are shown in the associate illustrations(s)/figure(s).

b. **Section III. Special Tools List.** A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. **Section IV. Cross-References Indexes.** A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross references NSN, CAGEC and part number.

EXPLANATION OF COLUMNS (SECTIONS II AND III).

- a. **ITEM NO. (Column (1)).** Indicates the number used to identify items called out in the illustration.
- b. **SMR Code (Column (2)).** The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

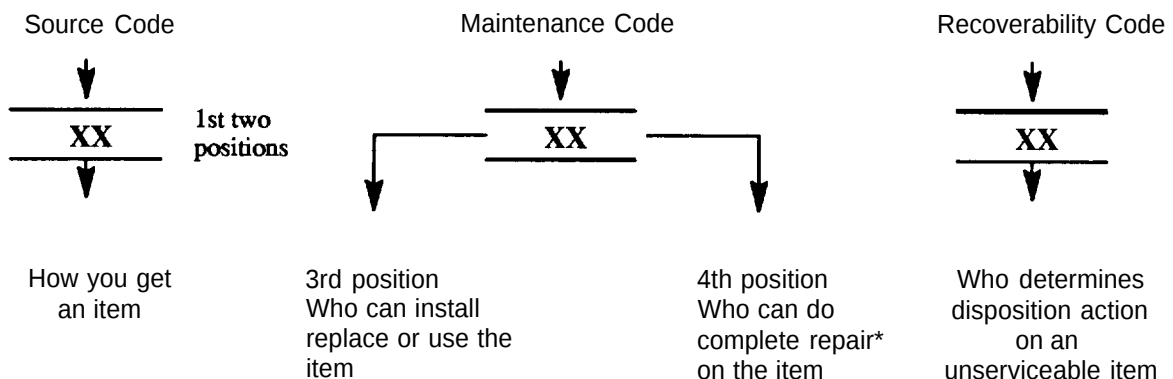

* Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

Source Code	Explanation
-------------	-------------

PA	} Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3rd position of the SMR code.
PB	
PC**	
PD	
PE	
PG	

*NOTE: Items coded PC are subject to deterioration.

KD	} Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3rd position of the SMR code. The complete kit must be requisitioned and applied.
KF	
KB	

MO - (Made at Unit/AVUM Level)	} Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. If the item is authorized to you by the 3rd position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.
MF - (Made at DS/AVUM Level)	
MH - (Made at GS Level)	
ML - (Made at Specialized Repair Activity (SRA))	
MD - (Made at Depot)	

AO - (Assembled by Unit/AVUM Level)	} Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the level of maintenance indicated by the source code. If the 3rd position code of the SMR code authorizes you to replace the item, but the source code indicates the items are assembled at a higher level, order the item from the higher level of maintenance.
AF - (Assembled by DS/AVUM Level)	
AH - (Assembled by GS Category)	
AL - (Assembled by SRA)	
AD - (Assembled by Depot)	

XA - Do not requisition "XA"-coded item. Order its next higher assembly. (Refer to the NOTE below.)

XB - If an "XB" item is not available from salvage, order it using the CAGEC and part number given.

XC - Installation drawing, diagram, instruction sheet, field service drawing, that is identified manufacturer's part number.

XD - Item is not stocked. Order an "XD"-coded item through normal supply channels using the CAGEC and part number given, if no NSN is available.