

TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
FOR**

**AIR CONDITIONER, VERTICAL COMPACT,
36,000 BTU/HR COOLING
28,600 BTU/HR HEATING**

**208 VOLT, 3 PHASE, 400 HERTZ
KECO MODEL F36T4-2S, NSN 4120-01-110-2034**

**208 VOLT, 3 PHASE, 400 HERTZ
KECO MODEL F36T4-2SA, NSN 4120-01-222-9310**

**208 VOLT, 3 PHASE, 50/60 HERTZ
KECO MODEL F36T-2S, NSN 4120-01-222-6438**

**208 VOLT, 3 PHASE, 50/60 HERTZ
KECO MODEL F36T-2SA, NSN 4120-01-332-7640**

**208 VOLT, 3 PHASE, 400 HERTZ
KECO MODEL F36T-2SB, NSN 4120-01-347-6849**

DISTRIBUTION STATEMENT A: Approved for public release; Distribution is unlimited.

* This manual supersedes TM 5-4120-370-24P/TO 35E9-229-4, dated 3 February 1984.

**HEADQUARTERS, DEPARTMENTS OF THE ARMY AND AIR FORCE
26 FEBRUARY 1993**

TECHNICAL MANUAL

NO. 9-4120-370-24P

HEADQUARTERS
DEPARTMENTS OF THE ARMY AND AIR FORCE
WASHINGTON D. C., 26 February 1993

Unit, Direct Support, and
General Support Maintenance
Repair Parts and Special Tools List

AIR CONDITIONER, VERTICAL, COMPACT

36,000 BTU/HR COOLING

28,600 BTU/HR HEATING

208 VOLT, 3 PHASE, 400 HERTZ

KECO MODEL F36T4-2S, NSN 4120-01-110-2034

208 VOLT, 3 PHASE, 400 HERTZ

KECO MODEL F36T4-2SA, NSN 4120-01-222-9310

208 VOLT, 3 PHASE, 50/60 HERTZ

KECO MODEL F36T-2S, NSN 4120-01-222-6438

208 VOLT, 3 PHASE, 50/60 HERTZ

KECO MODEL F36T-2SA, NSN 4120-01-332-7640

208 VOLT, 3 PHASE, 400 HERTZ

KECO MODEL F36T4-2SB, NSN 4120-01-6849

Current as of 22 December 1992

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MTS, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. A reply will be furnished directly to you.

Air Force: Completed AFTO Form 22 (Technical Order Publication Improvement Report and Reply) should be forwarded to: HQ, SA-ALC/MMEDT, Kelly AFB, TX 78241.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

	Page	Illustration Figure
SECTION I		
INTRODUCTION	1-1	
SECTION II		
REPAIR PARTS LIST	1-1	

* This manual supersedes TM 5-4120-370-24P/TO 35E9-229-4, dated 3 February 1984.


TABLE OF CONTENTS (Con't)

		Page	Illustration Figure
Group 01	COVERS, PANELS, GRILLES, SCREENS, AND INFORMATION PLATES	1-1	
	Right Side and Rear Outside Panels	1-1	1
	Top, Front, and Left Side Outside Panels	2-1	2
	Condenser Discharge Air Deflector Door	3-1	3
Group 02	AIR CIRCULATING AND CONDENSATE DRAIN SYSTEMS.	4-1	
	Filters, Mist Eliminator, and Condensate Trap	4-1	4
	Fresh Air Damper	5-1	5
Group 03	ELECTRICAL	6-1	
	Control Panel Assembly	6-1	6
	Block-Off Assembly	7-1	7
	Wiring Harnesses	8-1	8
	Junction Box	9-1	9
	Junction Box Cover and Wiring Harness.	10-1	10
	Junction Box Electrical Leads	11-1	11
	Junction Box RFI Filter	12-1	12
	Junction Box Internal Parts	13-1	13
Group 04	EVAPORATOR FANS, MOTORS, AND HEATERS.	14-1	
	Right Evaporator Fan and Motor	14-1	14
	Motor Assembly, Right Evaporator Fan.	15-1	15
	Left Evaporator Fan and Motor	16-1	16
	Motor Assembly, Left Evaporator Fan	17-1	17
	Heaters and Related Parts	16-1	18
Group 05	CONDENSER FANS AND MOTOR	19-1	
	Condenser Fans and Motors	19-1	19
	Motor Assembly, Condenser Fan	20-1	20
Group 06	REFRIGERATION SYSTEM	21-1	
	Actuating Cylinders (Models F36T-2S, F36T4-2S and F36T4-2SA).	21-1	21
	Actuating Cylinders (Models F36T-2SA and F36T4-2SB)	22-1	22
	Safety Control Box Assembly	23-1	23
	Compressor Piping	24-1	24
	Compressor (Carrier)	25-1	25
	Compressor (Keco)	26-1	26
	Evaporator Coil and Piping	27-1	27
	Condenser Coil and Piping	28-1	28
Group 07	CASING AND BASE	29-1	
	Insulation	29-1	29
	Casing and Base	30-1	30
Group 08	SOUND Attenuator	31-1	
	Sound Attenuator	31-1	31
Group 09	BULK MATERIALS	Bulk-1	
	Bulk	Bulk-1	

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

Section I. INTRODUCTION

1. **SCOPE.** This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support, and general support maintenance of the Air Conditioner, Vertical, Compact, 36,000 BTU/HR Cooling, 28,600 BTU/HR Heating. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.
2. **GENERAL.** In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:
 - a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. This list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items are shown in the associated illustration(s)/figure(s).
 - b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.
 - c. Section IV. Cross-references Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item number in alphanumeric sequence and cross references NSN, CAGEC and part number.
3. **EXPLANATION OF COLUMNS (SECTION II AND III).**
 - a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.
 - b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

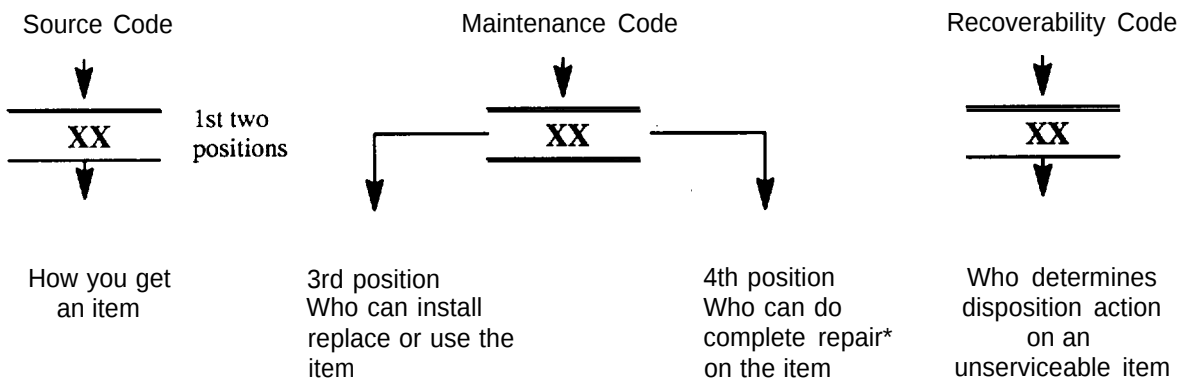

* Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

Code	Explanation
PA PB PC**	Stocked items; use the applicable NSN to requested/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3rd position of the SMR code. NOTE: Items coded PC are subject to deterioration.
PD	
PE	
PF	
PG	
KD KF KB	
MO - (Made at org/AVUM Level) MP - (Made at DS/AVUM Level) MH - (Made at GS Level) ML - (Made at Specialized	Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. If the item is authorized to you by the 3rd position code of the SMR
Repair Activity (SRA)) MD - (Made at Depot)	
AO - (Assembled by org/AVUM Level) AF - (Assembled by DS/AVIM Level) AH - (Assembled by GS Category) AL - (Assembled by SRA) AD - (Assembled by Depot)	Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the level of maintenance indicated by the source code. If the 3rd position code of the SMR code authorizes you to replace the item, but the source code indicates the items are assembled at a higher level, order the item from the higher level of maintenance.
XA -	Do not requisition "XA"-coded item. Order its next higher assembly. (Also, refer to the NOTE below.)
XB -	If an "X6" item is not available from salvage, order it using the CAGEC and part number given.
XC -	Installation drawing, diagram, instruction sheet, field service drawing, that is identified by Reciprocating Compressor manufacturer's part number.
XD -	Item is not stocked. Order an "XD"-coded item through normal supply channels using the CAGEC and part number given if no NSN is available.

NOTE

Cannibalization or controlled exchange, when authorized, maybe used as a source of supply for items with the above source codes, except for those source coded "XA" or those aircraft support items restricted by requirements of AR 750-1.

(2) Maintenance Code. Maintenance codes tells you the level(s) of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the SMR code as follows:

(a) The maintenance code entered in the third position tells you the lowest maintenance level authorized to remove, replace, and use an item. The maintenance code entered in the third position will indicate authorization to one of the following levels of maintenance.

Code	Application/Explanation
C -	Crew or operator maintenance done with unit or aviation unit maintenance.
O -	Unit or aviation unit category can remove, replace, and use the item.
F -	Direct support or aviation intermediate level can remove, replace, and use the item.
H -	General support level can remove, replace, and use the item.
L -	Specialized repair activity can remove, replace, and use the item.
D -	Depot level can remove, replace, and use the item.

(b) The maintenance code entered in the fourth position tells whether or not the item is to be repaired and identifies the lowest maintenance level with the capability to do complete repair (i.e., perform all authorized repair functions.) NOTE: Some limited repair may be done on the item at a lower level of maintenance, if authorized by the Maintenance Allocation Chart (MAC) and SMR codes. This position will contain one of the following maintenance codes.

Code	Application/Explanation
O -	Unit or (aviation unit) is the lowest level that can do complete repair of the item.
F -	Direct support or aviation intermediate is the lowest level that can do complete repair of the item.
H -	General Support is the lowest level that can do complete repair of the item.
L -	Specialized repair activity is the lowest level that can do complete repair of the item.
D -	Depot is the lowest level that can do complete repair of the item.
Z -	Nonreparable. No repair is authorized.
B -	No repair is authorized. (No parts or special tools are authorized for the maintenance of a "B"coded item). However, the item may be reconditioned by adjusting, lubricating, etc., at the user level.

(3) Recoverability Code. Recoverability codes are assigned to items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the SMR Code as follows: