

TECHNICAL MANUAL

**ORGANIZATIONAL, DIRECT SUPPORT
AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS)**

FOR

**AIR CONDITIONER, VERTICAL,
COMPACT, 18,000 BTU/HR
208 VOLT, 3 PHASE, 50/60 HERTZ,
KECO MODELS F18T-2S
NSN 4120-01-114-2471
AND F18T-2SA
NSN 4120-01-329-1515,
AND A.R.E. MODEL CVP-20-5/6-08
NSN 4120-01-216-1151**

Approved for public release; distribution is unlimited.

*This manual supersedes TM 5-4120-371-24P, 15 August 1990.

**HEADQUARTERS, DEPARTMENT OF THE ARMY
10 APRIL 1991**

TECHNICAL MANUAL

NO. 9-4120-371-24P

HEADQUARTERS,
DEPARTMENTS OF THE ARMY AND AIR FORCE
WASHINGTON D. C., 10 April 1991

**Organizational, Direct Support, and General Support Maintenance
Repair Parts and Special Tools List
(Including Depot Maintenance Repair Parts and Special Tools)
for
AIR CONDITIONER, VERTICAL COMPACT, 18,000 BTU/HR
208 VOLT, 3 PHASE, 50/60 HERTZ,
KECO MODELS F18T-2S NSN 4120-01-114-2471
AND F18T-2SA NSN 4120-01-329-1515,
AND A.R.E. MODEL CVP-20-5/6-08 NSN 4120-01-216-1151**

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms) or DA Form 2028-2 located in the back of this manual directly to: Commander, U.S. Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Boulevard., St. Louis, MO 63120-1798. A reply will be furnished directly to you.

For Air Force, submit AFTO Form 22 (Technical Order System Publication Improvement Report and Reply) and forward to the address prescribed above for the Army. An information copy of the prepared AFTO Form 22 shall be furnished to SA-ALC/MMEDTA, Kelly AFB, TX 78241-5000.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TABLE OF CONTENTS

	Page	Illus/ Figure
Section I. Introduction	1	
Section II. Repair Parts List		
Group 01 Covers, Panels, Grills, Screens and Information Plates		
Top, Front, and Left Side Panels	1-1	1
Right Side and Rear Outside Panels.. . . .	2-1	2
Rear Panel	3-1	3
Group 02 Filters and Mist Eliminator		
Filters and Mist Eliminator	4-1	4
Group 03 Electrical		
Control Panel Assembly	5-1	5
Block Off Assembly	6-1	6
Wiring Harnesses	7-1	7
Control Assembly, Push-Pull	8-1	8
Junction Box	9-1	9
Wiring Harnesses and Transformer.	10-1	10
Junction Box Internal Parts	11-1	11
Group 04 Heaters, Evaporator Fan, Condenser Fan, and Motor		
Heaters and Related Parts	12-1	12
Evaporator and Condenser Fans and Motor	13-1	13

*This manual supersedes TM 5-4120-371-24P, dated 15 August 1990.

TM 9-4120-371-24P
TO 35E9-242-4

		Page	Illust/ Figure
Group 05	Refrigeration System		
	Pressure Switches	14-1	14
	Solenoid Valves and Compressor Piping	15-1	15
	Compressor	16-1	16
	Evaporator Coil and Piping	17-1	17
	Condenser Coil and Piping	18-1	18
Group 06	Casing and Bottom Panel		
	Miscellaneous Casing and Bottom Panel Items	19-1	19
	Casing	20-1	20
Group 07	Blast Damper		
	Blast Damper	21-1	21
Group 08	Bulk Material	BULK-1	
Section III.	Special Tools List		
Group 09	Special Tools	22-1	22
Section IV.	Cross Reference Indexes	I-1	
	National Stock Number Index	I-1	
	Part Number Index	I-7	
	Figure and Item Number Index	I-25	

UNIT, DIRECT SUPPORT
AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

SECTION I. INTRODUCTION

1. **SCOPE.** This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support, and general support maintenance of the Air Conditioner, Vertical compact. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. **GENERAL.** In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. **Section II. Repair Parts List.** A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).


b. **Section III. Special Tools List.** A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. **Section IV. Cross-references Indexes.** A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item number in alphanumeric sequence and cross references NSN, CAGEC and part number.

3. **EXPLANATION OF COLUMNS (SECTIONS II AND III).**

a. **ITEM NO. (Column (1)).** Indicates the number used to identify items called out in the illustration.

b. **SMR Code (Column (2)).** The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

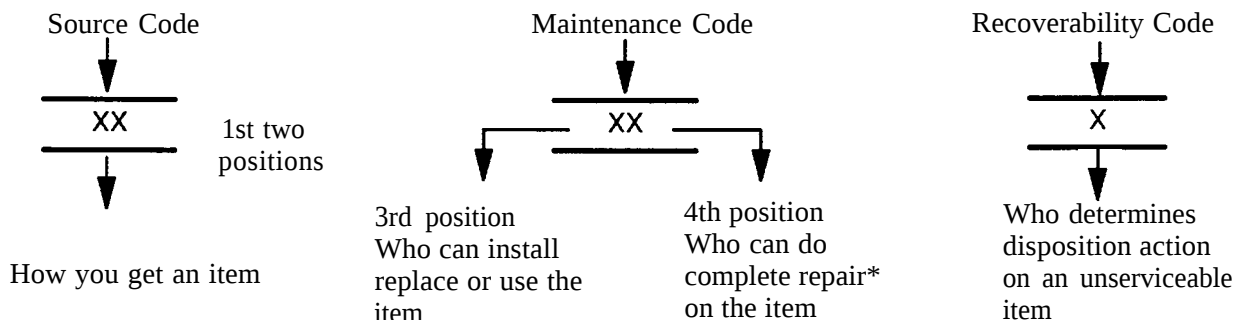

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) **Source Code.** The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

Code	Explanation
PA PB PC** PD PE PF PG	} Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3rd position of the SMR code. } **NOTE: Items coded PC are subject to deterioration.
KD KF KB	} Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3rd position of the SMR code. The complete kit must be requisitioned and applied.
MO - (Made at org AVUM Level) MF - (Made at DS/AVUM Level) MH - (Made at GS Level) ML - (Made at Specialized Repair Activity (SRA)) MD - (Made at Depot)	} Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. If the item is authorized to you by the 3rd position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.
AO - (Assembled by org/AVUM Level) AF - (Assembled by DS/AVIM Level) AH - (Assembled by GS Category) AL - (Assembled by SRA) AD - (Assembled by Depot)	} Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the level of maintenance indicated by the source code. If the 3rd position code of the SMR code authorizes you to replace the item, but the source code indicates the items are assembled at a higher level, order the item from the higher level of maintenance.
XA - Do not requisition "XA" -coded item. Order its next higher assembly. (Also, refer to the NOTE below.) XB - If an "XB" item is not available from salvage, order it using the CAGEC and part number given. XC - Installation drawing, diagram, instruction sheet, field service drawing, that is identified by Reciprocating Compressor manufacturer's part number. XD - Item is not stocked. Order an "XD" -coded item through normal supply channels using the CAGEC and part number given if no NSN is available.	

NOTE

Cannibalization or controlled exchange, when authorized, may be used as a source of supply for items with the above source codes, except for those source