

*** TM 9-4120-378-24P**

TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST**

**AIR CONDITIONER,
HORIZONTAL, COMPACT, 9,000 BTU/HR,
MODEL A9KH-115P, NSN 4120-01-136-2214
MODEL F90000H-1S, NSN 4120-01-250-3719**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

*This manual supercedes TM 5-4120-378-24P, dated 18 June 1987.

**HEADQUARTERS, DEPARTMENT OF THE ARMY
30 DECEMBER 1993**

TECHNICAL MANUAL

NO. 9-4120-378-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 30 December 1993

TECHNICAL MANUAL

Unit, Direct Support and General Support Maintenance
Repair Parts and Special Tools List**AIR CONDITIONER, HORIZONTAL, COMPACT,
9,000 BTU/HR
MODEL A9KH-115P, NSN 412041-136-2214
MODEL F9000H-1S, NSN 4120-01-250-3719**

Current as of 12 December 1993

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes, or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. You may also submit your recommended changes by E-mail directly to <mpmtYoavma28@st-louis-emh7.army.mil>. A reply will be furnished directly to you. Instructions for sending an electronic 2028 may be found at the back of this manual immediately preceding the hard copy 2028.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TABLE OF CONTENTS

		PAGE	ILLUS/ FIGURE
Section I.	INTRODUCTION.....	1	
Section II.	REPAIR PARTS LIST		
Group 01	Housing Covers, Panels, Grilles, Screens, and Information Plates		
	Cover, Canvas.....	1-1	1
	Panels	2-1	2
	Screens and Guards	3-1	3
	Louvers.....	4-1	4
	Information Plates	5-1	5
Group 02	Air Circulating and Condensate Drain System		
	Air Filter and Mist Eliminator	6-1	6
	Condenser Air Discharge Louver and Linkage	7-1	7
	Fresh Air Damper and Activator	8-1	8
	Condensate Drain Tubes	9-1	9
Group 03	Electrical System		
	Control Module	10-1	10
	Control Module Wiring Harness	11-1	11
	Junction Box (Model A9KH-115).....	12-1	12
	Junction Box (Model F9000H-1S).....	13-1	13
	Junction Box Wiring Harness (Model A9KH-115P).....	14-1	14
	Compressor Start Relay	15-1	15

* This manual supersedes TM 9-4120-378-24P, dated 18 JUNE 1987.

Group 03	Electrical System (Continued)		
	Unit Wiring Harness	16-1	16
	Capacitors	17-1	17
	Rectifier and Transformer Assembly	18-1	18
Group 04	Evaporator Fan, Motor, and Heater		
	Fan and Housing	19-1	19
	Motor (IMC Magnetics)	20-1	20
	Motor (Welco Industries)	21-1	21
	Heater Thermostat	22-1	22
	Heater Elements	23-1	23
Group 05	Condenser Fan and Motor		
	Fan and Housing	24-1	24
	Motor (IMC Magnetics)	25-1	25
	Motor (Welco Industries)	26-1	26
Group 06	Refrigeration System		
	EvaporatorCoil, Expansion Valves, Solenoid Valves,Pressure Regulator and Actuating Cylinder	27-1	27
	Pressure Switches, Service Valves and Pressure Relief Valve	28-1	28
	Condenser Coil, Dehydrator, and Liquid Indicator	29-1	29
	Compressor	30-1	30
	Tubing and Fittings	31-1	31
Group 07	Housing		
	Housing Assembly	32-1	32
Group 08	Accessory/Loose Items		
	Connector and installation Hardware	33-1	33
Group 09	Bulk Material		
	Bulk	BULK-1	
Section III.	SPECIAL TOOLS LIST (Not Applicable)		
Section IV.	CROSS REFERENCE INDEXES		
	National Stock Number Index...	I-1	
	Part Number Index	I-6	
	Figure and item Number index.	I-24	

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

Section I. INTRODUCTION

1. **SCOPE.** This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support and general support maintenance of the Air Conditioner, Horizontal, Compact. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. **GENERAL.** In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. **Section II. Repair Parts List.** A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. This list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Items are shown in the associated illustration(s)/figure(s).


b. **Section III. Special Tools List.** A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. **Section IV. Cross-Reference Index.** A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross references NSN, CAGEC and part number.

3. **EXPLANATION OF COLUMNS (SECTIONS II AND III).**

a. **ITEM NO. (Column (1)).** Indicates the number used to identify items called out in the illustration.

b. **SMR Code (Column(2)).** The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

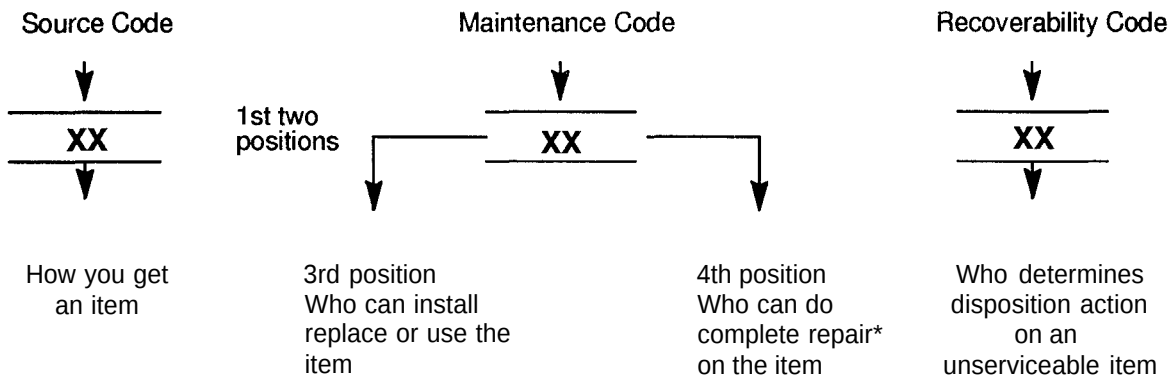

* Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

Source Code	Explanation
PA PB PC**	Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3rd position of the SMR code.
PD PE PF PG	
	**NOTE: Items coded PC are subject to deterioration.
KD KF KB	Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3rd position of the SMR code. The complete kit must be requisitioned and applied.
MO - (Made at Unit/AVUM Level) MF - (Made at DS/AVUM Level) MH - (Made at GS Level) ML - (Made at Specialized Repair Activity (SRA)), MD - (Made at Depot)	Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. If the item is authorized to you by the 3rd position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.
AO - (Assembled by Unit/AVUM Level) AF - (Assembled by DS/AVUM Level) AH - (Assembled by GS Category) AL - (Assembled by SRA) AD - (Assembled by Depot)	Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the level of maintenance indicated by the source code. If the 3rd position code of the SMR code authorizes you to replace the item, but the source code indicates the items are assembled at a higher level, order the item from the higher level of maintenance.
XA -	Do not requisition "XA"-coded item. Order its next higher assembly. (Refer to the NOTE below.)
XB -	If an "XB" item is not available from salvage, order it using the CAGEC and pan number given.
XC -	Installation drawing, diagram, instruction sheet, field service drawing, that is identified manufacturer's part number.
XD -	Item is not stocked. Order an "XD"-coded item through normal supply channels using the CAGEC and part number given, if no NSN is available.