

TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT,
AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
FOR**

**AIR CONDITIONER, VERTICAL, COMPACT
6,000 BTU/HR
115 VOLT, SINGLE-PHASE, 50/60 HERTZ
MODEL JHAA/C6V1
(NSN 4120-01-327-5447)**

Approved for public release; distribution is unlimited

**HEADQUARTERS, DEPARTMENT OF THE ARMY
28 SEPTEMBER 1992**

TECHNICAL MANUAL

NO. 9-4120-403-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON D C., 28 SEPTEMBER 1992

TECHNICAL MANUAL

Unit, Direct Support and General Support
Maintenance Repair Parts and Special Tools List
for

AIR CONDITIONER, VERTICAL, COMPACT,
6,000 BTU/HR 115 VOLT, SINGLE PHASE, 50/60 HERTZ
MODEL JHAAC6V1
(NSN 4120-01-327-5447)

Current as of 14 September 1992

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual If you find any mistakes or If you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located In the back of this manual direct to Commander, US Army Aviation and Troop Command, ATTN- AMSTR-MMTS, 4300 Goodfellow Blvd, St. Louis, MO 63120-1798. A reply will be furnished directly to you.

Approved for public release, distribution Is unlimited

TABLE OF CONTENTS

		Page	Illus/ Figure
Section I.	INTRODUCTION	1	1
Section II.	REPAIR PARTS LIST	1-1	
Group 01	Final Assembly		
	Information Plates	1-1	1
Group 02	Housing Covers, Panels, Grilles, Doors, Screens		
	Housing Covers, Panels, Uncles, Screens	2-1	2
Group 03	Air Circulating and Condensate Drain System		
	Air Filter and Mist Eliminator	3-1	3
	Fresh Air Damper	4-1	4
	Condensate Traps and Drain Hose	5-1	5
Group 04	Electrical		
	Control Panel	6-1	6
	Junction Box Assembly	7-1	7
	Junction Box Harness	8-1	8
	Circuit Breaker Reset	9-1	9
	Wiring Harness and Electronic Components	10-1	10

Group 05	Evaporator-Condenser Fan Motor and Heaters		
	Fans and Housing	11-1	11
	Motor	12-1	12
	Heater Elements and Wiring	13-1	13
Group 06	Refrigeration System		
	Pressure Switches	14-1	14
	Charging Vanes	15-1	15
	Compressor	16-1	16
	Tubing and Fittings	17-1	17
Group 07	Frame Assembly		
	Frame Assembly	18-1	18
Group 08	Bulk Materials ,		
	Bulk	Bulk-1	
Section III.	SPECIAL TOOLS LIST (Not Applicable)		
Section IV.	CROSS REFERENCE INDEXES	I-1	
	National Stock Number Index	I-1	
	Part Number Index	I-5	
	Figure and Item Number Index	I-20	

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

SECTION I. INTRODUCTION

1. **SCOPE.** This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support and general support maintenance of the Air Conditioner. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. **GENERAL.** In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. **Section II. Repair Parts List.** A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. This list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in functional groups in Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown in the associated illustration(s)/figure(s).


b. **Section III. Special Tools List.** A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. **Section IV. Cross-Reference Index.** A list, in National Item Identification Number (NIIN) sequence, of all national stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross references NSN, CAGEC and part number.

3. EXPLANATION OF COLUMNS (Sections II AND III).

a. **ITEM NO. (Column (1)).** Indicates the number used to identify items called out in the illustration.

b. **SMR Code (Column (2)).** The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

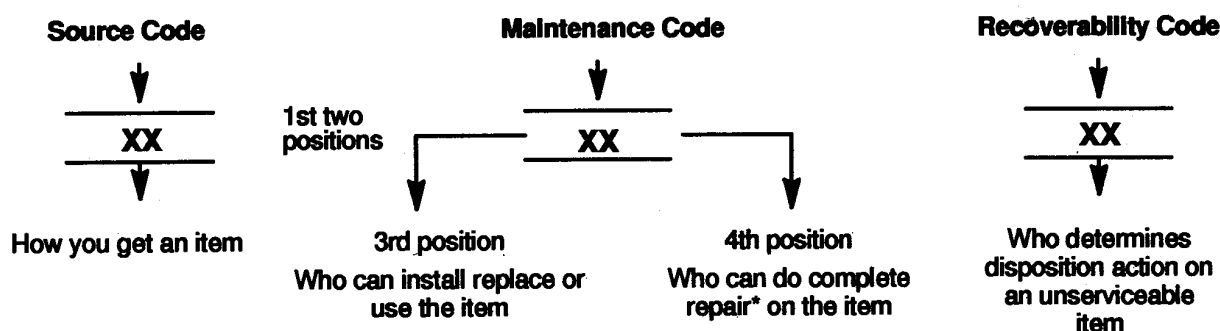

* Complete Rear: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how you get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follow.

Code		Explanation
PA	}	Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3rd position of the SMR code.
PB		
PC**		
PD		
PE		
PF		
PG		**NOTE : Items coded PC are subject to deterioration.
KD	}	Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3rd position of the SMR code. The complete kit must be requisitioned and applied.
KF		
KB		
MO - (Made at org/AVUM level)	}	Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in the RPSTL. If the item is authorized to you by the 3rd position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.
MF - (Made at DS/AVUM level)		
MH - (Made at GS level)		
ML - (Made at Specialized Repair Activity (SRA))		
MD - (Made at Depot)		
AO - (Assembled by org/AVUM Level)	}	Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the level of maintenance indicated by the source code. If the 3rd position code of the SMR code, authorizes you to replace the item, but the source code indicates the items are assembled at a higher level, order the item from the higher level of maintenance.
AF - (Assembled by DS/AVUM Level)		
AH - (Assembled by GS Category)		
AL - (Assembled by SRA)		
AD - (Assembled by Depot)		
XA - Do not requisition an "XA"-coded item. Order its next higher assembly. (Also, refer to the NOTE below.)		
XB - If an "XB" item is not available from salvage, order it using the CAGE Code and part number given.		
XC - Installation drawing, diagram, instruction sheet, field service drawing, that is identified by manufacturer's part number.		
XD - Item is not stocked. Order an "XD"-coded item through normal supply channels using the CAGE Code and part number given, if no NSN is available.		