

**TECHNICAL MANUAL
UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST**

**AIR CONDITIONER, COMPACT, HORIZONTAL,
MULTIPLE POWER INPUT, 36,000 BTU/HR
208 VOLT, 3 PHASE, 50/60/400 HERTZ
MODEL MH-40-MP
NSN 4120-01-330-6543**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

**HEADQUARTERS, DEPARTMENT OF THE ARMY
10 DECEMBER 1995**

TECHNICAL MANUAL
NO. 9-4120-404-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 10 December 1995

UNIT, DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST

AIR CONDITIONER, COMPACT HORIZONTAL,
MULTIPLE POWER INPUT, 36,000 BTU/HR
206 VOLT, 3 PHASE, 50/60/400 HERTZ
MODEL MH-40-MP
NSN 4120-01-330-6543

Current as of 5 May 1995

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes, or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-I 798. You may also submit your recommended changes by E-mail directly to <mpmt%avma28@st-louis-emh7.army.mil>. A reply will be furnished directly to you. Instructions for sending an electronic 2028 may be found at the back of this manual immediately preceding the hard copy 2028.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TABLE OF CONTENTS

	PAGE	ILLUS/ FIGURE
Section I Introduction	1	
Section II Repair Part	1-1	
Group 01 Fabric Cover and Access Panels	1 - 1	1
Group 02 Louvers, Guards, Filters, Metal Covers	2-1	2
and Information Plates	3-1	3
Condenser Outlet Air Louver Assembly (Left)	4-1	4
Condenser Outlet Air Louver Assembly (Right)	5-1	5
Group 03 Heating Elements and Switches		

Group 04	Condensate Drain Assembly	6-I	6
Group 05	Evaporator Fan Assembly	7-I	7
Group 06	Condenser Fans and Condenser Louver Controls	8-I	8
	Condenser Fan Assembly	9-I	9
Group 07	Louver Actuator Cables	10-I	10
Group 08	Ventilation Damper and Actuator	11-I	11
	Electrical System	12-I	12
	Circuit Breaker, Logic Box, Motor Controller, Transformer and Rectifier	13-I	13
	Control Panel Assembly	14-I	14
	Relay and EMI Filter	15-I	15
	Terminal Boards and Coil Frost Switch		
	Wiring Harnesses		
Group 09	Refrigeration System	16-I	16
	Compressor	17-I	17
Group 10	Housing	18-I	18
Group 11	Loose/Accessory Items	19-I	19
Group 12	Bulk Materials List	Bulk-I	
Section III	Special Tools List (Not Applicable)		
Section IV	Cross-Reference Indexes		
	National Stock Number Index	I-1	
	Part Number Index	i-11	
	Figure and Item Number Index	I-31	

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

SECTION I. INTRODUCTION

1. **SCOPE.** This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support and general support maintenance of the Air Conditioner. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. **GENERAL.** In addition to Section I, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. **Section II. Repair Parts List.** A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. This list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in functional groups in Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown in the associated illustration(s)/figure(s).


b. **Section III. Special Tools List.** A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. **Section IV. Cross-Reference Index.** A list, in National Item Identification Number (NIIN) sequence, of all national stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross references NSN, CAGEC and part number.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. **ITEM NO. (Column (1)).** Indicates the number used to identify items called out in the illustration.

b. **SMR Code (Column (2)).** The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

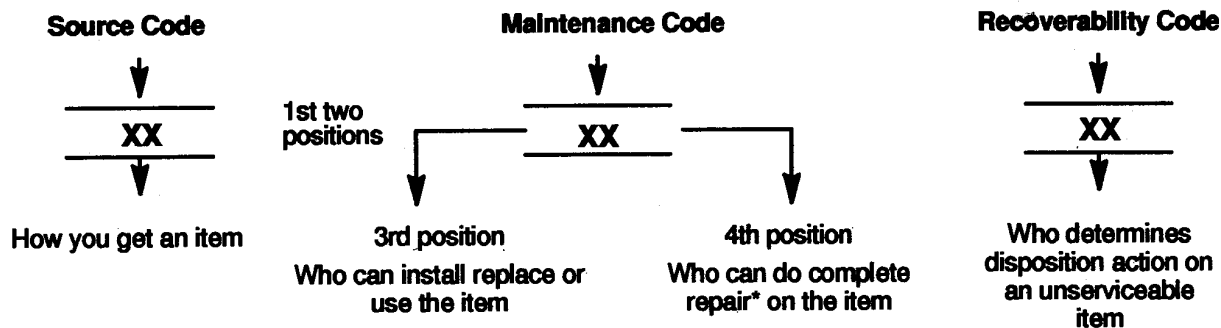

* Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.