

**TECHNICAL MANUAL
ORGANIZATIONAL MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS LISTS
FOR**

PUBLIC ADDRESS SETS

AN/UIH-2 (NSN 5830-00-503-1079)

AND

AN/UIH-2A (NSN 5830-00-503-1079)

HEADQUARTERS, DEPARTMENT OF THE ARMY

August 1978

TECHNICAL MANUAL
NO. 11-5830-200-20P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 2 August 1978

ORGANIZATIONAL MAINTENANCE

REPAIR PARTS AND

SPECIAL TOOLS LISTS

FOR

PUBLIC ADDRESS SETS

AN/UIH-2 (NSN 5830-00-503-1079)

AND

AN/UIH-2A (NSN 5830-00-503-1079)

Current as of 9 January 1978

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 20282 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-MA-Q, Fort Monmouth, New Jersey 07703.

In either case a reply will be furnished direct to you.

Table of Contents

SECTION		Page	Illus Figure
	I. Introduction.	1	
	II. Repair parts list	5	
Group	00 Public Address Sets ANIUIH-2, AN[UIH-2A.....	5	1
	01 Reproducer, Sound RP-104/UIH-2, RP-104AIUIH-2 (For AN/UIH-2), RP-104BIUIH-2A,(For AN/UIH-2A) (No parts authorized)		
	0101 Amplifier, power supply (A8).....	7	2, 3
	0102 Electronic component assembly (A9) (No parts authorized)		
	0103 Resistor assembly aid arm, sound reproducer (No parts authorized)		
	0104 Wiring assembly (AII) (No parts authorized)		
	0105 Turntable assembly (A14).....	13	4-6
	02 Loudspeaker Assembly LS-148/U, LS-148AIU	19	7
	0201 Cabinet, electrical equipment (A1) including subassemblies (A2 thru A7) (No parts authorized)		
	03 Cable Assembly, Power CX-1208/U (No parts authorized)		

This manual supersedes TM 11-5830-200-20P, 9 November 1970.

		Page	Illus Figure
	04 Cable Assembly, Power CX- 1235/U (No parts authorized)		
	05 Cable Assembly, Special Purpose CX- 10950/U (No parts authorized)		
	06 Stroboscope assembly.....	21	8
	07 Microphone, Dynamic M-23/U, M-43/U (No parts authorized)		
SECTION	III Special tools list (Not applicable)		
	IV National stock number and part number index	22	

SECTION I

INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of organizational maintenance of the AN/UIH-2, AN/UIH-2A. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code	Definition
------	------------

PA-Item procured and stocked for anticipated or known usage.	
--	--

NOTE

Cannibalization or salvage may be use

as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code	Application/Explanation
------	-------------------------

O-Support item is removed, replaced, used at the organizational level.	
--	--

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code	Application/Explanation
------	-------------------------

F-The lowest maintenance level capable of complete repair of the support item is the direct support level.	
Z-Nonreparable. No repair is authorized.	

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Recoverability	Definition
----------------	------------

Z-Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.	
F-Reparable item. When uneconomically reparable, condemn and dispose at the direct support level.	

c. National Stock Number. Indicates the National stock number assigned to the item and will be used for requisitioning purposes.

d. Part Number. Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item

by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

NOTE

When a stock numbered item is requisitioned, the repair part received may have a different part number than the part being replaced.

e. Federal Supply Code for Manufacturer (FSCM). The FSCM is a 5-digit numeric code listed in SB 708-42 which is used to identify the manufacturer, distributor, or Government agency, etc.

f. Description. Indicates the Federal item name and, if required, a minimum description to identify the item.

g. Unit of Measure (U/M). Indicates the standard of the basic quantity of the listed item as used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation (e.g., ea, in, pr, etc). When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

h. Quantity Incorporated in Unit. Indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly.

4. Special Information

a. Usable on codes are shown in the description column. Uncoded items are applicable to all models. Identification of the usable on codes used in this publication are:

Code	Used on
ADI	ANIUIH-2
2YX	AN/UIH-2A
ADK	RP-104/UIH-2
ADL	RP-104A/UIH-2
5KR	RP-104B/UIH-2
5IM	LS-148A/U
ADJ	LS-148/U

b. The following publications pertain to the AN/UIH-2, AN/UIH-2A and its components:

TM 11-5830-200-10, Public Address Set
 AN/UIH-2; Reproducing Equipment
 MC-364-D; Loudspeaker LS-148/U;

Reproducers, Sound RP-104/UIH-2 and
 RP-104A/UIH-2 and Turntable MX-932/U

TM 11-5830-200-20, Public Address Set
 AN/UIH-2; Reproducing Equipment
 MC-364-D; Loudspeaker LS-148/U;
 Reproducers, Sound RP-104/UIH-2 and
 RP- 104A/UIH-2 and Turntable MX-932/U

c. The illustrations in this manual are identical to those published in TM 11-5830-200-34P. Only those parts assigned the third position SMR maintenance code "C" or "O" are listed in the tabular listing; therefore, there may be a break in the item number sequence. Only illustrations containing organizational authorized items appear in this manual.

5. How to Locate Repair Parts

a. When National stock number or part number is unknown.

(1) First. Using the table of contents, determine the functional group within which the item belongs. This is necessary since illustrations are prepared for functional groups and listings are divided into the same groups.

(2) Second. Find the illustration covering the functional group to which the item belongs.

(3) *Third.* Identify the item on the illustrations and note the illustrations figure and item number of the item.

(4) *Fourth.* Using the Repair Parts Listing, find the figure and item number noted on the illustration.

b. When National stock number or part number is known.

(1) *First.* Using the Index of National Stock Numbers and Part Numbers, find the pertinent National stock number or part number. This index is in NIIN sequence followed by a list of part numbers in alphameric sequence, cross-referenced to the illustration figure number and item number.

(2) *Second* After finding the figure and item number, locate the figure and item number in the repair parts list.

6. Abbreviations

Not applicable.

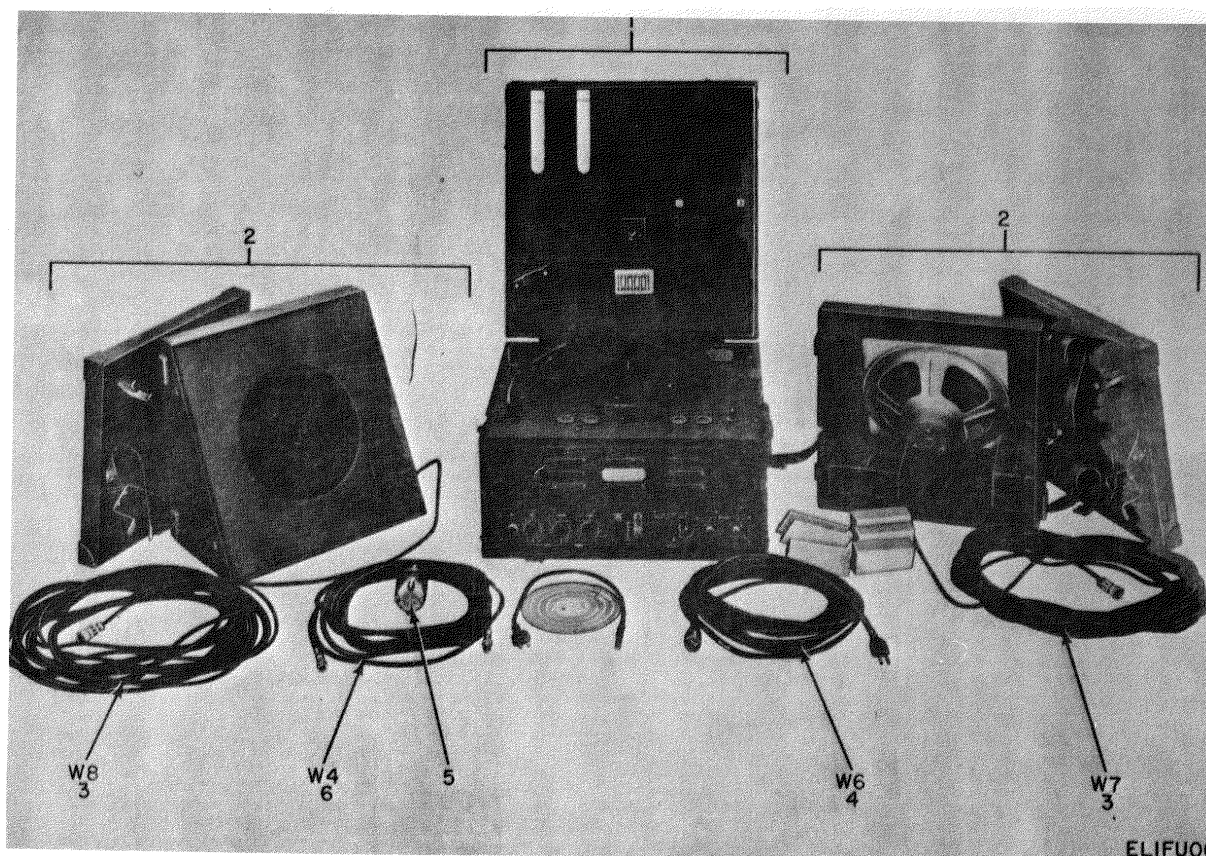


Figure 1. Public Address Set AN/UIH-2 and AN/UIH-2A