

TECHNICAL MANUAL

DIRECT SUPPORT AND GENERAL

SUPPORT MAINTENANCE

REPAIR PARTS AND

SPECIAL TOOLS LISTS

FOR

PUBLIC ADDRESS SETS

AN/UIH-2 AND AN/UIH-2A

(NSN 5830-00-503-1079)

HEADQUARTERS, DEPARTMENT OF THE ARMY

August 1978

TECHNICAL MANUAL }
No. 11-5830-200-34P }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC, 4 August 1978

**DIRECT SUPPORT AND GENERAL
SUPPORT MAINTENANCE
REPAIR PARTS AND
SPECIAL TOOLS LIST
FOR
PUBLIC ADDRESS SETS
AN/UTH-2 AND AN/UIH-2A
(NSN 5830-00-503-1079)**

Current as of 13 January 1978

REPORTING OF ERRORS

You can improve this manual by recommending improvements using DA Form 2028-2 located in the back of the manual. Simply tear out the self addressed form, fill it out as shown on the sample, fold it where shown, and drop it in the mail.

If there are no blank DA Form 2028-2 in the back of your manual, use the standard DA Form 2028 (Recommended Changes to Publications and Blank Forms) and forward to the Commander, US Army Communications and Electronics Materiel Readiness Command, ATTN: DRSEL-MA-Q, Fort Monmouth, New Jersey 07703.

Table of Contents

			Page	Illus Figure
SECTION	I.	Introduction	1	
	II.	Repair parts list.....	5	
Group	00	Public Address Sets AN/UIH-2, AN/UIH-2A	5	1, 2
	01	Reproducer, Sound RP-104/UIH-2, RP-104A/UIH-2 (For AN/UIH-2) RP-104B/UIH-2A (For AN/UIH-2A).....	9	3
	0101	Amplifier, power supply (A8)	11	4, 5
	0102	Electronic component assembly (A9).....	19	6
	0103	Resistor assembly, arm, sound reproducer (A10).....	21	7
	0104	Wiring assembly (A11)	23	8
	0105	Turntable assembly (A14)	25	9-11
	02	Loudspeaker Assembly LS-148/U, LS-148A/U	33	12
	0201	Cabinet, electrical equipment (A1) including subassemblies (A2 thru A7).....	37	13
	03	Cable Assembly, Power CX-1208/U.....	41	14
	04	Cable Assembly, Power CX-1235/U.....	43	15
	05	Cable Assembly, Special Purpose CX-10950/U.....	45	16
	06	Stroboscope assembly	47	17
	07	Microphone, Dynamic M-23/U, M-43/U (No parts authorized)		
SECTION	III.	Special tools list (Not applicable)		
	IV.	National stock number and part number index.....	48	

*This manual supersedes TM 11-5830-200-35P, 16 March 1971.

SECTION I

INTRODUCTION

1. Scope

This manual lists spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE), and other special support equipment required for performance of direct support, and general support maintenance of the AN/UIH-2, AN/UIH-2A. It authorizes the requisitioning and issue of spares and repair parts as indicated by the source and maintenance codes.

2. General

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in numeric sequence, with the parts in each group listed in figure and item number sequence.

b. Section III. Special Tools List. Not applicable.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbers (NSN) appearing in the listings, followed by a list, in alphameric sequence, of all part numbers appearing in the listings, national stock numbers and part numbers are cross-reference to each illustration figure and item number appearance.

3. Explanation of Columns

a. Illustration. This column is divided as follows:

(1) *Figure number.* Indicates the figure number of the illustration on which the item is shown.

(2) *Item number.* The number used to identify item called out in the illustration.

b. Source, Maintenance, and Recoverability (SMR) Codes.

(1) *Source code.* Source codes indicate the manner of acquiring support items for maintenance, repair, or overhaul of end items. Source codes are entered in the first and second positions of the Uniform SMR Code format as follows:

Code Definition

PA—Item procured and stocked for anticipated or known usage.

XD—A support item that is not stocked, when required, item will be procured through normal supply channels.

NOTE

Cannibalization or salvage may be used as a source of supply for any items source coded above except those coded XA and aircraft support items as restricted by AR 700-42.

(2) *Maintenance code.* Maintenance codes are assigned to indicate the levels of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the Uniform SMR Code format as follows:

(a) The maintenance code entered in the third position will indicate the lowest maintenance level authorized to remove, replace, and use the support item. The maintenance code entered in the third position will indicate one of the following levels of maintenance:

Code Application/Explanation

C—Crew or operator maintenance performed within organizational maintenance.

O—Support item is removed, replaced, used at the organizational level.

F—Support item is removed, replaced, used at the direct support level.

(b) The maintenance code entered in the fourth position indicates whether the item is to be repaired and identifies the lowest maintenance level with the capability to perform complete repair (i.e., all authorized maintenance functions). This position will contain one of the following maintenance codes:

Code Application/Explanation

F—The lowest maintenance level capable of complete repair of the support item is the direct support level.

Z—Nonreparable. No repair is authorized.

(3) *Recoverability code.* Recoverability codes are assigned to support items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the Uniform SMR Code format as follows:

Recoverability

Codes Definition

Z—Nonreparable item. When unserviceable, condemn and dispose at the level indicated in position 3.

F—Reparable item. When uneconomically reparable, condemn and dispose at the direct support level.

*Recoverability**Codes Definition*

H—Reparable item. When uneconomically reparable, condemn and dispose at the general support level.

c. National Stock Number. Indicates the National stock number assigned to the item and will be used for requisitioning purposes.

d. Part Number. Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

NOTE

When a stock numbered item is requisitioned, the repair part received may have a different part number than the part being replaced.

e. Federal Supply Code for Manufacturer (FSCM). The FSCM is a 5-digit numeric code listed in SB 708-42 which is used to identify the manufacturer, distributor, or Government agency, etc.

f. Description. Indicates the Federal item name and, if required, a minimum description to identify the item.

g. Unit of Measure (U/M). Indicates the standard of the basic quantity of the listed item as used in performing the actual maintenance function. This measure is expressed by a two-character alphabetical abbreviation (e.g., ea, in, pr, etc). When the unit of measure differs from the unit of issue, the lowest unit of issue that will satisfy the required units of measure will be requisitioned.

h. Quantity Incorporated in Unit. Indicates the quantity of the item used in the breakout shown on the illustration figure, which is prepared for a functional group, subfunctional group, or an assembly. A "V" appearing in this column in lieu of a quantity indicates that no specific quantity is applicable, (e.g., shims, spacers, etc).

4. Special Information

a. Usable on codes are shown in the description column. Uncoded items are applicable to all models. Identification of the usable on codes used in this publication are:

<i>Code</i>	<i>Used on</i>	<i>Code</i>	<i>Used on</i>
ADI	AN/UIH-2	5KR	RP-104B/UIH-2
2YX	AN/UIH-2A	5IM	LS-148A/U
ADK	RP-104/UIH-2	ADJ	LS-148/U
ADL	RP-104A/UIH-2		

b. The following publications pertain to the AN/UIH-2, AN/UIH-2A and its components:

TM 11-5830-200-10, Public Address Set AN/UIH-2; Reproducing Equipment MC-364-D; Loudspeaker LS-148/U; Reproducurs, Sound RP-104/UIH and RP-104A/UIH and Turntable MX-932/U

TM 11-5830-200-20, Public Address Set AN/UIH-2; Reproducing Equipment MC-364-D; Loudspeaker LS-148/U; Reproducurs, Sound RP-104/UIH-2 and RP-104A/UIH-2 and Turntable MX-932/U

TM 11-5830-200-20P, Public Address Sets AN/UIH-2 and AN/UIH-2A

TM 11-5830-200-35, Reproducing Equipment MC-364-D and Public Address Set AN/UIH-2

5. How to Locate Repair Parts

a. When National stock number or part number is unknown.

(2) *First.* Using the table of contents, determine the functional group within which the item belongs. This is necessary since illustrations are prepared for functional groups and listings are divided into the same groups.

(2) *Second.* Find the illustration covering the functional group to which the item belongs.

(3) *Third.* Identify the item on the illustration and note the illustration figure and item number of the item.

(4) *Fourth.* Using the Repair Parts Listing find the figure and item number noted on the illustration.

b. When National stock number or part number is known.

(1) *First.* Using the Index of National Stock Numbers and Part Numbers, find the pertinent National stock number or part number. This index is in NIIN sequence followed by a list of part numbers in alphameric sequence, cross-referenced to the illustration figure number and item number.

(2) *Second.* After finding the figure and item number, locate the figure and item number in the repair parts list.

6. Abbreviations

Not applicable.

(Next printed page is 4)

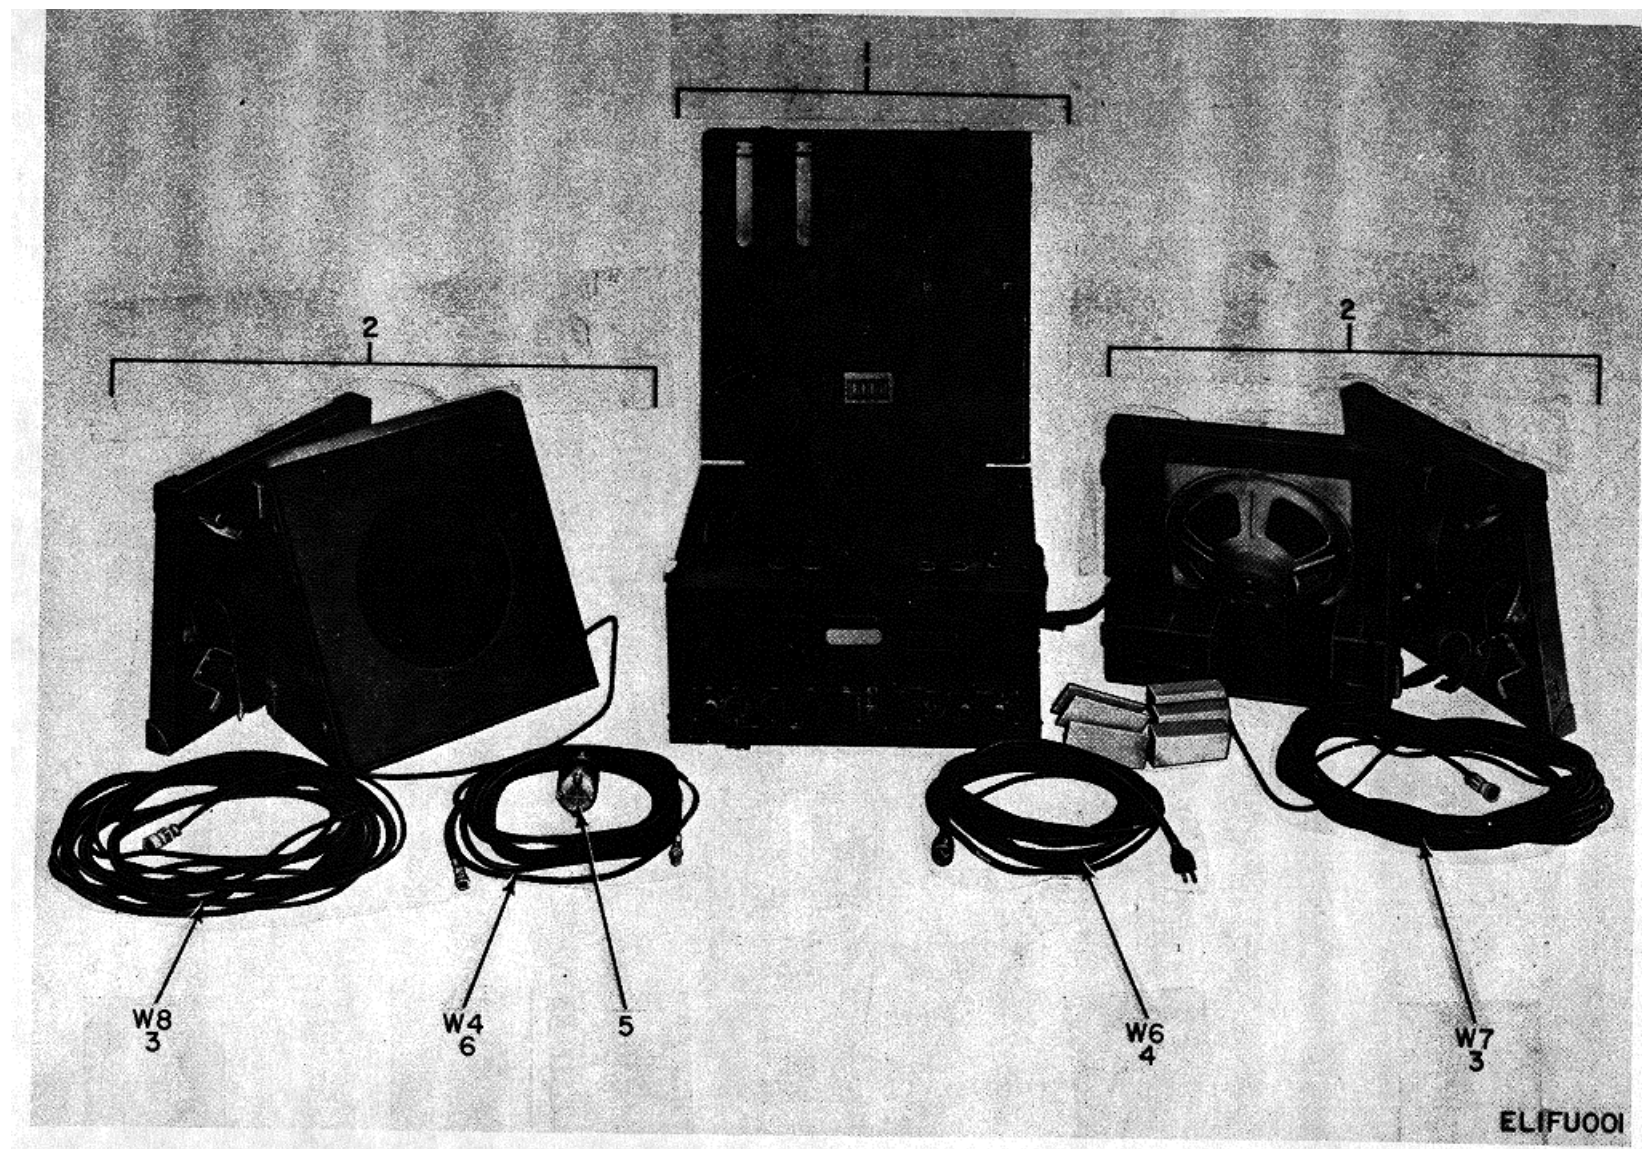


Figure 1. Public Address Set AN/UIH-2 and AN/UIH-2A.