

**LUBRICATION ORDER
LUBRICATION INSTRUCTION**

**ARMY LO 5-2090-202-12
MARINE CORPS LI 2090-12/1**


14 JULY 1987

*This LO supersedes LO 5-2090-202-12/LI 2090-12/1, 30 December 1981

**CRADLE, BRIDGE ERECTION BOAT,
TWIN JET, ALUMINUM HULL
NSN 2090-01-106-9789**

Intervals are based on the number of launchings. Adjust to compensate for abnormal operation or severe conditions or contaminated lubricants. During inactive periods, sufficient lubrication must be performed for adequate preservation. Clean and dry fittings before lubrication. Clean parts with solvent (SD) Type II or equivalent. The lowest level of maintenance authorized to lubricate a point is indicated by one of the following symbols as appropriate: Operator/ crew (C); and Organizational Maintenance (O).

You can help improve this manual. If you find any mistake or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications) direct to: Commander, US Army Troop Support Command, ATTN: AMSTR-MCTS, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. Marine Corps - By NAVMC Form 10772 directly to: Commanding General, Marine Corp. Logistic Base ATTN: Code 850, Albany, Georgia 31704. A reply will be furnished to you.

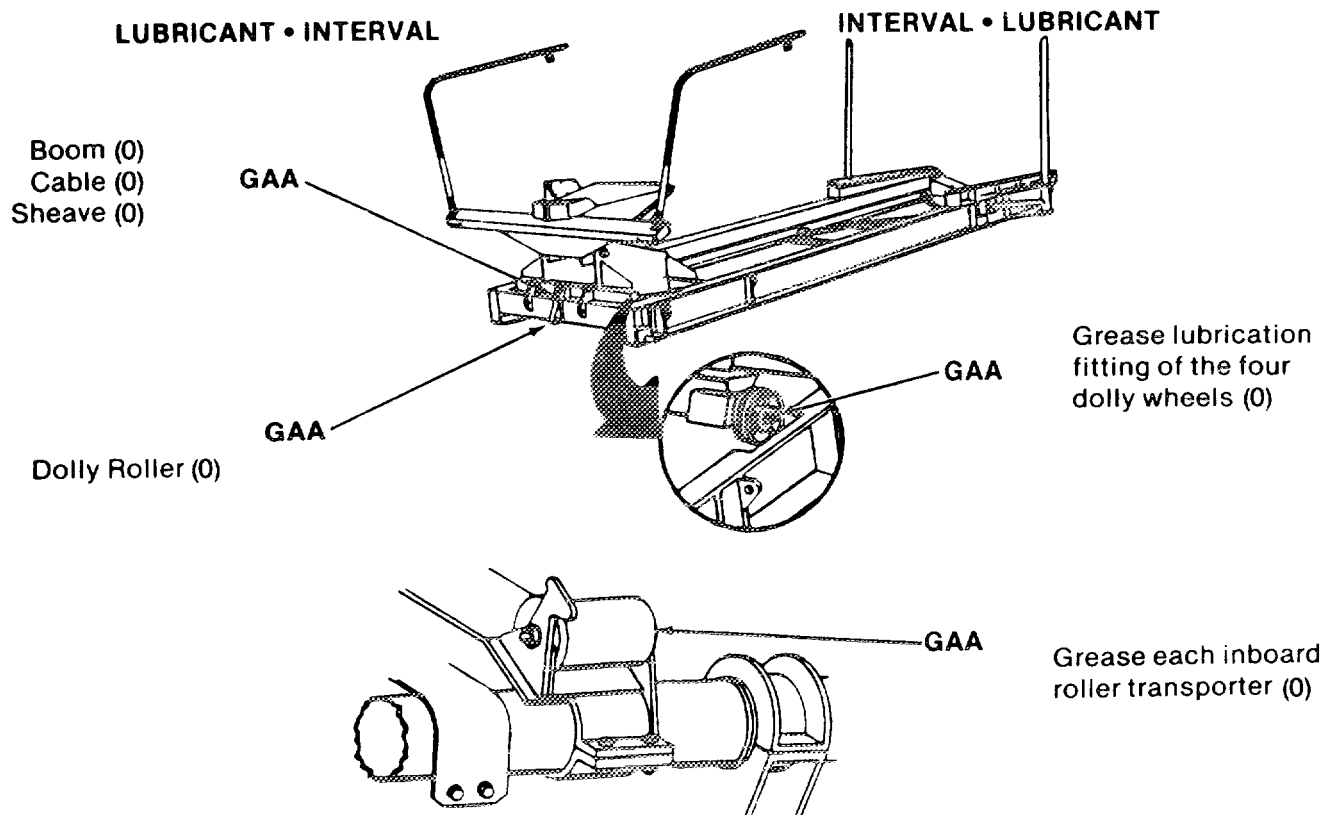

Lubricate points indicated
on both sides of equipment.