

TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT AND GENERAL SUPPORT
REPAIR PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS)**

IMPROVED FLOAT BRIDGE CONSISTING OF:

TRANSPORTER

MODEL CONDEC 2208	NSN 5420-00-071-5321
MODEL CONDEC 2305	NSN 5420-01-173-2020
MODEL PACCAR 9999	NSN 5420-01-175-6523
MODEL SOUTHWEST RBT	NSN 5420-01-175-6524

INTERIOR BAY

MODEL CONDEC 2282	NSN 5420-00-071-5322
MODEL SPACE 66981	NSN 5420-01-175-6526
MODEL CONDEC 2307	NSN 5420-01-173-2022

RAMP BAY

MODEL CONDEC 2281	NSN 5420-00-497-5276
MODEL CONDEC 2306	NSN 5420-00-174-8084
MODEL SPACE 6698R	NSN 5420-00-175-6525

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

*This manual supersedes TM 5-5420-209-20P and TM 5-5420-209-34P, both dated 30 November 1987, including all changes.

HEADQUARTERS, DEPARTMENT OF THE ARMY
15 DECEMBER 1992

TECHNICAL MANUAL

NO. 5-5420-209-24P

HEADQUARTERS
DEPARTMENTS OF THE ARMY
WASHINGTON, D.C., 15 DECEMBER 1992

TECHNICAL MANUAL

**Unit, Direct Support and General Support
Maintenance Repair Parts and Special Tools List
(Including Depot Maintenance Repair Parts and Special Tools)**

IMPROVED FLOAT BRIDGE CONSISTING OF:**TRANSPORTER**

MODEL CONDEC 2208	NSN 5420-00-071-5321
MODEL CONDEC 2305	NSN 5420-01-173-2020
MODEL PACCAR 9999	NSN 5420-01-175-6523
MODEL SOUTHWEST RBT	NSN 5420-01-175-6524

INTERIOR BAY

MODEL CONDEC 2282	NSN 5420-00-071-5322
MODEL SPACE 66981	NSN 5420-01-175-6526
MODEL CONDEC 2307	NSN 5420-01-173-2022

RAMP BAY

MODEL CONDEC 2281	NSN 5420-00-497-5270
MODEL CONDEC 2306	NSN 5420-00-174-8084
MODEL SPACE 6698R	NSN 5420-00-175-6525

Current as of 19 June 1992

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MTS, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. A reply will be furnished directly to you.

TABLE OF CONTENTS

	Page	Illus/ Figure
Section I. INTRODUCTION	1	
Section II. REPAIR PARTS LIST	6	
Group 01 Transporter Electrical System		
Floodlight Assembly.....	1-1	1

*This manual supersedes TM 5-5420-209-20P and TM 5-5420-209-34P, both dated 30 November 1987, including all changes.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

CHANGE 2 i

TABLE OF CONTENTS (Continued)

	Page	Illus/ Figure
Floodlight Switch.....	2-1	2
Floodlight Electrical Leads and Clamps.....	3-1	3
Clearance and Marker Lights	4-1	4
Clearance and Blackout Marker Electrical Wiring and Hardware	5-1	5
Group 02 Mirrors and Bracket Mirrors and Bracket Assembly.....	6-1	6
Group 03 Wheel Splash Guard Wheel Splash Guard.....	7-1	7
Group 04 Bay Latch Pin and Rope Bay Latch Pin and Rope	8-1	8
Group 05 Walkways Walkway	9-1	9
Group 06 Tire Carrier Assembly Tire Carrier Assembly	10-1	10
Group 07 Roller and Axle Assembly Roller Assembly and Axle	11-1	11
Group 08 Cable Assembly (Winch) Winch Cable Assembly	12-1	12
Group 09 Boom Assembly Transporter Boom.....	13-1	13
Sheaves and Pin.....	14-1	14
Anchor, Snatch Block and Pins	15-1	15
Roller and Pins	16-1	16
Hook Tiedown with Attaching Hardware	17-1	17
Group 10 Winch Assembly Cable Tensioner.....	18-1	18
Winch Motor	19-1	19
Winch Assembly	20-1	20
Group 11 Hydraulic Cylinder, Boom, 5 Inch Bore Cylinder Assembly (Prunce).....	21-1	21
Cylinder Assembly (Wasco)	22-1	22
Cylinder Assembly (Aeroquip).....	23-1	23
Cylinder Assembly (Sierra)	24-1	24
Group 12 Locking Cylinder, Bridge Bay, 3 Inch Bore Cylinder Assembly (3 Inch, Sierra).....	25-1	25
Locking Cylinder and Pins.....	26-1	26
Group 13 Hydraulic System Valves Control Valve	27-1	27
Selector Valve	28-1	28
Dual Over Center Valve	29-1	29
Single Over Center Valve	30-1	30
Valve, Hydraulic, Cable Tensioner.....	31-1	31
Group 14 Hydraulic Filter Hydraulic Filter.....	32-1	32
Group 15 Hydraulic Reservoir Reservoir Assembly	33-1	33
Reservoir Bracket	34-1	34

TABLE OF CONTENTS (Continued)

	Page	Illus/ Figure
Group 16 Hydraulic System Pump and Bracket		
Hydraulic System Pump, Drive Shaft and		
Attaching Hardware	35-1	35
Hydraulic System Pump (RBT only)	36-1	36
Group 17 Drive Shaft (Hydraulic Pump)		
Drive Shaft Pump (M812 only)	37-1	37
Group 18 Control Lever and Linkage (PTO)		
Control Lever and Linkage (PTO)	38-1	38
Group 19 Hydraulic System Lines and Fittings		
Hose Assembly, Clamps and Fittings	39-1	39
Tubing, Sleeves, Nuts, Clamps and Fittings	40-1	40
Group 20 Fuel Tank		
Fuel Line, Clamps and Fittings	41-1	41
Fuel Tank Bracket (Mounting)	42-1	42
Group 21 Cap Protector		
Cap Protector	43-1	43
Group 22 Bogie Bracket Retainer and Chain		
Bogie Bracket Retainer and Chain	44-1	44
Group 23 Bogie Lock		
Bogie Lock	45-1	45
Group 24 Crossmember Supports		
Front Support	46-1	46
Center Support	47-1	47
Boom Pivot Support	48-1	48
Group 25 Accessory Items		
Instruction Plates	49-1	49
Data Plates	50-1	50
Reflectors	51-1	51
Throttle Control Assembly (RBT only)	52-1	52
Group 26 Ramp Bay Unfolding Mechanism		
Cable Assemblies	53-1	53
Cable Links, Pins and Washers	54-1	54
Group 27 Bow Ponton Lever, Pins and Cable Guide		
Unfolding Lever, Pins and Wearcaps	55-1	55
Group 28 Ramp Bow Pontons		
Hinge Pins	56-1	56
Bow Pontons, Handrails, Plugs and Pins	57-1	57
Latch Receptacles	58-1	58
Group 29 Roadway Ponton, Yokes and Lower Lock Drive		
Roadway Pontons, Approach Ramps	59-1	59
Retainers, Levers and Pins	60-1	60
Yokes, Pins and Washers	61-1	61
Group 30 Ramp Bay Hydraulic System		
Ramp Cylinder Hydraulic Lines, Fittings and Connectors	62-1	62
Ramp Cylinder	63-1	63
Ramp Cylinder Retaining Pin and Cover	64-1	64
Hydraulic Pump Installation	65-1	65
Hydraulic Pump, Exploded View (Templeton)	66-1	66
Hydraulic Pump, Exploded View (Starr)	67-1	67
Pump Access Cover	68-1	68

TABLE OF CONTENTS (Continued)

	Page	Illus/ Figure
Group 31 Ramp Roadway Pontons		
Hinge Pins, Front and Rear.....	69-1	69
Roadway Connectors, Tee Latches and Cable Guide.....	70-1	70
Roadway Pontons, Connectors and Hardware.....	71-1	71
Group 32 Interior Bay Unfolding Mechanism		
Cable Assemblies	72-1	72
Cable Links, Pins and Washers.....	73-1	73
Group 33 Bow Ponton Lever, Pins and Cable Guide		
Unfolding Lever, Pins and Wearcaps	74-1	74
Group 34 Interior Bay Bow Pontons		
Hinge Pins	75-1	75
Pontons, Handrails, Plugs and Pins.....	76-1	76
Latch Receptacles	77-1	77
Group 35 Lower Lock Drive		
Lower Lock Drive Connecting Pin, Drive Screw, Trunnion Nuts, Lever, Link and Pin.....	78-1	78
Group 36 Interior Bay Roadway Pontons		
Hinge Pins, Front and Rear.....	79-1	79
Roadway Connectors, Tee Latches, Fold Lock, Receptacles and Plug	80-1	80
Roadway Pontons	81-1	81
Group 37 Bulk Material		
Bulk Material.....	BULK-1	
Section III. SPECIAL TOOLS LIST		
Special Tools	82-1	82
Section IV. CROSS REFERENCE INDEXES	I-1	
National Stock Number Index	I-1	
Part Number Index.....	I-9	
Figure and Item Number Index	I-34	

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

Section I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support and general support maintenance of the Improved Float Bridge. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. This list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in functional groups in Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown in the associated illustration(s)/figure(s).


b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-Reference Index. A list, in National Item Identification Number (NIIN) sequence, of all national stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross references NSN, CAGEC and part number.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

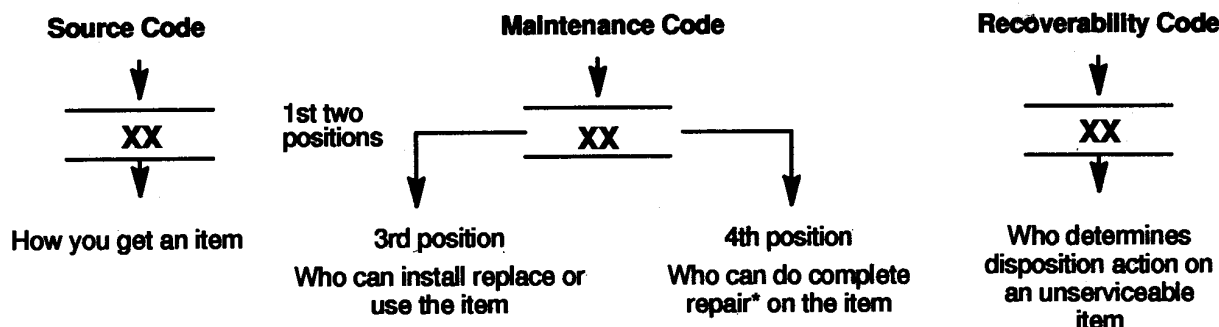

* Complete Rear: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how you get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follow.

Code		Explanation
PA	}	Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3rd position of the SMR code.
PB		
PC**		
PD		
PE		
PF		
PG		
		**NOTE : Items coded PC are subject to deterioration.
KD	}	Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3rd position of the SMR code. The complete kit must be requisitioned and applied.
KF		
KB		
MO (Made at org AVUM level)	}	Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in the RPSTL. If the item is authorized to you by the 3rd position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.
MF (Made at DS/AVUM level)		
MH (Made at GS level)		
ML (Made at Specialized Repair Activity (SRA))		
MD (Made at Depot)		
AO (Assembled by org AVUM Level)	}	Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the level of maintenance indicated by the source code. If the 3rd position code of the SMR code, authorizes you to replace the item, but the source code indicates the items are assembled at a higher level, order the item from the higher level of maintenance.
AF (Assembled by DS/AVUM Level)		
AH (Assembled by GS Category)		
AL (Assembled by SRA)		
AD (Assembled by Depot)		

XA - Do not requisition an "XA"-coded item. Order its next higher assembly. (Also, refer to the NOTE below.)

XB - If an "XB" item is not available from salvage, order it using the CAGE Code and part number given.

XC - Installation drawing, diagram, instruction sheet, field service drawing, that is identified by manufacturer's part number.

XD - Item is not stocked. Order an "XD"-coded item through normal supply channels using the CAGE Code and part number given, if no NSN is available.

NOTE

Cannibalization or controlled exchange, when authorized, may be used as a source of supply for items with the above source codes, except for those source coded "XA" or those aircraft support items restricted by requirements of AR 750-1

(2) Maintenance Code. Maintenance codes tell you the level(s) of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the SMR code as follows:

(a) The maintenance code entered in the third position tells you the lowest maintenance level authorized to remove, replace, and use an item. The maintenance code entered in the third position will indicate authorization to the following levels of maintenance.

Code	Application/Explanation
C	Crew or operator maintenance done within unit/AVUM maintenance.
O	Unit level VAVUM maintenance can remove, replace, and use the item.
F	Direct support/AVIM maintenance can remove, replace, and use the item.
H	General support maintenance can remove, replace, and use the item.
L	Specialized repair activity can remove, replace, and use the item.
D	Depot can remove, replace, and use the item.

(b) The maintenance code entered in the fourth position tells whether or not the item is to be repaired and identifies the lowest maintenance level with the capability to do complete repair (i.e., perform all authorized repair functions). NOTE: Some limited repair may be done on an item at a lower level of maintenance, if authorized by the Maintenance Allocation Chart (MAC) and SMR codes. This position will contain one of the following maintenance codes.

Code	Application/Explanation
O	Unit VAVUM is the lowest level that can do complete repair of the item.
F	Direct support VAVIM is the lowest level that can do complete repair of the item.
H	General Support is the lowest level that can do complete repair of the item.
L	Specialized repair activity is the lowest level that can do complete repair of the item.
D	Depot is the lowest level that can do complete repair of the item.
Z	Nonreparable. No repair is authorized.
B	No repair is authorized. No parts or special tools are authorized for the maintenance of a "B" coded item. However, the item may be reconditioned by adjusting, lubricating, etc., at the user level.

(3) Recoverability. Recoverability codes are assigned to items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the SMR Code as follows:

**Recoverability
Codes**
Application/Explanation

- Z - Nonreparable item. When unserviceable, condemn and dispose of the item at the level of maintenance shown in 3rd position of SMR Code.
- O - Reparable item. When not economically reparable, condemn and dispose of the item at unit or AVUM level.
- F - Reparable item. When uneconomically reparable, condemn and dispose of the item at the direct support or AVIM level.
- H - Reparable item. When uneconomically reparable, condemn and dispose of the item at the general support level.
- D - Reparable item. When beyond lower level repair capability, return to depot. Condemnation and disposal of item not authorized below depot level.
- L - Reparable item. Condemnation and disposal not authorized below specialized repair activity (SRA).
- A - Item requires special handling or condemnation procedures because of specific reasons (e.g., precious metal content, high dollar value, critical material, or hazardous material). Refer to appropriate manuals/directives for specific instructions.

c. CAGEC (Column (3)). The Commercial and Government Entity Code (CAGEC) is a 5-digit numeric code which is used to identify the manufacturer, distributor, or Government agency/activity that supplies the item.

d. PART NUMBER (Column (4)). Indicates the primary number used by the manufacturer, (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

NOTE

When you use an NSN to requisition an item, the item you receive may have a different part number from the part ordered.

e. DESCRIPTION AND USABLE ON CODE (UOC) (Column (5)). This column includes the following information:

- (1) The Federal item name and, when required, a minimum description to identify the item.
- (2) The physical security classification of the item is indicated by the parenthetical entry, e.g., Phy Sec C1 (C)-Confidential, Phy Sec C1 (S)-Secret, Phy Sec C1 (T)-Top-Secret.
- (3) Items that are included in kits and sets are listed below the name of the kit or set.
- (4) Spare/repair parts that make up an assembled item are listed immediately following the assembled item line entry.
- (5) Part numbers of bulk materials are referenced in this column in the line entry for the item to be manufactured/fabricated.
- (6) When the item is not used with all serial numbers of the same model, the effective serial numbers are shown on the last line(s) of the description (before UOC).
- (7) The usable on code, when applicable (reference paragraph 5, Special Information).

(8) In the Special Tools List Section, the basis of issue (BOI) appears as the last line(s) in the entry for each special tool, special TMDE, and other special support equipment. When density of equipment supported exceeds density spread indicated in the basis of issue, the total authorization is increased proportionately.

(9) The statement "END OF FIGURE" appears just below the last item description in Column (5) for a given figure in both Section II and Section III.

(10) The indenture, shown as dots appearing before the repair part, indicates that the item is repair part of the next higher assembly.

f. QTY (Column (6)). The QTY (quantity per figure) column indicates the quantity of the item used in the breakout shown on the illustration/figure, which is prepared for a functional group, subfunctional group, or an assembly. A "V" appearing in this column instead of a quantity indicates that the quantity is variable and may vary from application to application.

4. EXPLANATION OF INDEX FORMAT AND COLUMNS (SECTION IV).

a. NATIONAL STOCK NUMBER (NSN) INDEX.

(1) STOCK NUMBER Column. This column lists the NSN in national item identification number (NIIN) sequence. The NIIN consists of the last nine digits of the NSN, i.e.

NSN
5305-01-574-1467
NIIN

When using this column to locate an item, ignore the first 4 digits of the NSN. However, the complete NSN should be used when ordering items by stock number.

(2) FIG. Column. This column lists the number of the figure where the item is identified/located. The figures are in numerical order in Section II and Section III.

(3) ITEM Column. The item number identifies the item associated with the figure listed in the adjacent FIG. column. This item is also identified by the NSN listed on the same line.

b. PART NUMBER INDEX. Part numbers in this index are listed in ascending alphanumeric sequence (i. e., vertical arrangement of letter and number combinations which place the first letter or digit of each group in order A through Z, followed by the numbers 0 through 9, and each following letter or digit in like order).

(1) CAGEC Column. The Commercial and Government Entity Code (CAGEC) is a 5-digit numeric code used to identify the manufacturer, distributor, or Government agency/activity that supplies the item.

(2) PART NUMBER Column. Indicates the primary number used by the manufacturer (individual, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

(3) STOCK NUMBER Column. This column lists the NSN for the associated part number and manufacturer identified in the PART NUMBER and CAGEC columns to the left.

(4) FIG. Column. This column lists the number of the figure where the item is identified/located in Section II and Section III.

(5) ITEM Column. The item number is that number assigned to the item as it appears in the figure referenced in the adjacent figure number column.

c. FIGURE AND ITEM NUMBER INDEX.

(1) FIG. Column. This column lists the number of the figure where the item is identified/located in Section II and Section III.

(2) ITEM Column. The item number is that number assigned to the item as it appears in the figure referenced in the adjacent figure number column.

(3) STOCK NUMBER Column. This column lists the NSN for the item.

(4) CAGEC Column. The Commercial and Government Entity Code (CAGEC) is a 5-digit numeric code used to identify the manufacturer, distributor, or Government agency/activity that supplies the item.

(5) PART NUMBER Column. Indicates the primary number used by the manufacturer (individual, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

5. SPECIAL INFORMATION.

a. USABLE ON CODE. The usable on code appears in the lower left corner of the Description column heading. Usable on codes are shown as "UOC:..." in the Description Column justified left) on the last line of the applicable item description/nomenclature. Uncoded items are applicable to all models.

<u>Code</u>	<u>Used On</u>
BWH	Condec Corp Model 2280
BWJ	Condec Corp Model 2282
BWK	Condec Corp Model 2281
CYG	Condec Corp Model 2307
CYH	Condec Corp Model 2306
CYJ	Condec Corp Model 2305
DBE	PACCAR Model 9999
DBF	Space Corp Model 6698R
DBG	Space Corp Model 6698I
DTN	Southwest Model RBT

b. ASSOCIATED PUBLICATIONS. The publications listed below pertain to the Air Conditioner and its components.

<u>Publication</u>	<u>Short Title</u>
TM 5-5420-209-12	Operator and Unit Maintenance Manual
TM 5-5420-209-24P Special Tools List (Including Depot Maintenance Repair)	Unit, Direct Support and General support Maintenance Repair Parts and
TM 5-5420-209-34	Direct Support and General Support Maintenance Manual
LO 5-5420-209-12	Lubrication Order

6. HOW TO LOCATE REPAIR PARTS.

a. When National Stock Numbers or Part Numbers are NOT Known.

(1) **First.** Using the table of contents, determine the assembly or subassembly group to which the item belongs. This is necessary since figures are prepared for assembly groups and subassembly groups, and listings are divided into the same groups.

(2) **Second.** Find the figure covering the assembly group or subassembly group to which the item belongs.

(3) **Third.** Identify the item on the figure and note the item number.

(4) **Fourth.** Refer to the Repair Parts List for the figure to find the part number for the item number noted on the figure.

(5) **Fifth.** Refer to the Part Number Index to find the NSN, if assigned.

b. When National Stock Number or Part Number is Known.

(1) **First.** Using the of National Stock Number and Part Number Indexes find the pertinent National Stock Number or Part Number. The NSN index is in National Item Identification Number (NIIN) sequence (see paragraph 4.a.). The part numbers in the Part Number index are listed in ascending alphanumeric sequence (see paragraph 4.b.). Both indexes cross-reference you to the illustration/figure and item number of the item you are looking for.

(2) **Second.** Turn to the figure and item number, verify that the item is the one you are looking for, then locate the item number in the repair parts list for the figure.

7. **ABBREVIATIONS.** Abbreviations used in this manual are listed in MIL-STD-12.

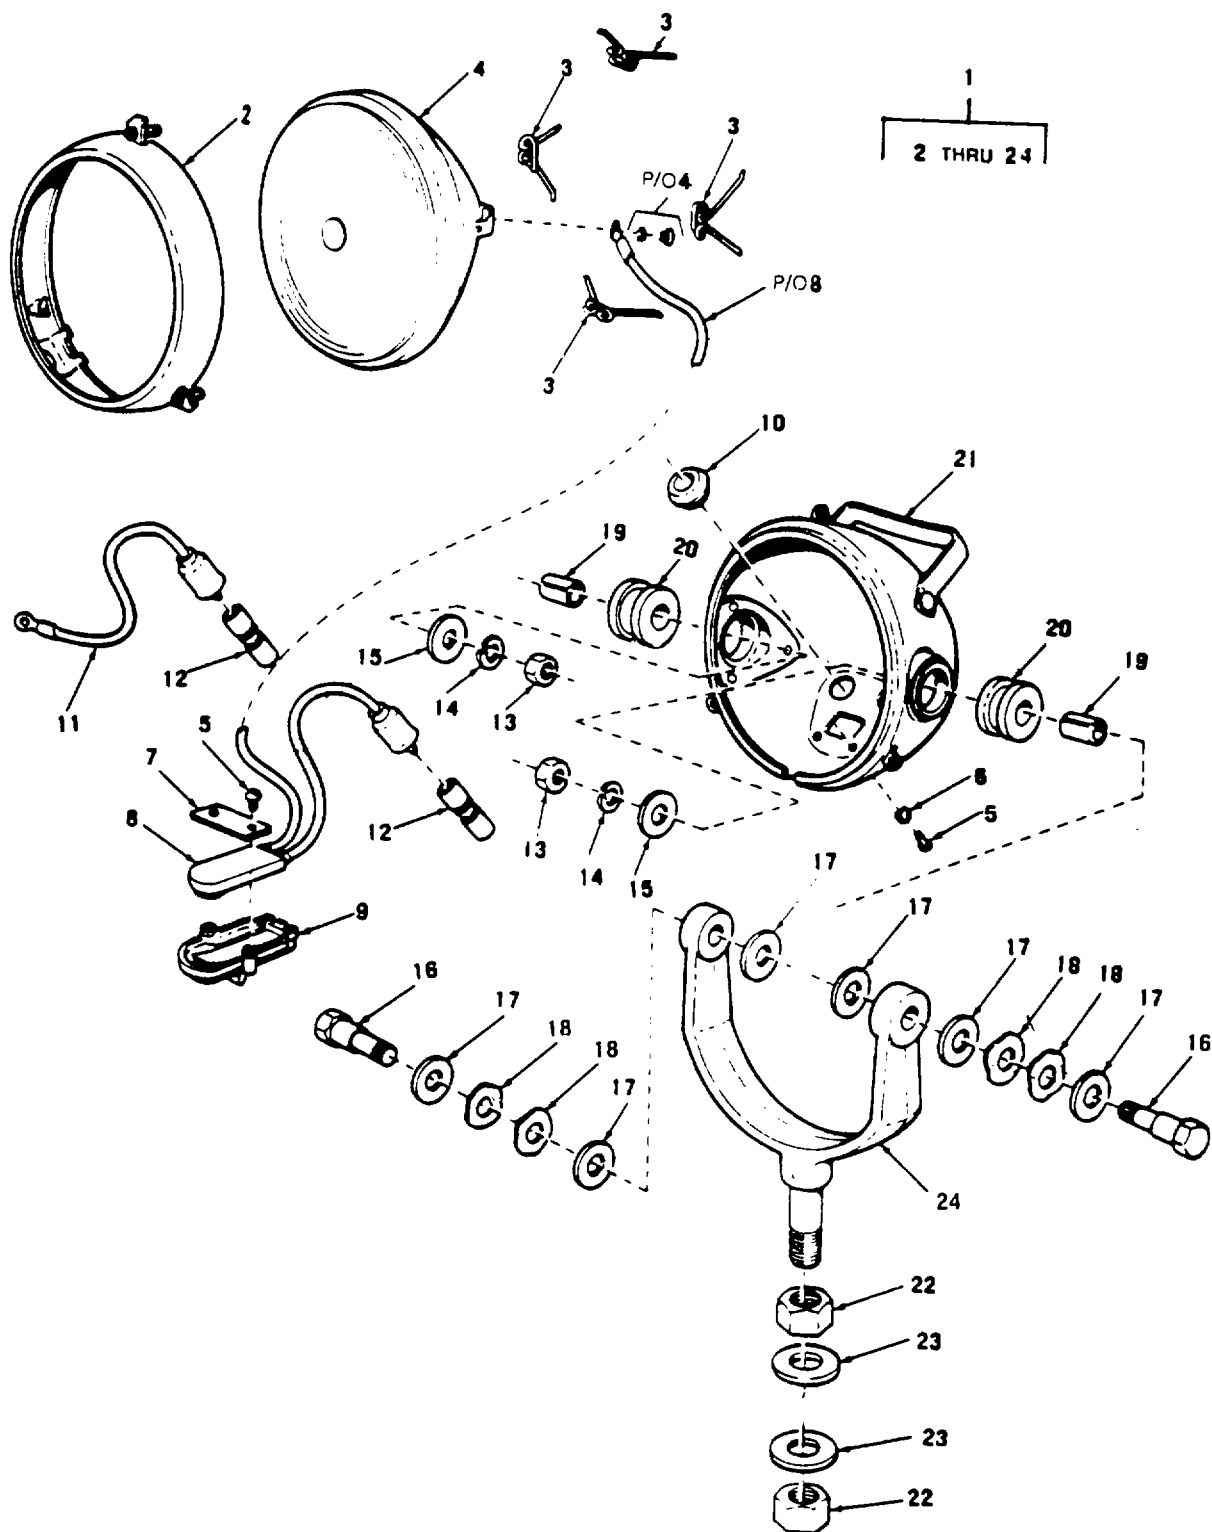


Figure 1. Floodlight Assembly.

(1) ITEM NO	(2) SMR CODE	(3) CAGEC	(4) PART NUMBER	(5) DESCRIPTION AND USABLE ON CODES(UOC)	(6) QTY
GROUP 01 TRANSPORTER ELECTRICAL SYSTEM					
FIG. 1 FLOODLIGHT ASSEMBLY					
1	PAC0Z	96906	M5S51320-1	FLOODLIGHT, ELECTRIC	2
				UOC:BDH, CYJ, DBE, DTN	
2	XAOZZ	73331	59409008	DOOR ASSEMBLY	4
				UOC: BHH, CYJ, DBE DTN	
3	PAOZZ	73331	5939090	CLIP, RETAINING	4
				UOC:BWH, CYJ DBE, DTN	
4	PAOZZ	08108	4572	LAMP, INCANDESCENT	1
				UOC:BNH, CYJ, DE, DTN	
5	XDOZZ	93906	MS35206-242	SCREW, MACHINE.....	8
				UOC: BWH, CYJ, DBE , DTN	
6	PAOZZ	96906	M5S35333-42	HASHER, LOCK.....	2
				UOC:BWH, CYJ, DBE, DTN	
7	XDOZZ	73331	5437920	RETAINER, SNITCH	4
				UOC: BWH, CYJ, DE, DTN	
8	XDOZZ	19207	8739573	SWITCH, SENSITIVE	4
				UOC:BWH, CYJ, DBE, DTN	
9	XAOZZ	19207	741388	HOUSING, RECEPTACLE	8
				UOC: BWH, CYJ, DBE, DTN	
10	PAOZZ	73331	924979	GROMMET	4
				UOC: BWH, CYJ DBE, DTN	
11	XDOZZ	19207	8739552	LEAD, ELECTRICAL, (FLOODLIGHT CABLE).....	8
				UOC: B4H , CYJ, DBE, DTN	
12	PAOZZ	73331	924980	ADAPTER, CONNECTOR.....	8
				UOC:BWH, CYJ DBE, DTN	
13	PAOZZ	96906	MS51967-3	NUT, PLAIN, HEXAGON	2
				UOC:BWH, CYJ, DBE, DTN	
14	PAOZZ	96906	MS35338-46	HASHER, LOCK.....	4
				UOC:BWH , CYJ , DBE, DTN	
15	PAOZZ	24617	5941543	WASHER, FLAT.....	8
				UOC: BWH, CYJ DBE, DTN	
16	PAOZZ	73331	5941542	BOLT, SHOULDER	4
				UOC: BWH, CYJ, DBE, DTN	
17	PAOZZ	19207	7416863	WASHER, FLAT.....	8
				UOC : DWH , CYJ, DBE , DTN	
18	PAOZZ	82679	WA132	WASHER, SPRING TENS TENSION	8
				UOC:BWH, CYJ, DBE, DTN	
19	XDOZZ	73331	7416861	SPACER	4
				UOC: BWH, CYJ, DBE, DTN	
20	PAOZZ	73331	5941544	GROMMET, NON METALLIC.....	4
				UOC: BWH, CYJ, DBE, DTN	
21	XAOZZ	73331	5937531	BODY, FLOODLIGHT	2
				UOC: BWH, CYJ, DBE, DT'	
22	PAOZZ	96906	MS51968-20	NUT, PLAIN, HEXAGON	4
				UOC: BWH, CYJ, DBE, DTN	
23	PAOZZ	73331	5941545	HASHER, FLAT.....	4
				UOC: BWH, CYJ , DBE, DTN	
2'i	XDOZZ	73331	5941536	BRACKET, FLOOD LAMP.....	2