


TM 55-1510-221-10

**TECHNICAL MANUAL
OPERATOR'S MANUAL
FOR
ARMY RC-12H AIRCRAFT**

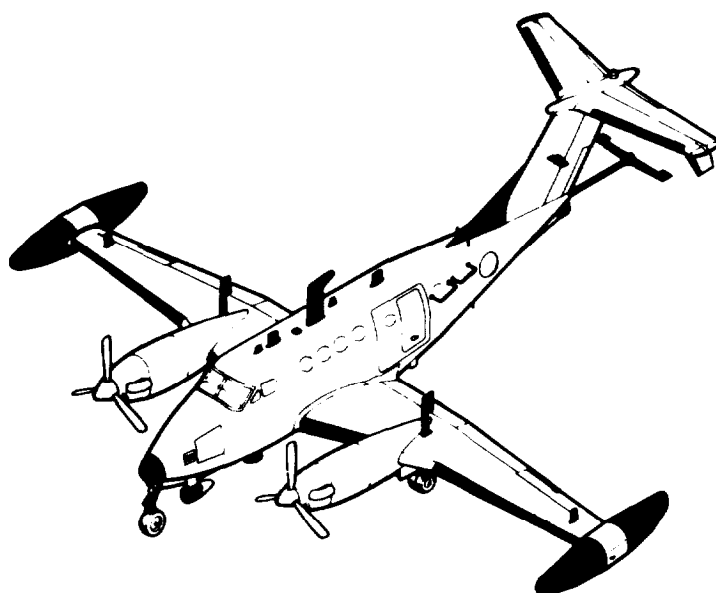

"Approved for public release; distribution is unlimited."

**HEADQUARTERS, DEPARTMENT
OF THE ARMY**

30 DECEMBER 1988

**This copy is a reprint which includes current
pages from Changes 1 through 4.**

WARNING DATA

TABLE OF CONTENTS

INTRODUCTION

**DESCRIPTION AND
OPERATION**

AVIONICS

MISSION EQUIPMENT

**OPERATING LIMITS AND
RESTRICTIONS**

**WEIGHT/BALANCE AND
LOADING**

PERFORMANCE DATA

NORMAL PROCEDURES

EMERGENCY PROCEDURES

REFERENCES

ABBREVIATIONS AND TERMS

ALPHABETICAL INDEX

TECHNICAL MANUAL

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C. 30 DECEMBER 1988

Operator's Manual
ARMY MODEL RC-12H

REPORTING OR ERRORS AND RECOMMENDING IMPROVEMENTS

You can help Improve this manual. If you find any mistakes or if you know of any way to improve the procedures, please let use know. Mail your letter. DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, U.S. Army Aviation and Missile Command. ATTN: AMSAM-MMC-LS-LP, Redstone Arsenal. AL 35898-5230. A reply will be furnished directly to you. You may also send in your comments electronically to our E-mail address at <ls-lp@redstone.army.mil>, or by fax at (205) 842-6546 or DSN 788-6546. Instructions for sending an Electronic DA Form 2028 may be found at the back of this manual immediately preceding the hard copy DA Forms 2028.

TABLE OF CONTENTS

		PAGE
CHAPTER 1	INTRODUCTION	1-1
CHAPTER 2	AIRCRAFT AND SYSTEMS DESCRIPTION AND OPERATION	2-1
Section	I. Aircraft	2-1
	II. Emergency equipment	2-19
	III. Engine and related systems	2-20
	IV. Fuel systems	2-27
	V. Flight controls	2-34
	VI. Propellers	2-42
	VII. Utility systems	2-51
	VIII. Heating, ventilation, cooling, and environmental control system	2-52
	IX. Electrical power supply and distribution system	2-58
	X. Lighting	2-67
	XI. Flight instruments	2-70
	XII. Servicing, parking, and mooring	2-77
CHAPTER 3.	AVIONICS	3-1
Section	I. General	3-1
	II. Communications	3-2
	III. Navigation	3-20
	IV. Transponder and radar	3-77
CHAPTER 4.	MISSION EQUIPMENT	4-1
Section	1. Mission avionics	4-1
	II. Aircraft survivability equipment	4-1
CHAPTER 5.	OPERATING LIMITS AND RESTRICTIONS	5-1
Section	I. General	5-1
	II. System limits	5-1
	III. Power limits	5-6
	IV. Loading limits	5-8
	V. Airspeed limits, maximum and minimum	5-6
	VI. Maneuvering limits	5-10
	VII. Environmental restrictions	5-10
	VIII. Other limitations	5-11
CHAPTER 6.	WEIGHT/BALANCE AND LOADING	6-1

TABLE OF CONTENTS (CONT'D)

		PAGE
<i>Section</i>	I. General	6-1
	II. Weight and balance	6-1
	III. Fuel/oil	6-14
	IV. Cargo loading	6-14
	V. Center of gravity	6-14
CHAPTER 7.	PERFORMANCE DATA	7-1
CHAPTER 8.	NORMAL PROCEDURES	8-1
<i>Section</i>	I. Mission planning	8-1
	II. Operating procedures and maneuvers	8-1
	III. Instrument flight	8-23
	IV. Flight characteristics	8-24
	V. Adverse environmental conditions	8-26
	VI. Crew duties	8-29
CHAPTER 9.	EMERGENCY PROCEDURES	9-1
<i>Section</i>	I. Aircraft systems	9-1
APPENDIX A.	REFERENCES	A-1
APPENDIX B.	ABBREVIATIONS AND TERMS	B-1
INDEX		INDEX-1

CHAPTER 1

INTRODUCTION

1-1. GENERAL.

These instructions are for use by the operator(s). They apply to the RC-12H aircraft.

1-2. WARNINGS, CAUTIONS, AND NOTES.

Warnings, cautions, and notes are used to emphasize important and critical instructions and are used for the following conditions:

WARNING

An operating procedure, practice, etc., which if not correctly followed, could result in personal injury or loss of life.

CAUTION

An operating procedure, practice, etc., which, if not strictly observed, could result in damage to or destruction of equipment.

NOTE

An operating procedure, condition, etc., which is essential to highlight.

1-3. DESCRIPTION.

This manual contains the best operating instructions and procedures for the RC-12H aircraft under most circumstances. The observance of limitations, performance, and weight/balance data provided is mandatory. The observance of procedures is mandatory except when modification is required because of multiple emergencies, adverse weather, terrain, etc. Your flying experience is recognized, and therefore, basic flight principles are not included. **THIS MANUAL SHALL BE CARRIED IN THE AIRCRAFT AT ALL TIMES.**

1-4. APPENDIX A, REFERENCES.

Appendix A is a listing of official publications cited within the manual applicable to and available for flight crews.

1-5. APPENDIX B, ABBREVIATIONS AND TERMS.

Appendix B is a listing of abbreviations and terms used throughout the manual.

1-6. INDEX.

The index lists, in alphabetical order, every titled paragraph, figure, and table contained in this manual. Chapter 7, Performance Data, has an additional index within the chapter.

1-7. ARMY AVIATION SAFETY PROGRAM.

Reports necessary to comply with the safety program are prescribed in AR 385-40.

1-8. DESTRUCTION OF ARMY MATERIEL TO PREVENT ENEMY USE.

For information concerning destruction of Army materiel to prevent enemy use, refer to TM 750-244-1-5.

1-9. FORMS AND RECORDS.

Army aviators flight record and aircraft maintenance records which are to be used by crew members are prescribed in DA PAM 738-751 and TM 55-1600-342-23.

1-10. EXPLANATION OF CHANGE SYMBOLS.

Changes, except as noted below, to the text and tables, including new material on added pages, are indicated by a vertical line in the outer margin extending close to the entire area of the material affected; exception: pages with emergency markings, which consist of black diagonal lines around three edges, may have the vertical line or change symbol placed along the inner margins. Symbols show current changes only. A miniature pointing hand symbol is used to denote a change to an illustration. However, a vertical line in the outer margin, rather than miniature pointing hands, is utilized when there have been extensive changes made to an illustration. Change symbols are not utilized to indicate changes in the following:

- a. Introductory material.
- b. Indexes and tabular data where the change cannot be identified.
- c. Blank space resulting from the deletion of text, an illustration or a table.
- d. Correction of minor inaccuracies, such as spelling, punctuation, relocation of material, etc., unless correction changes the meaning of instructive information and procedures.

1-11. AIRCRAFT DESIGNATION SYSTEM.

The designation system prescribed by AR 70-50 is used in aircraft designations as follows:

EXAMPLE RC-12H

R - Modified mission symbol (Reconnaissance)

C - Basic mission and type symbol (cargo)
12 - Design number
H - Series symbol

1-12. USE OF WORDS SHALL, WILL, SHOULD, AND MAY.

Within this technical manual the word “shall” is used to indicate a mandatory requirement. The word “should” is used to indicate a nonmandatory but preferred method of accomplishment. The word “may” is used to indicate an acceptable method of accomplishment. The word “will” is used to express a declaration of purpose and may also be used where simple futurity is required.

1-13. PLACARD ITEMS.

All placard items (switches, controls, etc.) are shown throughout this manual in capital letters.