

## LUBRICATION

### ORDER

**L05-4310-221-15**

17 APRIL 1962 (Supersedes L05-4310-221-15, 7 August 1961)

**COMPRESSOR, ROTARY: AIR; SKID MTD; GASOLINE  
DRIVEN; 125 CFM 100 PSI (INGERSOLL-RAND  
MODEL GER-125) W/CONTINENTAL  
ENGINE MODEL FS-162**

Reference: SM 10-1-C4-1

Intervals are based on normal operation. Reduce to compensate for abnormal operations and severe conditions. During inactive periods sufficient lubrication must be performed for adequate preservation.

Clean fittings before lubricating.

Relubricate after washing.

Clean parts with SOLVENT, dry-cleaning, or with OIL, fuel, Diesel. Dry before lubricating.

Dotted circle indicates drain below.

Drain crankcase only when hot after operation; replenish and check level when cool.

