

**LUBRICATION  
ORDER**

**L05-4310-241-15**

3 SEPTEMBER 1965 SUPERSEDES L05-4310-241-15, Dated 20 July 1962

**COMPRESSOR RECIPROCATING: AIR; 5 CFM; 175 PSI; HAND  
TRUCK MOUNTED; GASOLINE DRIVEN (CHAMPION PNEUMATIC  
MODEL LP-512-ENG) AND LP-512-ENG-1) COMPRESSOR  
RECIPROCATING: AIR; 5 CFM; 175 PSI; RECEIVER  
MOUNTED ELECTRIC DRIVEN (CHAMPION PNEUMATIC  
MODEL OEH-34-60-ENG-1) OEH-34-60-ENG-2,  
OEH-34-60-ENG-3, OEH-34-60-ENG-4)**

Reference: L05-2805-206-14, C 9100IL

Intervals are based on normal hours of operations. Reduce to compensate for abnormal operations and severe conditions. During inactive periods sufficient lubrication must be performed for adequate preservation.

Relubricate after washing.

Clean fittings before lubricating.

Clean parts with SOLVENT, dry-cleaning, or with OIL, fuel, Diesel. Dry before lubricating.


Lubricate points indicated by dotted arrow shafts on both sides of equipment.

Drain crankcase when hot. Fill and check level.

**LUBRICANT • INTERVAL**

**INTERVAL • LUBRICANT**

Air Compressor 2190  
Crankcase Fill Cap TEP  
(See Key)

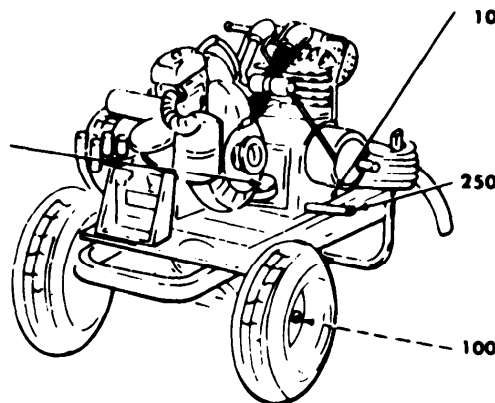

Air Compressor  
Crankcase Oil Level  
Sight Gage  
(Check level)

Air Compressor  
Crankcase Drain Cap  
(Drain and refill)

100 GAA Wheel Bearings  
(See note 3)

MODEL LP - 512 ENG  
MODEL LP-512-ENG-1