

**LUBRICATION
ORDER**

L05-4310-256-15
4 FEBRUARY 1966

**COMPRESSOR, RECIPROCATING: AIR, HAND TRUCK
MOUNTED, GASOLINE ENGINE: 8 CFM; 175 PSI
(CHAMPION PNEUMATIC MODEL LP-832
ENG-2) AND COMPRESSOR, RECIPRO-
CATING: AIR; 5 CFM; 175 PSI
(CHAMPION PNEUMATIC
MODEL LP-512-ENG-2)**

Reference: L05-2805-208-14, C91001L

Intervals are based on normal hours of operation. Reduce to compensate for abnormal operation and severe conditions. During inactive periods, sufficient lubrication must be performed for adequate preservation.

Relubricate after washing.

Clean fitting before lubricating.

Clean parts with SOLVENT, dry-cleaning, or with OIL, fuel, Diesel. Dry before lubricating.

Lubricate points indicated by dotted arrow shaft on both sides of equipment.

Drain crankcase and gearcase when hot. Fill and check level.

FOLD


FOLD

INTERVAL • LUBRICANT

LUBRICANT • INTERVAL

Air compressor
Crankcase Fill Plug
(See Key)

2190
TEP

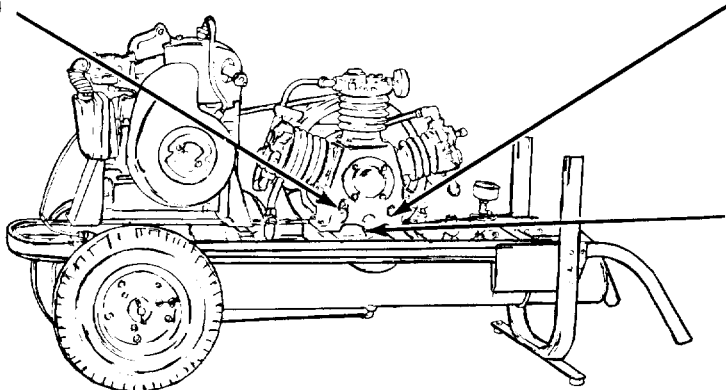

5 Air Compressor
Crankcase Oil Level
Sight Gage
(Check level)

250 Air Compressor
Crankcase Drain Plug
(Drain and refill)

MODEL LP-512 ENG-2
MODEL LP-832-ENG-2