

LUBRICATION
ORDER

L05-4310-275-12

12 FEBRUARY 1971 (Supersedes L05-4310-275-12, dtd 14 Oct 1968)

**COMPRESSOR, RECIPROCATING, G.E.D., 2 WHEEL MTD. PNEUMATIC
TIRES, W/TOWBAR, LUNETTE EYE, 4CFM, 3000PSI
(STEWART-WARNER MODEL 43040-301-01)**

Reference: L05-2805-257-12, and C9100-IL

Intervals are based on normal hours of operation. Adjust to compensate for abnormal operation and severe conditions. During inactive periods, sufficient lubrication must be performed for adequate preservation.

Clean fittings before lubricating.

Relubricate after washing or fording.

Clean parts with SOLVENT, dry-cleaning, or with OIL, fuel, Diesel. Dry before lubricating.

Lubricate points indicated by dotted arrow shafts on both sides of equipment.

Drain crankcase when hot. Fill and check level.

FOLD

FOLD

LUBRICANT ● INTERVAL

INTERVAL ● LUBRICANT

