

**LUBRICATION
ORDER**

L05-4310-277-12

22 AUGUST 1969 (Supersedes L05-4310-277-12, 14 June 1968)

**COMPRESSOR, RECIPROCATING, AIR, 15 CFM, 175 PSI, TANK
MOUNTED, GED, (CHAMPION PNEUMATIC MODEL HGR5-8M-
1). COMPRESSOR RECIPROCATING, AIR, 15 CFM, 175PSI,
TRAILER MOUNTED, GED. (CHAMPION PNEUMATIC
MODEL BGR-5M-1)**

Reference: C9100-IL, LO 5-2805-203-14

Intervals are based on normal hours of operation. Adjust to compensate for abnormal operation and severe conditions. During inactive periods, sufficient lubrication must be performed for adequate preservation.

Relubricate after washing.

Clean parts with SOLVENT, dry-cleaning, or with OIL, fuel, Diesel. Dry before lubricating.

Drain crankcase when hot. Fill and check level.

FOLD

FOLD

LUBRICANT • INTERVAL


INTERVAL • LUBRICANT

Compressor Crankcase
Fill Plug
(See Key.)

OE

Compressor Drain Cap
(Drain and Refill.)

500

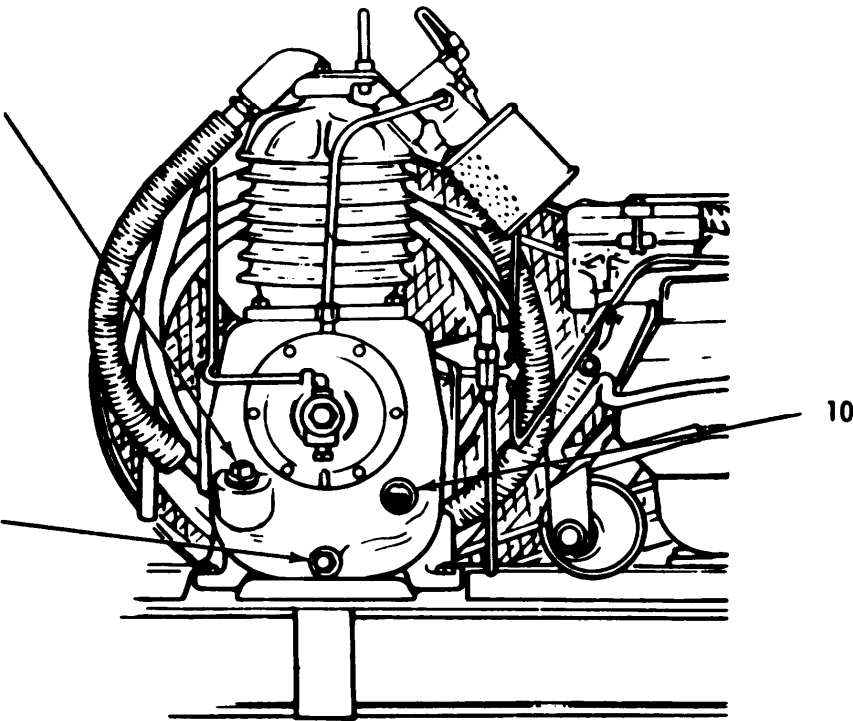

Compressor Oil Level
Sight Gage
(Check level.)

10