

LUBRICATION
ORDER

L05-4310-278-12

27 SEPTEMBER 1968

COMPRESSOR, ROTARY: AIR; FRAME MOUNTED, 2 WHEEL
PNEUMATIC TIRED, GASOLINE ENGINE; 60 CFM, 6.5 PSI
(HARRIS MODEL 4MV)

Reference: L05-2805-257-12 and C9100-IL

Intervals are based on normal hours of operations. Adjust to compensate for abnormal operations and severe conditions. During inactive periods, sufficient lubrication must be performed for adequate preservation.

Clean fittings before lubricating.

Relubricate after washing.

Clean parts with SOLVENT, dry cleaning, or with OIL, fuel, Diesel. Dry before lubricating.

Lubricate points indicated by dotted arrow shafts on both sides of equipment.

Drain gearcase when hot. Fill and check level.

FOLD

FOLD

LUBRICANT ● INTERVAL

INTERVAL ● LUBRICANT


Compressor Crankcase
Fill
(Remove relief fittings
at each end of compres-
sor, fill to proper level,
clean and install fitt-
ings)

Wheel Bearings GAA

100

2190
-TEP

1000

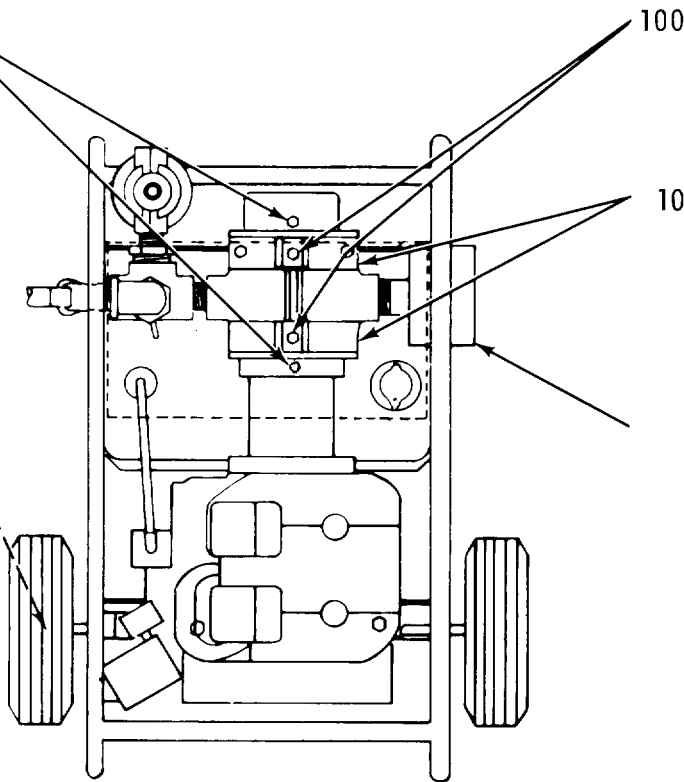

Compressor Drain Plug
(Drain and refill.)

Sight Level Gage
(Check level at each
end of compressor.)

Air Cleaner
(Dry type, no lubri-
cation required)