

**LUBRICATION
ORDER**

**L05-4310-335-12
28 OCTOBER 1968**

**COMPRESSOR, RECIPROCATING AIR, WHEEL MOUNTED, 2 WHEEL,
PNEUMATIC TIRES, G.E.D. 4 CFM, 3000 PSI,
(WALTER KIDDE MODEL 893811)**

Reference: L05-2805-257-12, and C9100-IL

Intervals are based on normal hours of operation. Adjust to compensate for abnormal operation and severe conditions. During inactive periods, sufficient lubrication must be performed for adequate preservation.

Clean fittings before lubricating.

Relubricate after washing.

Clean parts with SOLVENT, dry-cleaning, or with OIL, fuel, Diesel. Dry before lubricating.

Lubricate points indicated by dotted arrow shafts on both sides of equipment.

Drain crankcase when hot. Fill and check level.

LUBRICANT ● INTERVAL

INTERVAL ● LUBRICANT

