

**TECHNICAL MANUAL**

**OPERATOR, ORGANIZATIONAL, DIRECT AND GENERAL**

**SUPPORT MAINTENANCE MANUAL**

**COMPRESSOR, RECIPROCATING, G. E. D., 2 WHEEL MTD,**

**PNEUMATIC TIRES, W/TOWBAR, LUNETTE EYE,**

**4 CFM, 3000 PSI**

**(210.9000 KG PER SQ CM)**

**(STEWART-WARNER MODEL 43040-301-01)**

**NSN 4310-00-878-7969**

TECHNICAL MANUAL

No. 5-4310-275-14

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C., 17 June 1975

OPERATOR, ORGANIZATIONAL, DIRECT AND GENERAL  
SUPPORT MAINTENANCE MANUAL  
COMPRESSOR, RECIPROCATING, G. E. D., 2 WHEEL MTD,  
PNEUMATIC TIRES, W/TOWBAR, LUNETTE EYE,  
4 CFM, 3000 PSI (210.9000 KG PER SQ CM)  
(STEWART-WARNER MODEL 43040-301-01)  
NSN 4310-00-878-7969

| CHAPTER |                                                                          | Paragraph | Page |
|---------|--------------------------------------------------------------------------|-----------|------|
| Section | 1. INTRODUCTION                                                          |           |      |
|         | I. General. . . . .                                                      | 1-1       | 1-1  |
|         | II. Description and Tabulated Data.....                                  | 1-6       | 1-6  |
| CHAPTER | 2. OPERATING INSTRUCTIONS                                                |           |      |
| Section | I. Operating Procedure. . . . .                                          | 2-1       | 2-1  |
|         | II. Operation of Auxiliary Equipment.. . . .                             | 2-4       | 2-10 |
|         | III. Operation Under Unusual Conditions. . . . .                         | 2-7       | 2-10 |
| CHAPTER | 3. OPERATOR/CREW MAINTENANCE INSTRUCTIONS                                |           |      |
| Section | I. Lubrication Instructions. . . . .                                     | 3-1       | 3-1  |
|         | II. Preventive Maintenance Checks and Services. . . . .                  | 3-3       | 3-4  |
|         | III. Troubleshooting. . . . .                                            | 3-5       | 3-7  |
|         | IV. Maintenance Procedures. . . . .                                      | 3-7       | 3-7  |
| CHAPTER | 4. ORGANIZATIONAL MAINTENANCE INSTRUCTIONS                               |           |      |
| Section | I. Service Upon Receipt of Equipment. . . . .                            | 4-1       | 4-1  |
|         | II. Movement to New Work Site. . . . .                                   | 4-4       | 4-2  |
|         | III. Repair Parts, Special Tools, and Equipment. . . . .                 | 4-6       | 4-2  |
|         | IV. Preventive Maintenance Checks and Services. . . . .                  | 4-9       | 4-2  |
|         | V. Troubleshooting . . . . .                                             | 4-10      | 4-3  |
|         | VI. Radio Interference Suppression . . . . .                             | 4-12      | 4-4  |
|         | VII. Maintenance of Engine and Fuel System . . . . .                     | 4-17      | 4-5  |
|         | VIII. Axles, Brakes, and Wheels . . . . .                                | 4-21      | 4-9  |
|         | IX. Pneumatic Equipment . . . . .                                        | 4-26      | 4-12 |
|         | X. Body and Frame. . . . .                                               | 4-35      | 4-20 |
| CHAPTER | 5. DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE INSTRUCTIONS           |           |      |
| Section | I. Repair Parts, Special Tools, and Equipment. . . . .                   | 5-1       | 5-1  |
|         | II. Troubleshooting . . . . .                                            | 5-4       | 5-1  |
|         | III. General Maintenance . . . . .                                       | 5-6       | 5-3  |
|         | IV. Removal and Installation of Major Components and Assemblies. . . . . | 5-8       | 5-3  |
| CHAPTER | 6. PNEUMATIC SYSTEM REPAIR INSTRUCTIONS                                  |           |      |
| Section | I. Valve Assemblies . . . . .                                            | 6-1       | 6-1  |
|         | II. Filtering Assemblies . . . . .                                       | 6-5       | 6-8  |

\*This manual supersedes TM 5-4310-275-15, 29 July 1968, including all changes.

|           |                                                                                  | Paragraph | Page |
|-----------|----------------------------------------------------------------------------------|-----------|------|
| CHAPTER   | 7. AIR COMPRESSOR ASSEMBLY REPAIR                                                |           |      |
| Section   | I. Compressor Components . . . . .                                               | .7-1      | 7-1  |
|           | II. Air Compressor . . . . .                                                     | .7-5      | 7-3  |
| A PPENDIX | A. REFERENCES . . . . .                                                          |           | A-1  |
|           | B. MAINTENANCE ALLOCATION CHART . . . . .                                        |           | B-1  |
|           | C. BASIC ISSUE ITEMS LIST AND ITEMS TROOP INSTALLED OR AUTHORIZED LIST . . . . . |           | C-1  |

# LIST OF ILLUSTRATIONS

| <i>Figure</i> | <i>Title</i>                                                                                                              | <i>Page</i> |
|---------------|---------------------------------------------------------------------------------------------------------------------------|-------------|
| 1-1           | Compressor Assembly, Right Front View. . . . .                                                                            | 1-2         |
| 1-2           | Compressor Assembly, Left Rear View with Shipping Dimensions. . . . .                                                     | 1-3         |
| 1-3           | Compressor Assembly Components (Sheet 1 of 2). . . . .                                                                    | 1-4         |
| 1-3           | Compressor Assembly Components (Sheet 2 of 2). . . . .                                                                    | 1-5         |
| 1-4           | Pneumatic Schematic. . . . .                                                                                              | 1-10        |
| 1-5           | Wiring Diagram. . . . .                                                                                                   | 1-11        |
| 2-1           | Controls and Instruments (Sheet 1 of 2). . . . .                                                                          | 2-2         |
| 2-1           | Controls and Instruments (Sheet 2 of 2). . . . .                                                                          | 2-3         |
| 2-2           | Starting the Compressor Assembly. . . . .                                                                                 | 2-5         |
| 2-3           | Starting the Engine Assembly. . . . .                                                                                     | 2-6         |
| 2-4           | Stopping the Compressor Assembly. . . . .                                                                                 | 2-8         |
| 2-5           | Stopping the Engine Assembly. . . . .                                                                                     | 2-9         |
| 3-1           | Lubrication Chart (Sheet 1 of 2). . . . .                                                                                 | 3-2         |
| 3-1           | Lubrication Chart (Sheet 2 of 2). . . . .                                                                                 | 3-3         |
| 3-2           | Dehydrator Assembly and Desiccant Chamber, Removal and Installation. . . . .                                              | 3-5         |
| 3-3           | Air Line Filter and Back Pressure Valve, Removal and Installation. . . . .                                                | 3-6         |
| 3-4           | Fuel System Service. . . . .                                                                                              | 3-8         |
| 3-5           | Wheels, Tires and Tubes Service. . . . .                                                                                  | 3-9         |
| 3-6           | Air Compressor Service. . . . .                                                                                           | 3-10        |
| 3-7           | Air System Service. . . . .                                                                                               | 3-12        |
| 3-8           | Air Line Filter Service. . . . .                                                                                          | 3-13        |
| 4-1           | Fuel Tank, Removal and Installation. . . . .                                                                              | 4-6         |
| 4-2           | Exhaust Pipe, Removal and Installation. . . . .                                                                           | 4-8         |
| 4-3           | Tires, Wheels, Axle and Brake, Removal and Installation. . . . .                                                          | 4-10        |
| 4-4           | Air Discharge Hose Assembly, Disassembly and Reassembly. . . . .                                                          | 4-12        |
| 4-5           | Air Pressure Tank Safety Head Assembly and Pressure Relief Valve, Removal and Installation. . . . .                       | 4-13        |
| 4-6           | Air Line Filter and Back Pressure Valve, Removal and Installation. . . . .                                                | 4-13        |
| 4-7           | Separator and Filter Assembly, Pressure Relief Valve, Check Valve, Back Pressure Valve, Removal and Installation. . . . . | 4-14        |
| 4-8           | Instrument Panel Gages, Valves and Fittings, Removal and Installation. . . . .                                            | 4-16        |
| 4-9           | Air Lines and Fittings, Removal and Installation (Sheet 1 of 2). . . . .                                                  | 4-18        |
| 4-9           | Air Lines and Fittings, Removal and Installation (Sheet 2 of 2). . . . .                                                  | 4-19        |
| 4-10          | Towing Attachment and Support Stand, Removal and Installation. . . . .                                                    | 4-21        |
| 4-11          | Housing Sections, Removal and Installation. . . . .                                                                       | 4-23        |
| 5-1           | Air Pressure Tank, Removal and Installation. . . . .                                                                      | 5-5         |
| 5-2           | Air Compressor, Removal and Installation. . . . .                                                                         | 5-7         |
| 5-3           | Engine Assembly, Removal and Installation. . . . .                                                                        | 5-9         |
| 5-4           | Engine Mounting Brackets, Removal and Installation. . . . .                                                               | 5-10        |
| 5-5           | Support Stand Assembly, Disassembly and Reassembly. . . . .                                                               | 5-11        |
| 6-1           | Pressure Relief Valve, Disassembly and Reassembly. . . . .                                                                | 6-2         |
| 6-2           | Pressure Relief Valve Test Set-up. . . . .                                                                                | 6-3         |
| 6-3           | Check Valve, Disassembly and Reassembly. . . . .                                                                          | 6-4         |
| 6-4           | Check Valve, Test Set-Up. . . . .                                                                                         | 6-5         |
| 6-5           | Back Pressure Valve, Disassembly and Reassembly. . . . .                                                                  | 6-6         |
| 6-6           | Back Pressure Valve, Test Set-Up. . . . .                                                                                 | 6-7         |
| 6-7           | Dehydrator and Separator, Disassembly and Reassembly. . . . .                                                             | 6-9         |
| 6-8           | Separator and Filter Assembly, Disassembly and Reassembly. . . . .                                                        | 6-11        |
| 6-9           | Pneumatic Dump Valve Test Set-Up. . . . .                                                                                 | 6-13        |
| 7-1           | Intercooler Assembly, Aftercooler Assembly and Fan Assembly, Removal and Installation. . . . .                            | 7-2         |
| 7-2           | First Stage Cylinder and Piston, Removal and Installation. . . . .                                                        | 7-5         |
| 7-3           | Second and Third Stage Cylinders and Pistons, Removal and Installation. . . . .                                           | 7-7         |
| 7-4           | Crankcase Assembly, Disassembly and Reassembly. . . . .                                                                   | 7-11        |

LIST OF TABLES

| <i>Number</i> | <i>Title</i>                                                       | <i>Page</i> |
|---------------|--------------------------------------------------------------------|-------------|
| 3-1           | Operator/Crew Preventive Maintenance Checks and Services. . . . .  | 3-6         |
| 3-2           | Troubleshooting . . . . .                                          | 3-7         |
| 4-1           | Organizational Preventive Maintenance Checks and Services. . . . . | 4-3         |
| 4-2           | Troubleshooting . . . . .                                          | 4-3         |
| 5-1           | Troubleshooting . . . . .                                          | 5-1         |
| 5-2           | Repair and Replacement Standards. . . . .                          | 5-3         |

# CHAPTER 1

## INTRODUCTION

---

### Section I. GENERAL

#### 1-1. Scope

**a.** This manual contains instructions for the use of personnel maintaining the Compressor as allocated by the Maintenance Allocation Chart. It provides information on the operation,

lubrication, preventive maintenance checks and services and maintenance of equipment, accessories, and components. See Figures 1-1, 1-2 and 1-3 for compressor assembly.

1-2

TIE-DOWN RING (8)

FUEL TANK FILL

MANUAL CASE

TOWING  
ATTACHMENT

SUPPORT STAND

LOCK PIN

TS014351

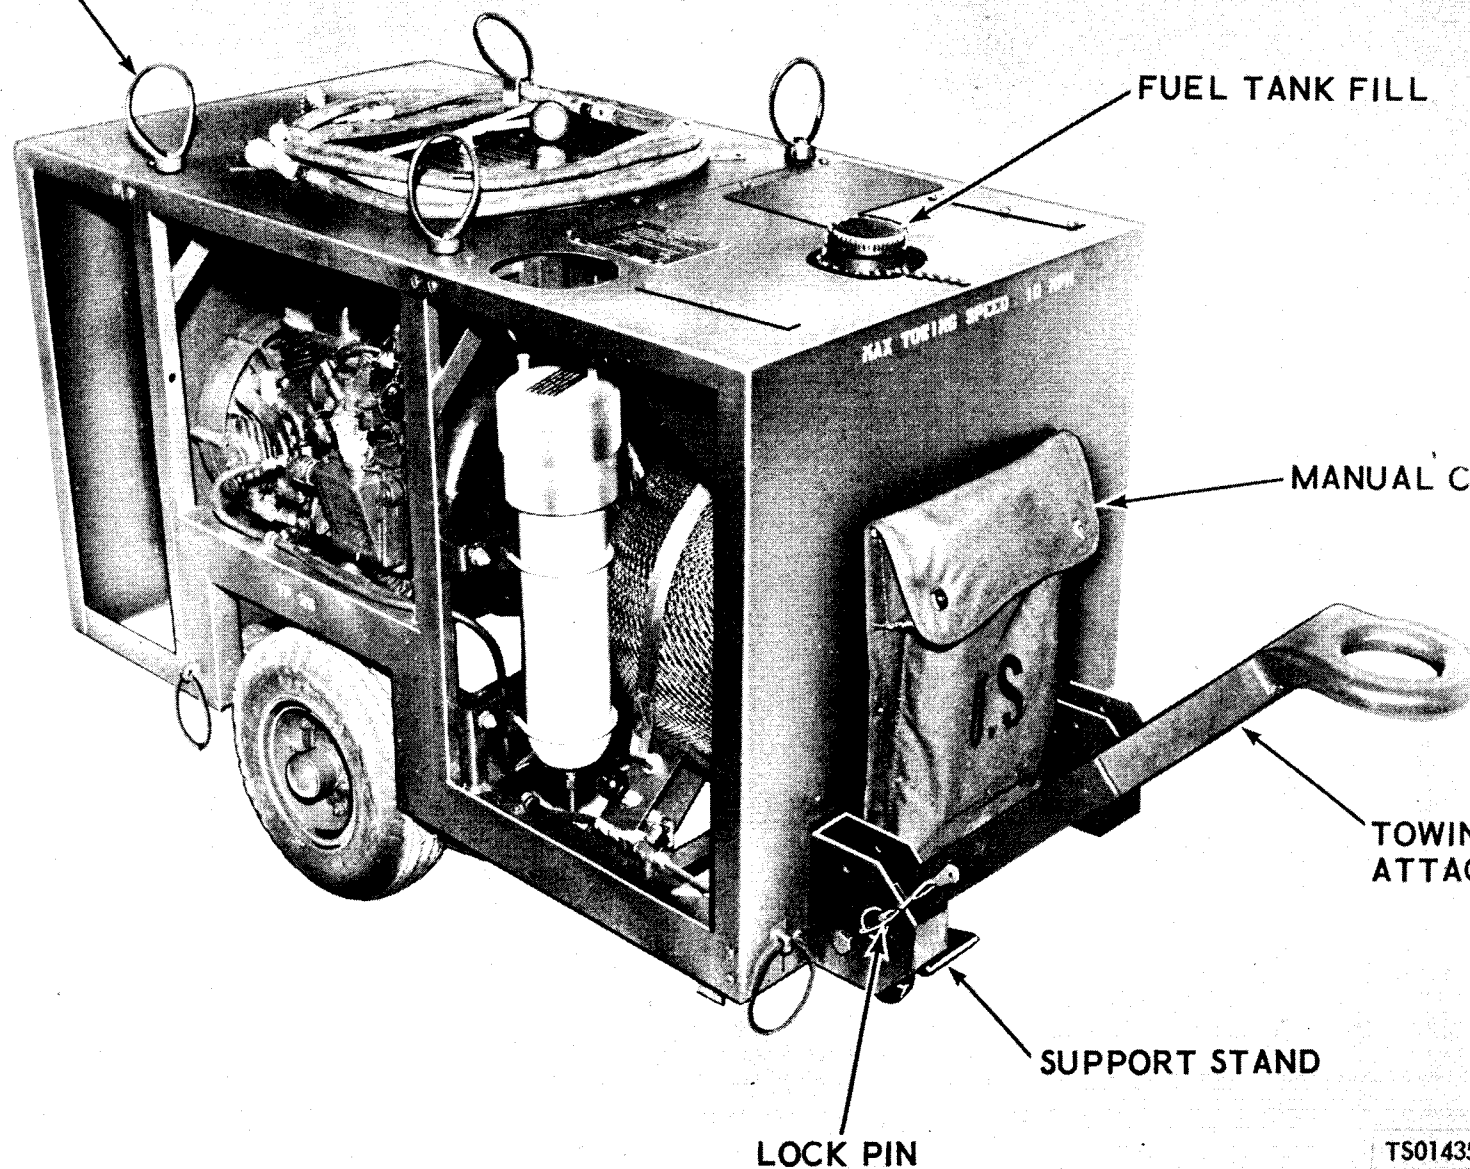


Figure 1-1. Compressor assembly, right front view.