
TECHNICAL MANUAL

**ORGANIZATIONAL, DIRECT SUPPORT AND GENERAL
SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL
TOOLS LISTS (INCLUDING DEPOT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS)**

**COMPRESSOR, ROTARY, AIR, DED,
250 CFM, 100 PSI, TRAILER MOUNTED
ARMY MODEL 14M250RPV
NSN 4310-00-256-9319**

DAVEY MODEL 14 M250RPV

**COMPONENT OF PNEUMATIC TOOL
AND COMPRESSOR OUTFIT
NSN 3820-00-950-8584**

TECHNICAL MANUAL }
TM 5-4310-345-24P }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, DC 21 May 1984

ORGANIZATIONAL, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS)

COMPRESSOR, ROTARY, AIR, DED, 250 CFM, 100 PSI, TRAILER MOUNTED
ARMY MODEL 14M250RPV
NSN 4310-00-256-9319
DAVEY MODEL 14M250RPV

COMPONENT OF PNEUMATIC TOOL AND COMPRESSOR OUTFIT
NSN 3820-00-950-8584
CURRENT AS OF 3 OCTOBER 1983

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: U.S. Army Tank-Automotive Command, ATTN: DRSTA-MB, Warren, MI 48090. A reply will be furnished to you.

TABLE OF CONTENTS

	Page	Illus Fig
SECTION I. INTRODUCTION	1	
SECTION II. REPAIR PARTS LIST	7	
GROUP 01 ENGINE		
0101-CRANKCASE, BLOCK AND CYLINDER HEAD	7	
CYLINDER BLOCK	7	1
CYLINDER HEAD	11	2
CYLINDER HEAD GASKETS	13	3

* This publication supersedes TM 5-4310-345-24P dated 20 October 1972, and all changes.

TABLE OF CONTENTS

	Page	Illus Fig
0102-CRANKSHAFT	15	
CRANKSHAFT	15	4
0103-FLYWHEEL ASSEMBLY	17	
FLYWHEEL	17	5
FLYWHEEL HOUSING	19	6
0104-PISTONS AND CONNECTING RODS	23	
PISTONS AND CONNECTING RODS	23	7
0105-VALVES, CAMSHAFTS, AND TIMING SYSTEM	25	
ROCKER ARM COVER	25	8
ROCKER ARM AND VALVE MECHANISM	27	9
CAMSHAFT	29	10
0106-ENGINE LUBRICATION SYSTEM	31	
ENGINE FRONT COVER AND OIL PUMP	31	11
OIL FILTER	33	12
OIL COOLER	35	13
OIL FILLER AND CRANKCASE BREATHER	37	14
OIL PAN AND DIPSTICK	39	15
0108-MANIFOLDS	41	
EXHAUST MANIFOLD	41	16
GROUP 03		
FUEL SYSTEM		
0301-FUEL INJECTOR	43	
INJECTOR CONTROL TUBE	43	17
FUEL INJECTOR RELATED PARTS	45	18
FUEL INJECTOR	47	19
0302-FUEL PUMPS	51	
FUEL PUMP	51	20
0304-AIR CLEANER	53	
ENGINE AIR CLEANER	53	21
0305-SUPERCHARGER, BLOWER, TURBOCHARGER OR ALTITUDE COMPENSATOR	55	
INLET SHUTOFF SOLENOID	55	22
AIR INLET HOUSING	57	23
BLOWER	59	24
BLOWER HUB SUPPORT	63	25
0306-TANKS, LINES, AND FITTINGS	65	
FUEL LINES AND FITTINGS	65	26
FUEL TANK LINES AND FITTING	67	27
0308-ENGINE SPEED GOVERNOR AND CONTROL	69	
GOVERNOR	69	28
GOVERNOR COVER	71	29
VARIABLE SPEED SPRING HOUSING	73	30
GOVERNOR WEIGHT HOUSING	75	31
0309-FUEL FILTERS	79	
FUEL STRAINER	79	32
FUEL FILTER	81	33
0311-ENGINE STARTING AIDS	83	
ENGINE STARTER AID KIT	83	34
0312-ACCELERATOR, THROTTLE OR CHOKE CONTROLS	85	
ENGINE STOP AND CHOKE CONTROL	85	35

TABLE OF CONTENTS

		Page	Illus Fig
GROUP 04	EXHAUST SYSTEM		
	0401-MUFFLER AND PIPES	87	
	MUFFLER	87	36
GROUP 05	COOLING SYSTEM		
	0503-WATER MANIFOLD, HEADERS, THERMOSTATS AND HOUSING GASKET	89	
	THERMOSTAT AND HOUSING	89	37
	0504-WATER PUMP	91	
	WATER PUMP DRIVE COMPONENTS	91	38
	WATER PUMP	93	39
	0505-FAN ASSEMBLY	97	
	FAN DRIVE PULLEY AND SUPPORT	97	40
GROUP 06	ELECTRICAL SYSTEM		
	0601-GENERATOR, ALTERNATOR	99	
	GENERATOR DRIVE AND MOUNTING COMPONENTS	99	41
	GENERATOR	101	42
	0602-GENERATOR REGULATOR (VOLTAGE)	105	
	VOLTAGE REGULATOR	105	43
	0603-STARTING MOTOR	109	
	STARTER	109	44
	0607-INSTRUMENT OR ENGINE CONTROL PANEL	113	
	INSTRUMENT PANEL AND GAGES	113	45
	0609-LIGHTS	117	
	CLEARANCE LIGHTS	117	46
	BLACKOUT, STOP AND TAILLIGHTS	119	47
	TAILLIGHT AND REFLECTORS	121	48
	0610-SENDING UNITS AND WARNING SWITCHES	123	
	FUEL LEVEL AND OIL PRESSURE SENDING UNITS	123	49
	0612-BATTERIES, STORAGE	125	
	BATTERY AND RELATED PARTS	125	50
	0613-HULL OR CHASSIS WIRING HARNESS	129	
	LIGHTING WIRING HARNESS	129	51
GROUP 15	FRAME, TOWING ATTACHMENTS, DRAWBARS AND ARTICULATION SYSTEMS		
	1501-FRAME ASSEMBLY	131	
	FRAME	131	52
GROUP 18	BODY, CAB, AND HOOD		
	1801-BODY, CAB, AND HOOD ASSEMBLIES	133	
	COMPRESSOR TO TRAILER MOUNTING COMPONENTS	133	53
	FRONT AND REAR CLEARANCE LIGHT GUARDS	135	54
	SIDE DOORS	137	55
	ROOF SUPPORTS AND SIDE PANELS	139	56
	1808-STOWAGE RACKS, BOXES, AND STRAPS	141	
	TOOL BOX AND STORAGE COMPARTMENT	141	57
GROUP 43	GAS, AIR, AND VACUUM SYSTEMS		
	4320-MANUAL CONTROLS	143	

TABLE OF CONTENTS

		Page	Illus Fig
	CONTROL LINKAGE	.143	58
GROUP 47	GAGES (NON ELECTRICAL), WEIGHING AND MEASURING DEVICES		
	4702-GAGES, MOUNTINGS, LINES AND FITTINGS	145	
	MECHANICAL GAGES	.145	59
GROUP 50	PNEUMATIC EQUIPMENT		
	5000-AIR COMPRESSOR ASSEMBLY	149	
	COMPRESSOR	149	60
	5001-CRANKCASE, BLOCK, AND CYLINDER HEAD	153	
	COMPRESSOR MOUNTING COMPONENTS	153	61
	5006-LUBRICATION SYSTEM	155	
	OIL SEPARATOR CONNECTING AND MOUNTING COMPONENTS	155	62
	OIL SEPARATOR	159	63
	COMPRESSOR OIL LINES AND FITTINGS	163	64
	COMPRESSOR OIL FILTER	165	65
	BY-PASS	167	66
	5008-AIR INTAKES	171	
	COMPRESSOR AIR CLEANER:	171	67
	5009-UNLOADER SYSTEM COMPONENTS	173	
	AIR LINES AND REGULATOR MOUNTING COMPONENTS	173	68
	PRESSURE REGULATOR	175	69
	BLOWDOWN VALVE	177	70
	5010-COMPRESSOR COOLING AND HEATING	179	
	FAN GUARD, RADIATOR AND OIL COOLER	179	71
	5013-HOSE REEL	181	
	HOSE REEL ASSEMBLY	181	72
GROUP 95	GENERAL USE STANDARDIZED PARTS		
	9501-BULK MATERIEL	183	
	BULK MATERIEL	183	BULK
SECTION III.	SPECIAL TOOLS LIST (NOT APPLICABLE)		
SECTION IV.	NATIONAL STOCK NUMBER AND PART NUMBER INDEX	185	

ORGANIZATIONAL, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS)

SECTION I. INTRODUCTION

1. Scope.

This manual lists and authorizes spares and repair parts; special tools; special Test, Measurement, and Diagnostic Equipment (TMDE); and other special support equipment required for performance of organizational, direct support, and general support maintenance of the Compressor, Rotary, Air. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the Source, Maintenance and Recoverability (SMR) codes.

2. General.

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in NSN sequence.

b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL for the performance of maintenance.

c. Section IV. National Stock Number and Part Number Index. A list, in National Item Identification Number (NNIIN) sequence, of all National Stock Numbers (NSN) appearing in the listings, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.


3. Explanation of Columns.

a. Illustration (Column (1)). This column is divided as follows:

(1) ((a) FIG NO.) Figure Number. Indicates the figure number illustrating an exploded view of a functional group.

(2) ((b) ITEM NO.). Indicates the number used to identify items called out in the illustration.

b. SMR CODE (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

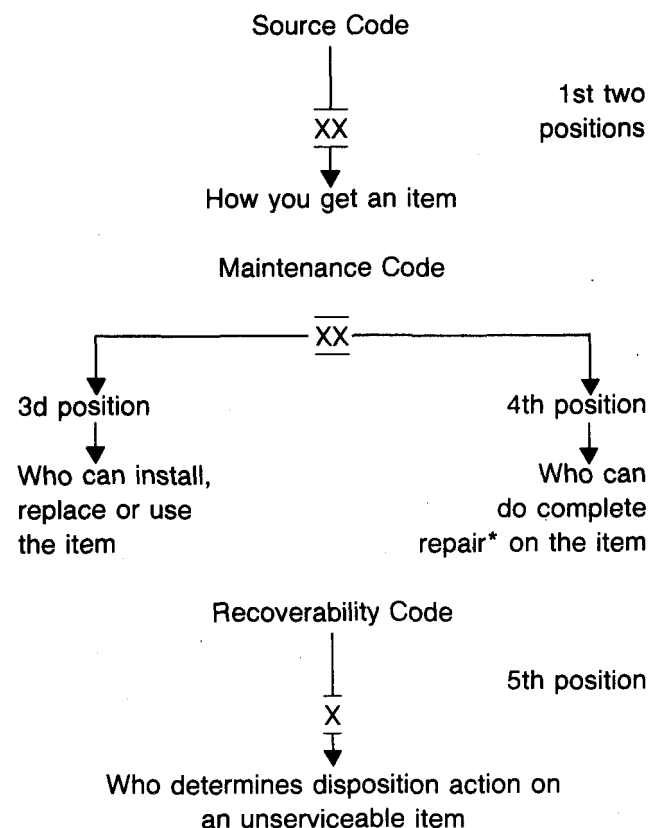

*Complete Repair: Maintenance capacity, capability, and authority to perform all the corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how you get an item needed for maintenance, repair, or overhaul of an end item/equipment. Source codes are always the first two positions of the SMR code. Explanations of source codes follow:

Code	Explanation
------	-------------

PA PB PC PD PE PF PG	} Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3d position of the SMR code.
--	--

KD KF KB	} Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3d position of the SMR code. The complete kit must be requisitioned and applied.
----------------	--

MO-(Made at Org Category) MF-(Made at DS Category) MH-(Made at GS Category) MD-(Made at Depot)	} Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by NSN in the Description column and listed in the Bulk Material group in the repair parts list in this manual. If the item is authorized to you by the 3d position code of the SMR code, but the source code indicates it is made at a higher category, order the item from the higher category of maintenance.
--	---

AO-(Assembled by Org Category) AF-(Assembled by DS Category)	} Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the
---	--

AH-(Assembled by GS Category) AD-(Assembled by Depot)	} category of maintenance indicated by the source code. If the 3d position code of the SMR code authorizes you to replace the item, but the source code indicates the item is assembled at a higher category, order the item from the higher category of maintenance.
---	--

XA Do not requisition an "XA"-coded item. Order its next higher assembly. (Also, refer to the NOTE below.)

XB If an "XB" item is not available from salvage, order it using the FSCM and part number given.

xC Installation drawing, diagram, instruction sheet, field service drawing, that is identified by manufacturer's part number. Not applicable.

XD Item is not stocked. Order an "XD"-coded item through normal supply channels using the FSCM and part number given, if no NSN is available.

NOTE: Cannibalization or controlled exchange, when authorized, may be used as a source of supply for items with the above source codes, except for those source coded "XA".

(2) Maintenance Code. Maintenance codes tell you the category(s) of maintenance authorized to USE and REPAIR support items. The maintenance codes are entered in the third and fourth positions of the SMR Code as follows:

(a) The maintenance code entered in the third position tells you the lowest maintenance category authorized to remove, replace, and use an item. The maintenance code entered in the third position will indicate authorization to one of the following categories of maintenance.