

TECHNICAL MANUAL

**ORGANIZATIONAL, DIRECT SUPPORT
AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST**

**COMPRESSOR, RECIPROCATING: AIR:
ELECTRIC MOTOR DRIVEN,
5 CFM AT 175 PSI
(C & H DISTRIBUTORS MODEL 20-904)
NSN 4310-01-064-2386
(C & H DISTRIBUTORS MODEL 20-911)
NSN 4310-01-125-0934**

Approved for public release; distribution is unlimited.

*This manual supersedes TM 5-4310-362-24P, 27 June 1983.

HEADQUARTERS, DEPARTMENT OF THE ARMY
24 AUGUST 1989

TECHNICAL MANUAL

No. 5-4310-362-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 24 August 1989

**Organizational, Direct Support and General Support Maintenance
Repair Parts and Special Tools List**

for
COMPRESSOR, RECIPROCATING: AIR: ELECTRIC MOTOR DRIVEN, 5 CFM AT 175 PSI
(C&H DISTRIBUTORS MODEL 20-904) NSN 4310-01-064-2386
(C&H DISTRIBUTORS MODEL 20-911) NSN 4310-01-125-0934

Current as of May 10, 1989

REPORTING OF ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistake or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms) or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Troop Support Command, ATTN: AMSTR-MCTS, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. A reply will be furnished directly to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

	Page	Illust/ Figure
Section I.	Introduction1	
Section II.	Repair Parts List	
Group 01	Motor Controls	
	Motor Controls and Wiring 1-1	1
	Motor Starter 2-1	2
Group 02	Compressor Drive	
	Compressor Drive 3-1	3
Group 03	Compressor Assembly	
	Compressor Assembly, Model 20-904 4-1	4
	Compressor Assembly, Model 20-911 5-1	5
	Intake and Exhaust Valves, Model 20-904 6-1	6
	Intake and Exhaust Valves, Model 20-911 7-1	7
	Centrifugal Unloader, Model 20-904 8-1	8
	Pistons, Connecting Rods and Cylinder Block, Model 20-904 9-1	9
	Pistons, Connecting Rods and Cylinder Block, Model 20-911 10-1	10
	Crankshaft, Bearing and Oil Seals, Model 20-904 11-1	11
	Crankshaft, Bearing and Oil Seals, Model 20-911 12-1	12
Group 04	Electric Motor	
	Electric Motor 13-1	13

*This manual supersedes TM 5-4310-362-24P, 27 June 1983.

		Page	Illust/ Figure
Group 05	Tank		
	Air Tank	14-1	14
Group 06	Air Discharge System.....	15-1	15
Group 07	Bulk Materials.....	Bulk-1	Bulk
Group 06	Casing and Bottom Panel		
Section III.	Special Tools List (Not Applicable)		
Section IV.	Cross Reference Index	I-1	
	National Stock Number Index	I-1	
	Part Number Index	I-3	
	Figure and Item Number Index	I-9	

Organizational, Direct Support, and General Support Maintenance
Repair Parts and Special Tools List

COMPRESSOR, RECIPROCATING: AIR: ELECTRIC MOTOR DRIVEN, 5 CFM at 175 PSI
(C & H DISTRIBUTORS MODEL 20-904) NSN 4310-01-064-2386
(C & H DISTRIBUTORS MODEL 20-911) NSN 4310-01-125-0934

SECTION I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE) ; and other special support equipment required for performance of organizational, direct support, general support maintenance of the Compressor, Reciprocating Air: Electric Motor Driven Section. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s) /figure(s).


b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-references Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item number in alphanumeric sequence and cross-references NSN, FSCM and part number.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

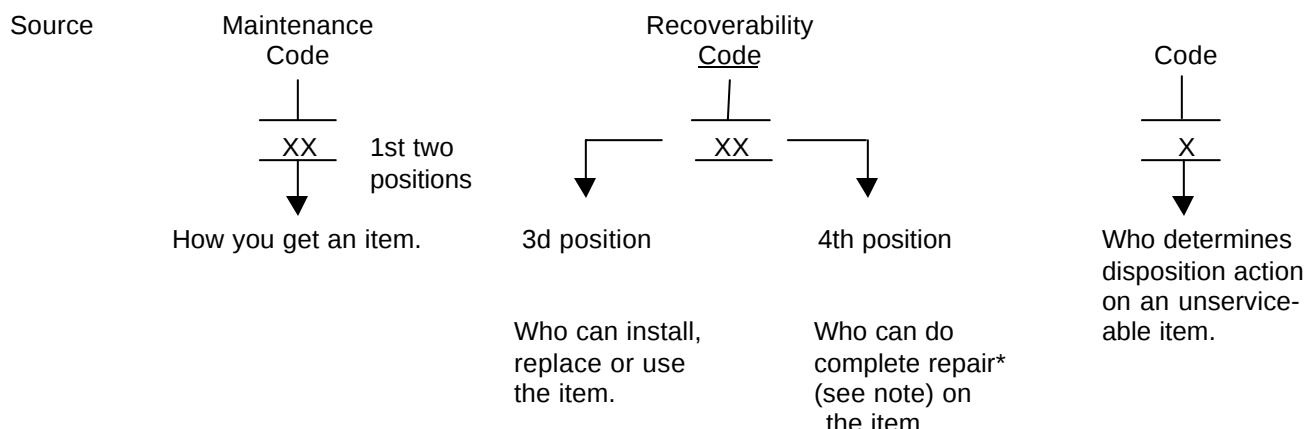

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

Code	Explanation
PA	Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3d position of the SMR code.
PB	
PC**	
PD	
PE	
PF	
PG	
KD	Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3d position of the SMR code. The complete kit must be requisitioned and applied.
KF	
KB	

Code	Explanation
MO-(Made at org. AVUM Level)	Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. If the item is authorized to you by the 3d position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.
MF-(Made at DS/ AVUM Level)	
MH-(Made at GS Level)	
ML-Made at Specialized Repair Activity (SRA)	
MD-(Made at Depot)	