

TECHNICAL MANUAL

**ORGANIZATIONAL, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS LIST
(INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS)**

**COMPRESSOR, AIR RECIPROCATING,
GASOLINE ENGINE DRIVEN
3500 PSI, 15 SCFM, WHEEL MOUNTED
(BAUER MODEL KA 15-03-P)
NSN 4310-01-087-4317**

Approved for public release; distribution is unlimited.

***This manual supersedes TM 5-4310-368-24P, 10 August 1982**

**HEADQUARTERS, DEPARTMENT OF THE ARMY
15 AUGUST 1990**

TECHNICAL MANUAL

NO. 5-4310-368-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON D.C., 15 August 1990

Organizational, Direct Support, and General Support Maintenance
Repair Parts and Special Tools List
(Including Depot Maintenance Repair Parts and Special Tools)

COMPRESSOR, AIR RECIPROCATING, GASOLINE DRIVEN
3500 PSI, 15 SCFM, WHEEL MOUNTED
(BAUER MODEL KA 15-03-P)
NSN 4310-01-087-4314

Current as of 6 March 1990

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MTS, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. A reply will be furnished directly to you.

TABLE OF CONTENTS

		Page	Illus/ Figure
Section I.	INTRODUCTION	1	
Section II.	REPAIR PARTS LIST	1-1	
Group 01.	EXHAUST MUFFLER Exhaust System	1-1	1
Group 02.	SERVICE HOSE AND FITTINGS Air Service Hose Assembly	2-1	2
Group 03.	COMPRESSOR ENCLOSURE Enclosure Assembly	3-1	3
Group 04.	FUEL LINES AND FITTINGS Tubing Installation	4-1	4
Group 06.	ALTERNATOR ASSEMBLY Alternator Mounting	5-1	5
	Alternator Assembly	6-1	6

☆This manual supersedes TM 5-4310-368-24P, 10 August 1982.

	Page	Illus/ Figure
Group 07. STARTER ASSEMBLY, ENGINE		
Starter Assembly	7-1	7
Group 08. ENGINE ASSEMBLY		
Engine Assembly Mounting	8-1	8
Spark Plugs and Magneto Mounting	9-1	9
Magneto	10-1	10
Carburetor	11-1	11
Fuel Pump Strainer	12-1	12
Fuel Pump	13-1	13
Governor	14-1	14
Governor Control	15-1	15
High Temperature Switch Assembly	16-1	16
Intake and Exhaust Manifold	17-1	17
Cylinder Block Assembly	18-1	18
Oil Pan	19-1	19
Oil Pump Assembly	20-1	20
Flywheel	21-1	21
Housing	22-1	22
Timing Gear Cover and Gears	23-1	23
Connecting Rod Assembly	24-1	24
Crankshaft Assembly	25-1	25
Crankcase Assembly	26-1	26
Oil Filter and Mounting	27-1	27
Air Cleaner Assembly	28-1	28
Group 09. CLUTCH ASSEMBLY AND HOUSING GROUP		
Clutch Linkage Assembly	29-1	29
Clutch Take-Off Assembly	30-1	30
Clutch Assembly	31-1	31
Group 10. PNEUMATIC SYSTEM		
Compressor Flywheel and Cooler	32-1	32
Compressor First Stage Valve and Head Assembly	33-1	33
Compressor Second Stage, Third Stage and Fourth Stage Valves and Heads	34-1	34
Compressor Pistons and Cylinders	35-1	35
Compressor Crankcase Assembly	36-1	36
Compressor Lower Crankcase	37-1	37
Crankshaft and Connecting Rods	38-1	38
Compressor Lubricating Oil Pump	39-1	39
Compressor Interfilter and Safety Valves	40-1	40
High Pressure Air Filter	41-1	41
Condensate Drain Valve	42-1	42
Priority Valve	43-1	43
Dehydrator	44-1	44
Fourth Stage Separator	45-1	45
Relief Valve	46-1	46

		Page	Illus/ Figure
Group 11.	INSTRUMENT AND CONTROL PANEL ASSEMBLY		
	Instrument and Control Panel Assembly	47-1	47
Group 13.	FUEL TANK ASSEMBLY		
	Fuel Tank Assembly	48-1	48
Group 14.	BATTERIES AND HOLDDOWN ASSEMBLY		
	Batteries and Holddown Assemblies.....	49-1	49
Group 15.	CHASSIS ASSEMBLY		
	Chassis Assembly	50-1	50
	Hub and Drum Assembly	51-1	51
	Brake Assembly	52-1	52
	Running Gear Assembly	53-1	53
Group 16.	WINTERIZATION EQUIPMENT		
	Heater Control Panel Assembly.....	54-1	54
	Heater Hoses installation	55-1	55
	Heater-to-Frame Assembly	56-1	56
	Heater Assembly	57-1	57
	Flame Switch Assembly	58-1	58
	Valve Assembly	59-1	59

Section III. SPECIAL TOOLS LIST (Not Applicable)

Section IV. NATIONAL STOCK NUMBER AND PART NUMBER INDEX

National Stock Number Index	I-1
Part Number Index	I-9
Figure And Item Number Index	I-36

SECTION I.

INTRODUCTION

1. SCOPE.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of organizational, direct support, and general support maintenance of the Air Compressor. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL.

In addition to Section I, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).


b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. National Stock Number and Part Number Index. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross- referenced to each illustration figure and item number appearance.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. Item No. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

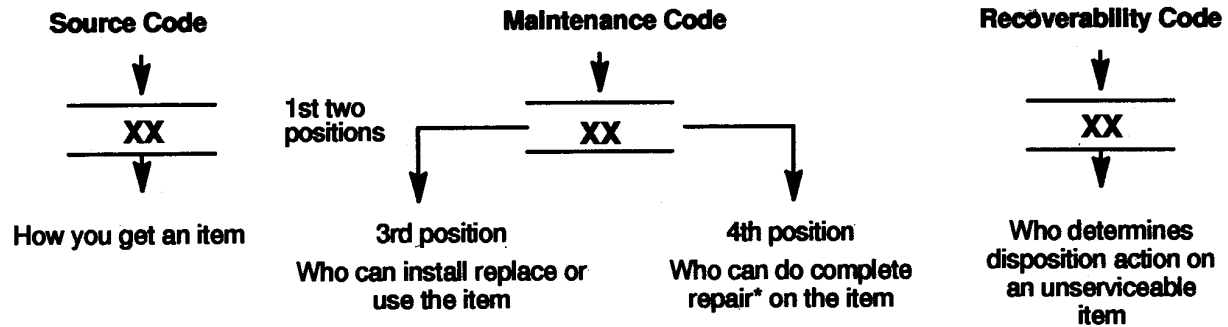

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) *Source Code.* The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

Code	Explanation
PA PB PC** PD PE PF PG	Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3rd position of the SMR code. **NOTE: Items coded PC are subject to deterioration.
KD KF KB	Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3rd position of the SMR code. The complete kit must be requisitioned and applied.

Code	Explanation
MO-(Made at unit AVUM Level)	Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. If the item is authorized to you by the 3rd position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.
MF-(Made at DS/AVUM Level)	
MH-(Made at GS Level)	
ML-(Made at Specialized Repair Activity(SRA))	
MD-(Made at Depot)	

Code	Explanation
AO-(Assembled by unit/AVUM Level)	Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the level of maintenance indicated by the source code. If the 3rd position code of the SMR code authorizes you to replace the item, but the source code indicates the items are assembled at a higher level, order the item from the higher level of maintenance.
AF-(Assembled by DS/AVIM Level)	
AH-(Assembled by GS Category)	
AL-(Assembled by SRA)	
AD-(Assembled by Depot)	

Code	Explanation
XA-	Do not requisition "XA"-coded item. Order its next higher assembly. (Also, refer to the NOTE below.)
XB-	If an "XB" item is not available from salvage, order it using the FSCM and part number given.
XC-	Installation drawing, diagram, instruction sheet, field service drawing, that is identified by manufacturer's part number.
XD-	Item is not stocked. Order an "XD"-coded item through normal supply channels using the FSCM and part number given, if no NSN is available.

NOTE

Cannibalization or controlled exchange, when authorized, may be used as a source of supply for items with the above source codes, except for those source coded "XA" or those aircraft support items restricted by requirements of AR 700-72.