

TECHNICAL MANUAL

ORGANIZATIONAL, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

COMPRESSOR, RECIPROCATING: AIR, TANK MOUNTED, GASOLINE ENGINE DRIVEN, 15 CFM, 175 PSI MODEL C=20X-80/6E NSN 4310-01-1 28-1 826

Approved for public release; distribution is unlimited.

*This manual supersedes TM 5-4310-372-24P, 16 August 1984, including all changes.

HEADQUARTERS, DEPARTMENT OF THE ARMY

10 OCTOBER 1989

TECHNICAL MANUAL

No. 5-4310-372-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY

WASHINGTON, D. C., 10 October 1989

**Organizational, Direct Support, and General Support Maintenance
Repair Parts and Special Tools List
for****COMPRESSOR, RECIPROCATING: AIR, TANK MOUNTED,
GASOLINE ENGINE DRIVEN, 15 CFM, 175 PSI
MODEL C-20X-80/6E
NSN 4310-01-128-1826**

Current as of June 22, 1989

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistake or if you know of a way to improve the procedures, please let us know. Mail your letter DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Troop Support Command, ATTN: AMSTR-MCTS, 4300 Goodfellow Boulevard, St. Louis, MO 63120-1798. A reply will be furnished directly to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		Page	Illustr/ Figure
Section I.	Introduction	1	
Section II.	Repair Parts List		
Group 01	Compressor Drive	1-1	1
Group 02	Fuel System	2-1	2
Group 03	Capacity Control	3-1	3
Group 04	Compressor Assembly	4-1	4
Group 05	Air Receiver	5-1	5
Group 06	Air Discharge System	6-1	6
Group 07	Engine Assembly	7-1	7
Section III.	Special Tools List (Not Applicable)		
Section IV.	Cross Reference Index	I-1	
	National Stock Number Index	I-1	
	Part Number Index	I-3	
	Figure and Item Number Index	I-8	

*This manual supersedes TM 5-4310-372-24P, 16 August 1994, Including all changes.

SECTION I

INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of organizational, direct support, and general support maintenance of the Air Compressor. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section 1, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).


b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE (column) for the performance of maintenance.

c. Section IV. National Stock Number and Part Number Index. A list, in National item identification number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

3. Explanation of Columns (Sections II and III).

a. Item No. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)) The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

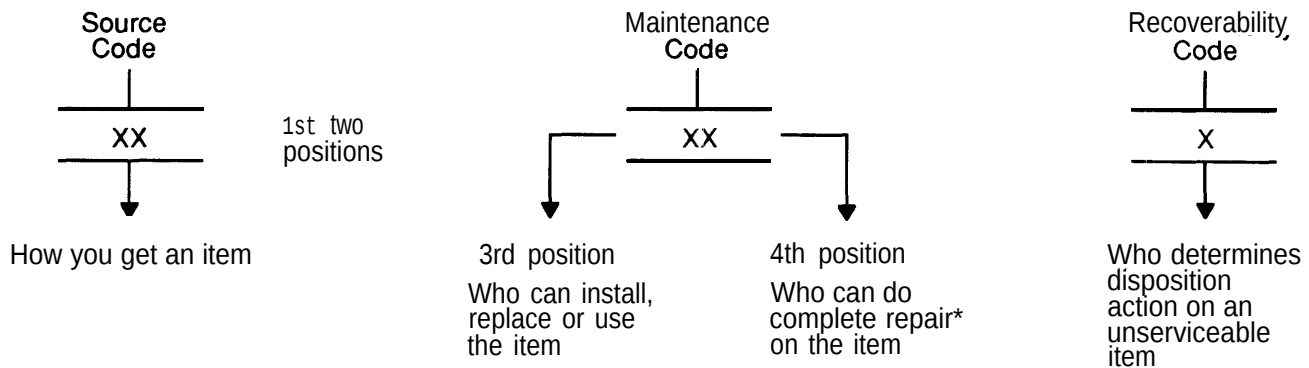

★ Complete Repair: Maintenance capacity, capability, and authority to perform all the corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) *Source code*. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

Code	Explanation
PA	Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3rd position of the SMR code. **NOTE: Items coded PC are subject to deterioration.
PB	
PC**	
PD	
PE	
PF	
PG	
KD	Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3rd position of the SMR code. The complete kit must be requisitioned and applied.
KF	
KB	

Code	Explanation
MO - (Made at unit/ AVUM Level)	Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in the RPSTL. If the item is authorized to you by the 3rd position code of the SMR code, the source code indicates it is made at a higher level, order the item from the higher level of maintenance.
MF - (Made at DS/ AVUM Level)	
MH - (Made at GS Level)	
ML - (Made at Spe- cialized Repair Activity)	
MD - (Made at Depot)	

Code	Explanation
AO - (Assembled by unit/AVUM Level)	Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the level of maintenance indicated by the source code. If the 3rd position code of the SMR code authorizes you to replace the item, but the source code indicates the item assembled at a higher level, order the item from the higher level of maintenance.
AF - (Assembled by DS/AVIM Level)	
AH - (Assembled by GS Category)	
AL - (Assembled by SRA)	
AD - (Assembled by Depot)	

Code	Explanation
XA _____	Do not requisition an "XA" - coded item. Order its next higher assembly. (Also refer to the NOTE below.)
XB _____	If an "X6" item is not available from salvage, order it using the FSCM and part number given.
XC _____	Installation drawing, diagram, instruction sheet, field service drawing, that is identified by manufacturer's part number.
XD _____	Item is not stocked, Order an "XD"- coded item through normal supply channels using the FSCM and part number given, if no NSN is available.

NOTE

Cannibalization or controlled exchange, when authorized, maybe used as a source of supply for items with the above source codes, except for those source coded "XA" or those aircraft support items restricted by requirements of AR 750-1.