

**TECHNICAL MANUAL**

**UNIT, FORWARD INTERMEDIATE AND  
REAR INTERMEDIATE MAINTENANCE  
REPAIR PARTS AND SPECIAL TOOLS LIST**

**FOR**

**COMPRESSOR UNIT,  
RECIPROCATING, 5CFM,  
175 PSI, ELECTRIC  
MOTOR DRIVEN**

**MODEL E23CV7A  
NSN: 4310-01-165-6676**

---

**HEADQUARTERS, DEPARTMENT OF THE ARMY**

**10 MARCH 1986**

## TECHNICAL MANUAL

HEADQUARTERS  
DEPARTMENT OF THE ARMY  
WASHINGTON, D.C. 10 March 1986

Unit, Forward Intermediate and  
Rear Intermediate Maintenance  
Repair Parts and Special Tools List  
FOR  
COMPRESSOR UNIT, RECIPROCATING, 5 CFM,  
175 PSI, ELECTRIC MOTOR DRIVEN

MODEL E23CV7A  
NSN 4310-01-165-6676

## REPORTING OF ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028, (Recommended Changes to Publications and Blank Forms) or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Troop Support Command, ATTN: AMSTR-MCTS, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. A reply will be furnished to you.

## TABLE OF CONTENTS

|                                                               | Page | Illus<br>Figure |
|---------------------------------------------------------------|------|-----------------|
| Section I INTRODUCTION .....                                  | 1    |                 |
| Section II REPAIR PARTS LIST .....                            | 1-1  |                 |
| Group 01 Motor Controls .....                                 | 1-1  |                 |
| Starter, Electric Motor and Wiring .....                      | 1-1  | 1               |
| Pressure Switch .....                                         | 2-1  | 2               |
| Group 02 Compressor Drive .....                               | 3-1  |                 |
| Belt Guard Assembly .....                                     | 3-1  | 3               |
| Matched V Belts Set and Drive Pulleys .....                   | 4-1  | 4               |
| Group 03 Compressor Assembly .....                            | 5-1  |                 |
| Compressor Mounting .....                                     | 5-1  | 5               |
| Air Cleaner .....                                             | 6-1  | 6               |
| Oil Filler, Cap, and Plug .....                               | 7-1  | 7               |
| Tube Assemblies .....                                         | 8-1  | 8               |
| Intake and Exhaust Valves .....                               | 9-1  | 9               |
| First Stage Piston, Connecting Rod, and Cylinder Block .....  | 10-1 | 10              |
| Second Stage Piston, Connecting Rod, and Cylinder Block ..... | 11-1 | 11              |
| Crankshaft, Bearing, and Oil Seals .....                      | 12-1 | 12              |
| Group 04 Electric Motor .....                                 | 13-1 |                 |
| Electric Motor Mounting .....                                 | 13-1 | 13              |
| Electric Motor .....                                          | 14-1 | 14              |
| Group 05 Air Receiver System .....                            | 15-1 | 15              |
| Relief Valve and Plug .....                                   | 16-1 | 16              |
| Group 06 Air Discharge System .....                           | 17-1 |                 |
| Air Discharge System .....                                    | 17-1 | 17              |
| Group 07 Data Plates .....                                    | 18-1 |                 |
| Data Plates .....                                             | 18-1 | 18              |

TABLE OF CONTENTS (Cont)

|             |                                             | Page   | Illus<br>Figure |
|-------------|---------------------------------------------|--------|-----------------|
| Group 08    | Bulk .....                                  | Bulk-1 | Bulk            |
| Section III | SPECIAL TOOLS LIST (NOT APPLICABLE)         |        |                 |
| Section IV  | NATIONAL STOCK NUMBERS AND REFERENCE NUMBER |        |                 |
|             | INDEX.....                                  | I-1    |                 |

**UNIT, FORWARD INTERMEDIATE AND  
REAR INTERMEDIATE MAINTENANCE  
REPAIR PARTS AND SPECIAL TOOLS LIST**

---

**Section I. INTRODUCTION**

**1. SCOPE.** This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit and intermediate maintenance of the Compressor Unit. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

**2. GENERAL.** In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

**a. Section II. Repair Parts List.** A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s) /figure(s).


**b. Section III. Special Tools List.** A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

**c. Section IV. National Stock Number and Part Number Index.** A list, in National item identification number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance.

**3. EXPLANATION OF COLUMNS (SECTIONS II AND III).**

**a. ITEM NO. (Column (1)).** Indicates the number used to identify items called out in the illustration.

**b. SMR Code (Column (2)).** The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

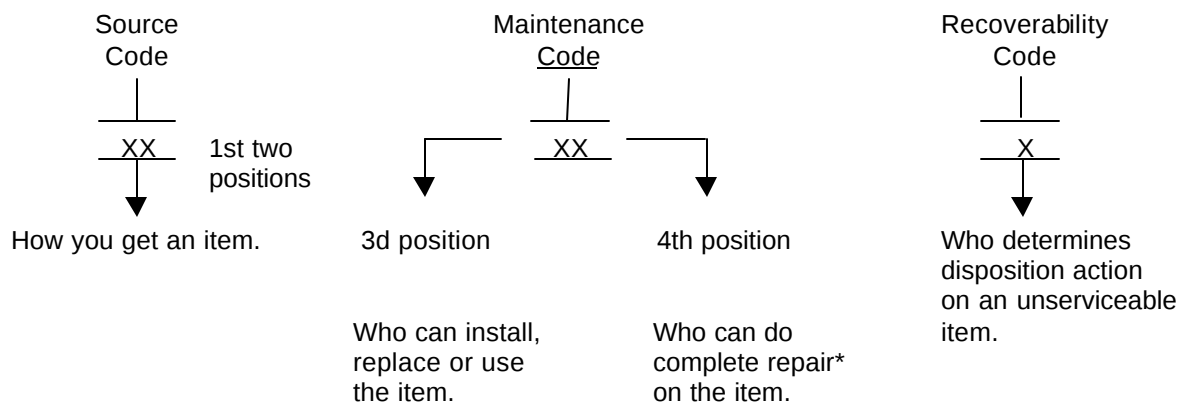

\*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

**(1) Source Code.** The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

| Code                                                                                                                                                                                                  | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PA<br>PB<br>PC**<br>PD<br>PE<br>PF<br>PG                                                                                                                                                              | Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3d position of the SMR code.                                                                                                                                                                                                                                                                                 |
| KD<br>KF<br>KB                                                                                                                                                                                        | <b>**NOTE: Items coded PC are subject to deterioration.</b>                                                                                                                                                                                                                                                                                                                                                                                                                       |
| MO - (Made at unit Maintenance Level)<br>MF - (Made at Intermediate (DS) Level)<br>MH - (Made at Intermediate (GS) Level)<br>ML - (Made at Specialized Repair Activity (SRA))<br>MD - (Made at Depot) | Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3d position of the SMR code. The complete kit must be requisitioned and applied.                                                                                                                                                                                                                               |
| AO - (Assembled by Unit Maintenance Level)<br>AF - (Assembled by Intermediate (DS) Level)<br>AH - (Assembled by Intermediate (GS) Level)<br>AL - (Assembled by SRA)<br>AD - (Assembled by Depot)      | Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in the RPSTL. If the item is authorized to you by the 3d position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance. |
|                                                                                                                                                                                                       | Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the level of maintenance indicated by the source code. If the 3d position code of the SMR code authorizes you to replace the item, but the source code indicates the items are assembled at a higher level, order the item from the higher level of maintenance.                                        |