

TECHNICAL MANUAL

**UNIT, INTERMEDIATE DIRECT SUPPORT AND
INTERMEDIATE GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST**

FOR

**COMPRESSOR UNIT, RECIPROCATING
5 CFM, 175 PSI
GASOLINE ENGINE DRIVEN,
HAND TRUCK MOUNTED
MODEL NUMBER ZPC 175/5
NSN 4310401-19040285**

This manual supersedes TM 5-4310-378-24P, 20 February 1987.

Approved for public release; distribution is unlimited

**This copy is a reprint which includes current
pages from Changes 1 and 2.**

HEADQUARTERS, DEPARTMENT OF THE ARMY

7 AUGUST 1989

TECHNICAL MANUAL
NO. 5-4310-378-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 7 August 1989

TECHNICAL MANUAL
Unit, Intermediate Direct Support and
Intermediate General Support
Maintenance Repair Parts and Special Tools List

for

COMPRESSOR UNIT, RECIPROCATING, 5 CFM
175 PSI, GASOLINE ENGINE DRIVEN, HAND TRUCK MOUNTED
MODEL NUMBER ZPC175/5
NSN 4310-01-190 285
Current as of 7 August 1969

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes, or if you know of a way to improve these procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual directly to: Commander, US Army Aviation and Troop Command, ATTN: AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. You may also submit your recommended changes by E-mail directly to <mpmt%avma28st-louis-emh7.army.mil>. A reply will be furnished directly to you. Instructions for sending an electronic 2028 may be found at the back of this manual immediately preceding the hard copy 2028.

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited

TABLE OF CONTENTS

		Page	Illust Figure
Section I.	INTRODUCTION	1	
Section II.	REPAIR PARTS LIST	1-1	
Group 01.	COMPRESSOR DRIVE		
	Drive Belt and Engine Pulley	1-1	1
Group 02.	COMPRESSOR ASSEMBLY		
	Compressor Assembly.....	2-1	2
	Compressor Cylinder Heads	3-1	3
	Compressor Cylinder	4.1	4
	Crankcase	5-1	5

* This manual supersedes TM 5-4310-378-24P, dated 20 February 1987.

		Page	Illust Figure
Group 03.	ENGINE ASSEMBLY		
	EMI Kit, Flywheel Shroud, and Flywheel	6-1	6
	Air Cleaner and Carburetor	7-1	7
	Governor Lever, Spring, and Rod Sets.....	8-1	8
	Recoil Starter Assembly.....	9-1	9
	Piston Connecting Rod, and Crankshaft.....	10-1	10
	Crankcase.....	11-1	11
Group 04.	AIR RECEIVER SYSTEM		
	Gauge, Vales and Air Tank	12-1	12
Group 05.	AIR DISCHARGE SYSTEM		
	Delivery Hose Assembly	13-1	13
Group 06.	HANDTRUCK ASSEMBLY		
	Wheels and Frame Assembly	14-1	14
Section III.	SPECIAL TOOLS LIST (Not Applicable)		
Section IV.	CROSS REFERENCE INDEXES		
	National Stock Number Index	I-1	
	Part Number Index	I-3	
	Figure and Item Number Index	I-10	

UNIT, INTERMEDIATE DIRECT SUPPORT AND
INTERMEDIATE GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST

SECTION I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Intermediate Direct Support and Intermediate General Support Maintenance of the Compressor Unit, 5 CFM. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are, listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).


b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-references Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item number in alphanumeric sequence and crossreferences NSN, FSCM and part number.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

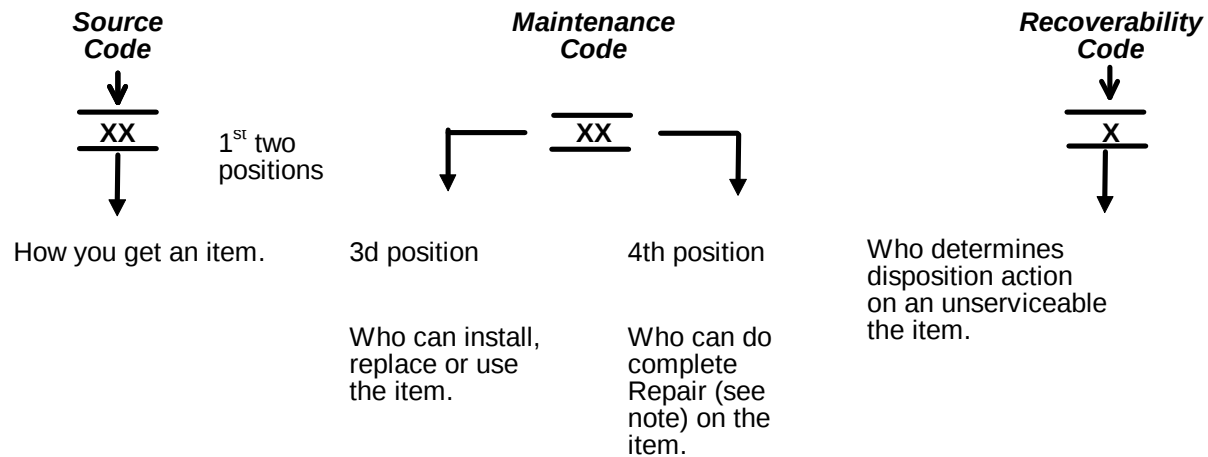

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

Code	Explanation
PA PB PC** PD PE PF PG	Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3d position of the SMR code.
KD KF KB	Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3d position of the SMR code. The complete kit must be requisitioned and applied.

Code	Explanation
MO--(Made at org. AVUM Level MF--(Made at DS/ AVUM Level MH--(Made at GS Level) ML--Made at Specialized Repair Activity (SRA)) MD--(Made at Depot)	Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. If the item is authorized to you by the 3d position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.