

TECHNICAL MANUAL

**UNIT INTERMEDIATE DIRECT SUPPORT
AND INTERMEDIATE GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST**

**COMPRESSOR UNIT, RECIPROCATING
NSN 4310-01-247-2584**

This copy is a reprint which includes current pages from Changes 1 and 2.

Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

15 NOVEMBER 1989

Technical Manual
No. 54310-382-23P

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, DC 15 November 1989

**UNIT, DIRECT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
FOR
COMPRESSOR UNIT, RECIPROCATING
NSN: 4310-01-247-2584**

Current as of 21 June 1989

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual to Commander, ATTN: AMSTR-MCTS, 4300 Goodfellow Blvd., St. Louis, MO 63120. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

	Page	Illus/ Figure
Section I. INTRODUCTION	1	
Section II. REPAIR PARTS LIST		
Group 01. Fuel System		
Fuel tank, lines, filter and fittings	1-1	1
Group 02. Compressor Drive		
Belt Guard Assembly	2-1	2
V Belts, drive pulley, and take-up belt assembly	3-1	3
Group 03. Engine Assembly		
Air cleaner	4-1	4
Carburetor	5-1	5
Fuel pump, oil gage rod, tube, drain, and muffler	6-1	6
Starter, clutch, and blower housing	7-1	7
Ignition system, governor linkage, and throttle linkage	8-1	8
Cylinder head	9-1	9
Engine assembly	10-1	10

TABLE OF CONTENTS (CONT)

	Page	Illus/ Figure
Group 04. Compressor Assembly		
Air cleaner assembly, oil filler cap, plug, and drain	11-1	11
Tube assemblies, engine speed control, fan, and pulley	12-1	12
Valves; intake and exhaust, and cylinder head	13-1	13
Piston and connecting rods	14-1	14
Crankshaft, bearings, seals, and cylinder block	15-1	15
Group 05. Air Discharge System		
Hose and inflator gage	16-1	16
Relief valves, air gage, drain cock, air valve (tank), and air tank	17-1	17
Section III. SPECIAL TOOL LIST	18-1	18
Section IV. Cross Reference Indexes	I-1	
National Stock Number Index	I-1	
Part Number Index	I-3	
Figure and Item Number Index	I-4	

UNIT, INTERMEDIATE DIRECT SUPPORT
AND INTERMEDIATE GENERAL SUPPORT
REPAIR PARTS AND SPECIAL TOOLS LIST

FOR

COMPRESSOR UNIT, RECIPROCATING
NSN 4310-01-247-2584

SECTION I. INTRODUCTION

1. SCOPE. This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit intermediate direct support and intermediate general support maintenance of the Reciprocating Compressor. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. GENERAL. In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in this section. Items listed are shown on the associated illustration(s)/figure(s).


b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV. Cross-references Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item number in alphanumeric sequence and cross references NSN, FSCM and part number.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instruction, as shown in the following breakout:

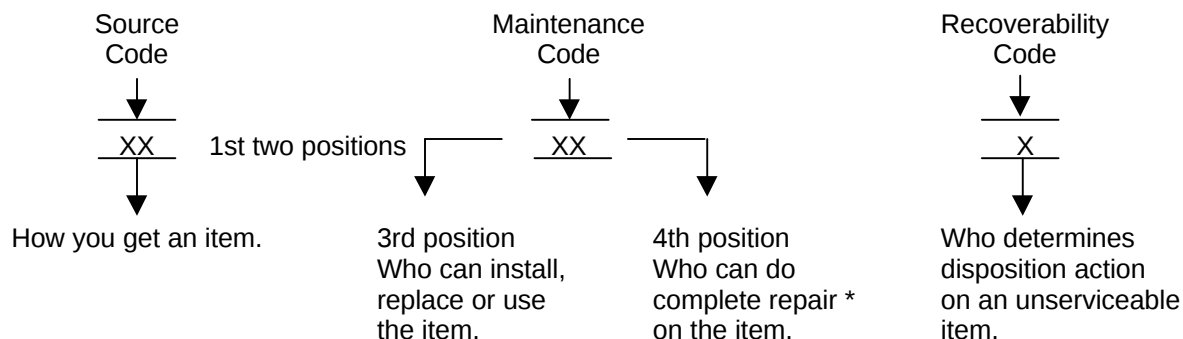

NOTE

***Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.**

- (1) **Source Code.** The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

Code

PA
PB
PC**
PD
PE
PF
PG

Explanation

Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3d position of the SMR code.

**NOTE: Items coded PC are subject to deterioration.

KD
KF
KB

Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3d position of the SMR code. The complete kit must be requisitioned and applied.

MO - (Made at org/
AVUM Level)
MF - (Made at DS/
AVUM Level)
MH - (Made at GS
Level)
ML - (Made at Spe-
cialized Repair
Activity
(SRA))
MD - (Made at
Depot)

Explanation

Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. If the item is authorized to you by the 3d position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.