


TECHNICAL MANUAL

OPERATOR'S, UNIT,
AND INTERMEDIATE DIRECT SUPPORT
MAINTENANCE MANUAL

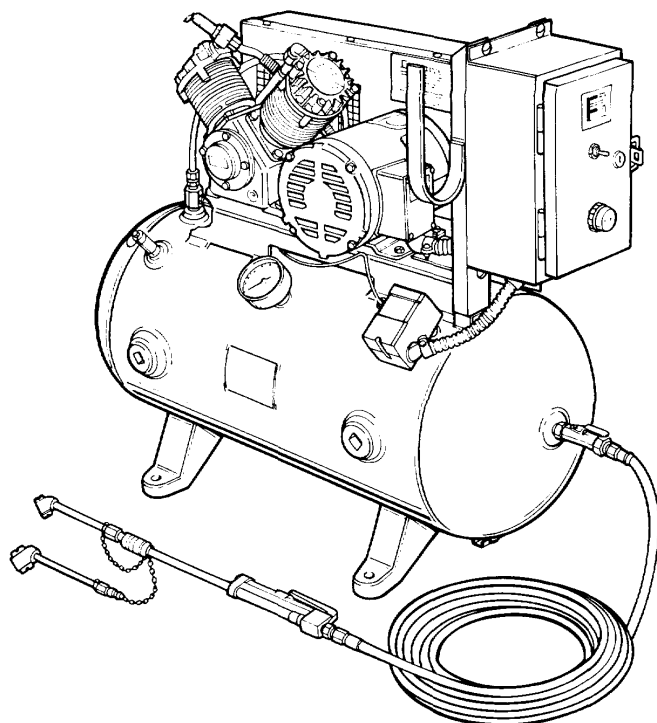

COMPRESSOR, RECIPROCATING, AIR:
ELECTRIC MOTOR DRIVEN
5 CFM, 175 PSI
C & H MODEL 20-918
NSN 4310-01-252-3957

TABLE OF
CONTENTS

INTRODUCTION

OPERATING
INSTRUCTIONS

UNIT MAINTENANCE
INSTRUCTIONS

INTERMEDIATE DIRECT
SUPPORT MAINTENANCE
INSTRUCTIONS

APPENDICES

INDEX

Approved for public release. Distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY
30 SEPTEMBER 1987

TECHNICAL MANUAL
TM 5-4310-385-13

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C. 30 September 1987

OPERATOR'S, UNIT AND INTERMEDIATE DIRECT SUPPORT
MAINTENANCE MANUAL
FOR
COMPRESSOR, RECIPROCATING, AIR:
ELECTRIC MOTOR DRIVEN
5 CFM, 175 PSI
NSN 4310-01-252-3957

Approved for public release. Distribution is unlimited.

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS


You can help improve this manual. If you find any mistake or if you know of a way to improve the procedures, please let us know. Mail your letter, D.A. Form 2028 (Recommended Changes to Publications and Blank Forms), or D.A. Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Troop Support ATTN: AMSTR-MCTS, 4300 Goodfellow Boulevard, St. Louis, MO 63120-1798. A reply will be furnished directly to you.

TABLE OF CONTENTS


	Page
CHAPTER 1. INTRODUCTION	1-1
Section I. General Information	1-1
Section II. Equipment Description	1-3
Section III. Technical Principles of Operation	1-7
CHAPTER 2. OPERATING INSTRUCTIONS	2-1
Section I. Description and Use of Operators Controls and Indicators	2-1
Section II. Operators Preventive Maintenance Checks and Services (PMCS)	2-2
Section III. Operation Under Usual Conditions	2-7
Section IV. Operation Under Unusual Conditions	2-11
CHAPTER 3. UNIT MAINTENANCE INSTRUCTIONS	3-1
Section I. Lubrication Instructions	3-1
Section II. Repair Parts, Special Tools, TMDE and Support Equipment	3-2
Section III. Service Upon Receipt of Equipment	3-2
Section IV. Unit Preventive Maintenance Checks and Services (PMCS)	3-5
Section V. Unit Troubleshooting	3-8
Section VI. Unit Maintenance Procedures	3-12
Section VII. Preparation for Storage.....	3-60
CHAPTER 4. INTERMEDIATE DIRECT SUPPORT MAINTENANCE INSTRUCTIONS	4-1
Section I. Troubleshooting	4-1
Section II. Direct Support Maintenance Instructions	4-3
APPENDICES	
APPENDIX A. REFERENCES	A-1
APPENDIX B. MAINTENANCE ALLOCATION CHART	B-1
APPENDIX C. COMPONENTS OF END ITEM AND BASIC ISSUE ITEMS LIST	C-1
APPENDIX D. ADDITIONAL AUTHORIZATION LIST	D-1
APPENDIX E. EXPENDABLE/DURABLE SUPPLIES AND MATERIALS LIST.....	E-1
INDEX	I-1

LIST OF TABLES

Table		Page
2-1.	Operator's Preventive Maintenance Checks and Services	2-3
2-2.	Proper Oil Velocity	2-9
3-1.	Proper Oil Viscosity	3-1
3-2.	Unit Preventive Maintenance Checks and Services	3-5
3-3.	Troubleshooting	3-9
4-1.	Troubleshooting	4-1

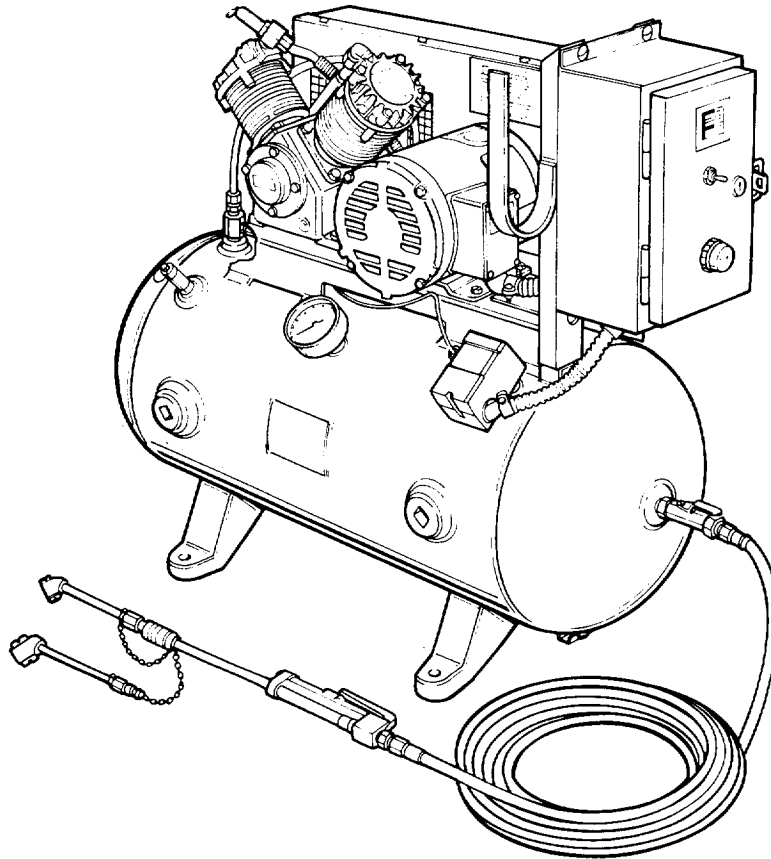

STARTER SIDE VIEW

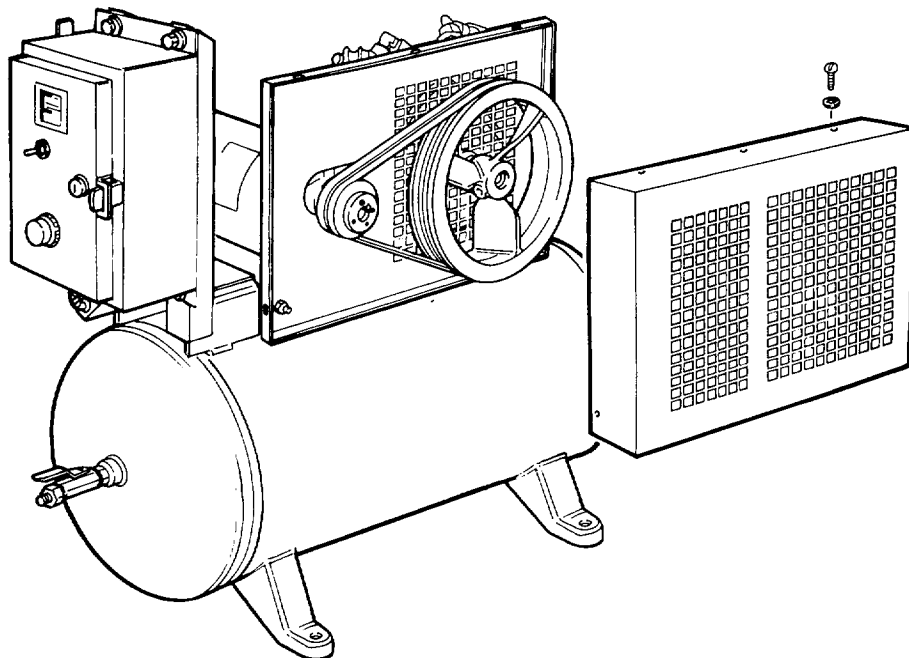

BELT GUARD VIEW

CHAPTER 1. INTRODUCTION

SECTION I. GENERAL INFORMATION

1-1. ORIENTATION VIEWS. The following two illustrations are provided to orient manual user with the overall air compressor and specific components.

1-2. SCOPE.

a. *Type of Manual:* Operator's, Unit, and Intermediate Direct Support Maintenance Manual.

b. *Model Number and Equipment Name:* Air Compressor, Reciprocating, Electric Motor Driven, 5 cfm, 175 psi, Model 20-918.

c. *Purpose of Equipment:* Stationary compressor used as a source of compressed air in normal operations at motor pools and vehicle maintenance shops.

NOTE

The term "compressor" will refer to the overall machine and the term "compressor unit" will refer to the specific air pump functioning as a compressor unit.

NOTE

To help find components and eliminate confusion, certain overall views of the air compressor will be called Belt Guard View and Starter View instead of "front" or "rear".

1-3. MAINTENANCE FORMS AND RECORDS. Equipment maintenance forms and procedures for their use are contained in DA PAM 738-750 update, The Army Maintenance Management System (TAMMS).

1-4. REPORTING EQUIPMENT IMPROVEMENT RECOMMENDATIONS (EIR'S). If your air compressor needs improvement, let us know. Send us an EIR. You, the user, are the only one who can tell us what you don't like about your equipment. Let us know why you don't like the design or performance. Put it on an SF 368 (Quality Deficiency Report). Mail it to us at Commander, Headquarters, U.S. Army Troop Support Command, ATTN: AMSTR-QX, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. We will send you a reply.

1-5. WARRANTY information. All components of the air compressor are warranted by C&H Distributors Inc. for a period of 12 months. The warranty starts on the date found in block 23, DA Form 2408-9, in the logbook. Report all defects in material or workmanship to your supervisor who will take appropriate action through your organizational maintenance shop.

1-6. DESTRUCTION OF ARMY MATERIAL TO PREVENT ENEMY USE. Refer to TM 750-244-3, Procedures for Destruction of Equipment to Prevent Enemy Use.