

TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
FOR**

**AIR COMPRESSOR, DIESEL ENGINE DRIVEN
20 CFM, 3200 PSI
MODEL K-20-D
(NSN 4310-01-227-1408)**

DISTRIBUTION STATEMENT A: Approved for public release; distribution is unlimited.

**HEADQUARTERS, DEPARTMENT OF THE ARMY
30 JULY 1993**

TECHNICAL MANUAL

NO 5-4310-386-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON D C, 30 July 1993

**Unit, Direct Support and General Support Maintenance
Repair Parts and Special Tools List
for**

**AIR COMPRESSOR, DIESEL ENGINE DRIVEN
20 CFM, 3200 PSI
MODEL K-20-D
(NSN 4310-01-227-1408)**

Current as of 14 May 1993

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of this manual direct to: Commander, US Army Aviation and Troop Command, ATTN' AMSAT-I-MP, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798 A reply will be furnished directly to you.

DISTRIBUTION STATEMENT A Approved for public release, distribution is unlimited.

TABLE OF CONTENTS

	PAGE	ILLUS/ FIGURE
Section I	Introduction	1
Section II	Repair Part List.....	1-1
Group 01	Guard Panels and Tray	
	Belt Guards.....	1
	Clutch Panel	2
	Side Panel	3
	Top Tray	4
Group 02	Control Panel Assembly	
	Controls and Indicators	5
	Panel Assembly	6
Group 03	Drive Belts and Pulleys	
	Drive Belts and Pulley.....	7
Group 04	Air Compressor Assembly	
	Air Compressor Assembly.....	8
	Lines and Fittings	9
	Air Intake Filter Assembly	10
	Oil Pump and Supply Line	11
	Oil Pressure Regulator Valve and Oil Return Line.....	12

	PAGE	ILLUS/ FIGURE
Fanwheel Guard	13-1	13
Flywheel/Fanwheel Assembly	14-1	14
Intercoolers and Aftercoolers	15-1	15
Manifold and Safety Valve (1st Stage)	16-1	16
Interfilter Block Assembly	17-1	17
Interfilter Safety Valves	18-1	18
Interfilter Drain Valves	19-1	19
Interfilter 2nd and 3rd Stage Housing	20-1	20
Oil, Water Separator Housing	21-1	21
Interfilter Heater Block	22-1	22
Valve Head 1st Stage Assembly	23-1	23
Valve Head 2nd Stage Assembly	24-1	24
Valve Head 3rd Stage Assembly	25-1	25
Valve Head 4th Stage Assembly	26-1	26
1st Stage Cylinder and Piston	27-1	27
2nd Stage Cylinder and Piston	28-1	28
3rd Stage Cylinder and Piston	29-1	29
4th Stage Cylinder and Piston	30-1	30
Safety Valve	31-1	31
Drive Belt and Guard	32-1	32
Tension Pulley Assembly	33-1	33
Crankcase Upper	34-1	34
Crankcase Cover	35-1	35
Crankshaft Assembly	36-1	36
Crankcase, Lower	37-1	37
Group 05 Air Purification Group		
Purification Cylinder	38-1	38
Pressure Maintaining Valve	39-1	39
Group 06 Fuel Tank		
Fuel Tank and Straps	40-1	40
Group 07 Engine		
Engine	41-1	41
Fuel Lines and Fittings	42-1	42
Fuel Feed Pump	43-1	43
Filter, Fuel	44-1	44
Injection Pump	45-1	45
Injectors	46-1	46
Injector Lines	47-1	47
Overflow Return Lines	48-1	48
Prefilter, Air	49-1	49
Air Filter Assembly, Oil Bath	50-1	50
Intake Manifold	51-1	51
Exhaust System	52-1	52
V-Belt Guard	53-1	53
V-Belt	54-1	54
Ducting, Air Cooling	55-1	55
Blower Assembly, Cooling Air	56-1	56
Wiring Harness	57-1	57
Alternator	58-1	58
Battery, Cover and Cables	59-1	59
Shut Down Device (Solenoid)	60-1	60

	PAGE	ILLUS/ FIGURE
Starter.....	61-1	61
Starter Aid	62-1	62
Oil Pump	63-1	63
Oil Filter Assembly	64-1	64
Dipstick and Fill Cap	65-1	65
Lube Oil Cooler	66-1	66
Flywheel and Clutch Carrier	67-1	67
Flywheel Housing Assembly	68-1	68
Rear Cover... ..	69-1	69
Rocker Cover	70-1	70
Rocker Arm/Push Rod.....	71-1	71
Push Rod Tubes.....	72-1	72
Cylinder Head Assembly	73-1	73
Cylinders.....	74-1	74
Piston and Rings	75-1	75
Connecting Rods.....	76-1	76
Camshaft and Cover	77-1	77
Cover, Front.....	78-1	78
Bearing Housings.....	79-1	79
Access Covers	80-1	80
Crankshaft	81-1	81
Crankcase	82-1	82
Group 08 Power Take Off Assembly		
Group 09 Clutch Assembly		
Power Take Off Assembly and Clutch Assembly	83-1	83
Group 10 Engine Mounts		
Engine Mount	84-1	84
Group 11 Frame		
Frame	85-1	85
Outer Frame	86-1	86
Group 12 Bulk Material	Bulk-1	
Section III Special Tools List		
Group 13 Special Tools	87-1	87
Section IV Cross Reference Index		
National Stock Number Index.....	I-1	
Part Number Index.....	I-4	
FIGURE and Item Number Index	I-31	

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST

Section I INTRODUCTION

1. SCOPE This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support and general support maintenance of the Air Compressor, 20 CFM, 3,200 PSI It authorizes the requisitioning, Issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes

NOTE

SMR codes in this RPSTL are shown only on parts that will be stocked for maintenance of the end Item. Other Items may be ordered using the CAGEC and Part Number. Maintenance and recoverability authorization for parts without SMR codes can be Identified by the next higher assembly or the Maintenance Allocation Chart (MAC) found in TM5-4310-386-14

2. GENERAL In addition to this section, Introduction, this Repair Parts and Special Tools List is divided into the following sections

a. Section II Repair Parts List A list of spares and repair parts authorized by this RPSTL for use In the performance of maintenance This list also includes parts which must be removed for replacement of the authorized parts lists are composed of functional groups In ascending alphanumeric sequence, with the parts In each group listed In ascending FIGURE and Item number sequence. Bulk materials are listed In item name sequence. Items are shown In the associated illustration(s)/FIGURE(s)


b. Section III. Special Tools List A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Section IV Cross - Reference Index A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list In alphanumeric sequence of all part numbers appearing In the listings. National stock numbers and part numbers are cross referenced to each illustration FIGURE and item number appearance The FIGURE and item number index lists FIGURE and item numbers In alphanumeric sequence and cross references NSN, CAGEC and part number.

3. EXPLANATION OF COLUMNS (SECTIONS II AND III).

a. ITEM NO (Column (1)) Indicates the number used to Identify items called out In the illustration

b. SMR Code (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning Information, maintenance category authorization criteria, and disposition Instruction, as shown In the following breakout

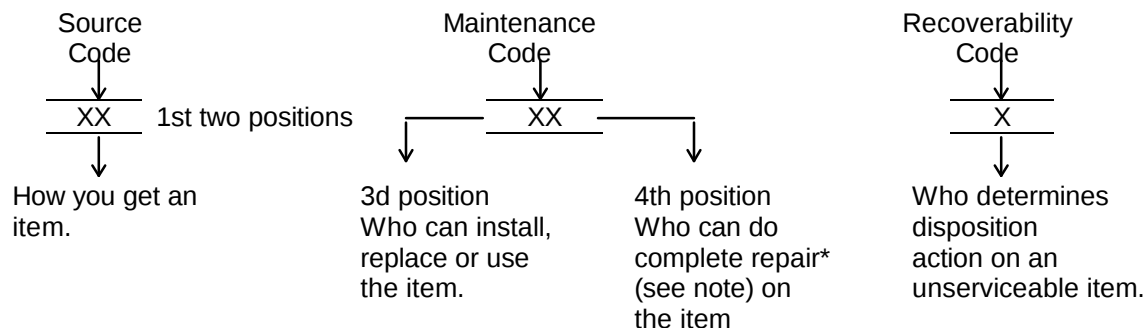

*Complete Repair Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follow:

Source Code	Explanation
PA PB PC** PD PE PF PG	Stocked items; use the applicable NSN to request(requisition items with these source codes. They are authorized to the category indicated by the code entered in the 3rd position of the SMR code. **NOTE: Items coded PC are subject to deterioration.
KD KF KB	Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance category indicated in the 3rd position of the SMR code. The complete kit must be requisitioned and applied.
MO- (Made at Unit/AVUM Level) MF- (Made at DS/AVUM Level) MH- (Made at GS Level) ML- (Made at Specialized Repair Activity (SRA)) MD- (Made at Depot)	Items with these codes are not to be requested/requisitioned individually. They must be made from bulk material which is identified by the part number in the DESCRIPTION and USABLE ON CODE (UOC) column and listed in the Bulk Material group of the repair parts list in this RPSTL. If the item is authorized to you by the 3rd position code of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.
AO- (Assembled by Unit/AVUM Level) AF- (Assembled by DS/AVUM Level) AH- (Assembled by GS Category) AL- (Assembled by SRA) AD- (Assembled by Depot)	Items with these codes are not to be requested/ requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the level of maintenance indicated by the source code. If the 3rd position code of the SMR code authorizes you to replace the item, but the source code indicates the items are assembled at a higher level, order the item from the higher level of maintenance.
XA-	Do not requisition "XA"-coded item. Order its next higher assembly. (Refer to the NOTE below.)
XB-	If an "XB" item is not available from salvage, order it using the CAGEC and part number given.
XC-	Installation drawing, diagram, instruction sheet, field service drawing, that is identified manufacturer's part number.
XD-	Item is not stocked. Order an "XD"-coded item through normal supply channels using the CAGEC and part number given, if no NSN is available.