


**TECHNICAL MANUAL
Unit, Direct Support
and
General Support Maintenance
REPAIR PARTS AND SPECIAL TOOLS LIST
for
WAREHOUSE CRANE
10,000 LB. CAPACITY, M469
WHEELED, DIESEL POWERED
NSN 3950-01-412-5345
(Grove Model AP 308T)**

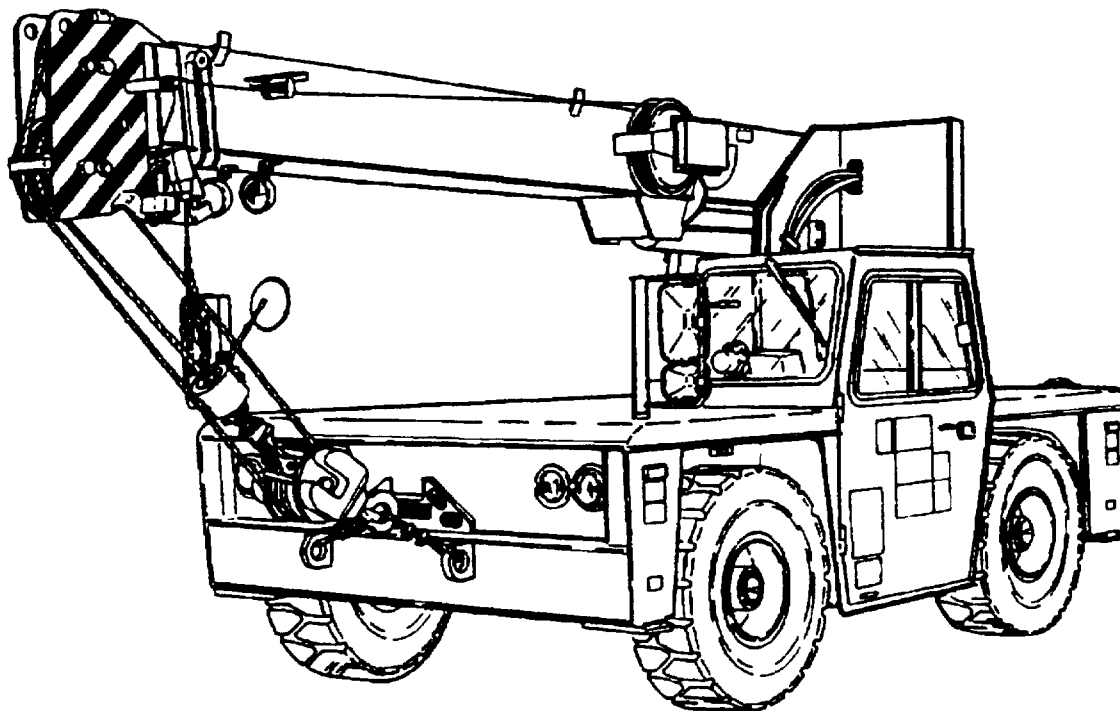

Approved for public release: Distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

JUNE 1997

HEADQUARTERS,
DEPARTMENT OF THE ARMY,
Washington, DC, 15 June 1997

**Unit, Direct Support and
General Support Maintenance
REPAIR PARTS AND SPECIAL TOOLS LIST for
WAREHOUSE CRANE
10,000 LB. CAPACITY, M469
WHEELED, DIESEL POWERED
NSN 3950-01-412-5345
(Grove Model AP 308T)**

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes, or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms) or DA Form 2028-2 located in the back of this manual direct to: Commander. US Army Tank-automotive and Armaments Command, ATTN: AMSTA-IM-OPIT, Warren. MI 48397-5000. In either case a reply will be furnished direct to you. Your may also provide DA Form 2028-2 information to TACOM via datafax or e.mail. TACOM's datafax number for AMSTA-IM-OPIT is: (810) 574-6323 and e.mail address is: tacom-tech-pubs@cc.tacom.army.mil.

TABLE OF CONTENTS

		Page	Illus/ Figure
Section I	Introduction	1	
Section II	Repair Parts List	1-1	
Group	01 - ENGINE		
0100	Engine Installation.....	1-1	1
0101	Cylinder Head Assembly	2-1	2
0101	Cylinder Block Installation	3-1	3
0102	Crankshaft Assembly	4-1	4
0103	Flywheel and Housing	5-1	5
0104	Pistons and Connecting Rods	6-1	6
0105	Valve Cover Installation	7-1	7
0105	Rocker Levers and Push Rods	8-1	8
0105	Cam Follower Cover Assembly	9-1	9
0105	Camshaft and Valve Tappets	10-1	10
0105	Front Gear Cover Installation	11-1	11
0106	Engine Oil Level Gage	12-1	12
0106	Engine Oil Cooler.....	13-1	13
0106	Engine Oil Pan Installation	14-1	14
0106	Engine Oil Pump Installation	15-1	15
0108	Air Intake Manifold and Gasket w/Heater Assy	16-1	16
0108	Exhaust Manifold Installation	17-1	17
0109	Front Gear Train Accessory Drive	18-1	18

Approved for public release: Distribution is unlimited.

TABLE OF CONTENTS - continued

Section II - Continued

Group		Page	Illus/ Figure
03 - FUEL SYSTEM			
0301	Fuel Injectors	19-1	19
0302	Fuel Lift Pump and Lines	20-1	20
0302	Fuel Injection Pump w/Shutoff Valve Inst.....	21-1	21
0302	Fuel Injection Pump Assembly	22-1	22
0304	Air Cleaner Assembly and Inst	23-1	23
0306	Fuel Tank Installation.....	24-1	24
0306	Low Pressure Engine Fuel Lines	25-1	25
0306	High Pressure Engine Fuel Lines	26-1	26
0309	Fuel Filter/Water Separator.....	27-1	27
0311	Cold Start Installation.....	28-1	28
0312	Accelerator Pedal and Linkage.....	29-1	29
04 - EXHAUST SYSTEM			
0401	Muffler Installation	30-1	30
05 - COOLING SYSTEM			
0501	Fan Guard Installation.....	31-1	31
0501	Radiator Installation	32-1	32
0503	Engine Water Inlet Connection.....	33-1	33
0503	Thermostat and Housing	34-1	34
0504	Water Pump Installation.....	35-1	35
0505	Engine Cooling Fan and Drive Assembly	36-1	36
0505	Fan Belt and Tensioner	37-1	37
06 - ELECTRICAL SYSTEM			
0601	Alternator Installation	38-1	38
0601	Alternator Assembly.....	39-1	39
0603	Starter Installation	40-1	40
0603	Starter Assembly.....	41-1	41
0607	Cab Main Control Panel Assembly	42-1	42
0607	Relay Panel Installation.....	43-1	43
0607	Fuse Panel Assembly	44-1	44
0609	Exterior Lights and Turnsignal Installation	45-1	45
0609	Spotlight Inst.....	46-1	46
0609	Boom Lights Installation.....	47-1	47
0610	Engine Senders and Switches	48-1	48
0611	Horn and Backup Alarm Installation	49-1	49
0612	Battery Installation	50-1	50
0613	Carrier Harness Assembly.....	51-1	51
0613	Cab Harness Assembly	52-1	52
0613	Front Console Harness Assembly	53-1	53
0613	Boom Harness Assembly	54-1	54
0613	Boom Lights Harness Assembly	55-1	55
0613	Relay Panel Harness Assembly	56-1	56

TABLE OF CONTENTS - continued

Section II - Continued

Group		Page	Illus/ Figure
	07 - TRANSMISSION		
0705	Transmission Shifting Lever Installation	57-1	57
0705	Transmission Shift Modulator	58-1	58
0710	Transmission Installation	59-1	59
0710	Transmission Assembly	60-1	60
0710	Park Brake Lever Installation	61-1	61
0710	Park Brake Installation	62-1	62
	09 - PROPELLER AND PROPELLER SHAFTS		
0900	Drive Line Assembly and Installation	63-1	63
	10 - FRONT AXLE		
1000	Front Axle Installation	64-1	64
1000	Front Axle Assembly	65-1	65
1002	Front Axle Differential	66-1	66
	11 - REAR AXLE		
1100	Rear Axle and Hub Installation	67-1	67
1104	Steering Cylinder Assembly	68-1	68
	12 - BRAKES		
1202	Front Brake Parts	69-1	69
1204	Master Cylinder Installation	70-1	70
1204	Service Brake Lines Installation	71-1	71
	13 - WHEELS AND TRACKS		
1313	Tire Assembly and w/Lug Nuts	72-1	72
	14 - STEERING		
1401	Steering Wheel and Control Valve Inst.....	73-1	73
1401	Steering Control Valve Assembly	74-1	74
1411	Steering Hydraulic Lines Installation.....	75-1	75
1412	Steering Pump Installation	76-1	76
1412	Steering Pump Assembly	77-1	77
	15 - FRAME, TOWING ATTACHMENTS, AND DRAWBARS		
1503	Pintle Hook Assembly and Front Tiedown	78-1	78
1507	Outrigger Installation	79-1	79
1507	Outrigger Stabilizer Cylinder Assembly	80-1	80
1507	Outrigger Stabilizer Cylinder Assembly	81-1	81

TABLE OF CONTENTS - continued

Section II - Continued

Group		Page	Illus/ Figure
	15 - FRAME, TOWING ATTACHMENTS, AND DRAWBARS - Continued		
1507	Outrigger Selector Valves Installation	82-1	82
1507	Outrigger Selector Valve Assembly.....	83-1	83
	18 - BODY, CAB, HOOD, AND HULL		
1801	Cab Top Installation	84-1	84
1801	Cab Door Holder Installation	85-1	85
1801	Cab Acoustics Installation	86-1	86
1801	Deck Covers w/Handle Installation	87-1	87
1801	Frame Stud Installation	88-1	88
1806	Seat Installation	89-1	89
	22 - BODY, CHASSIS, OR HULL ASSEMBLY ITEMS		
2201	Windshield Wiper and Washer Installation	90-1	90
2202	Rearview Mirror w/Deck Post Installation	91-1	91
2207	Cab Heater and Defroster Installation.....	92-1	92
2207	Cab Circulating Fan Installation	93-1	93
2210	Decal Installation	94-1	94
	24 - HYDRAULIC LIFT COMPONENTS		
2401	Two-Section Pump Installation	95-1	95
2401	Two-Section Pump Assembly.....	96-1	96
2402	Hydraulic Lockout/Level Indicator Inst.....	97-1	97
2402	Hydraulic Control Valves and Linkage.....	98-1	98
2402	Two-Section Valve Assembly	99-1	99
2402	Three-Section Valve Assembly	100-1	100
2406	Pressure Check Hydraulic Lines Installation	101-1	101
2406	Supply/Pressure/Return Hydraulic Lines	102-1	102
2406	Hydraulic Return Line Filter Assembly.....	103-1	103
2406	Lift Cylinder Hydraulic Lines Installation	104-1	104
2406	Telescope Cylinder Hydraulic Lines	105-1	105
2406	Swing Drive Hydraulic Lines Installation.....	106-1	106
2406	Hoist Hydraulic Lines Installation.....	107-1	107
2406	Outrigger Hydraulic Lines Installation	108-1	108
2406	Swivel Hydraulic Lines Installation	109-1	109
2407	Lift Cylinder Installation.....	110-1	110
2407	Lift Cylinder Assembly	111-1	111
2407	Lift Cylinder Holding Valve Assembly.....	112-1	112
2407	Telescope Cylinder Assembly	113-1	113
2407	Telescope Cylinder Holding Valve Assembly	114-1	114
2408	Hydraulic Tank Installation	115-1	115
2408	Hydraulic Oil Cooler Inst w/Fan Assembly.....	116-1	116

TABLE OF CONTENTS - continued

Section II - Continued

Group		Page	Illus/ Figure
	68 - WARNING, SCANNING, AND SIGNALING DEVICES		
6801	Antitwo-Block Installation	117-1	117
	74 - CRANES, SHOVELS, EARTH MOVING COMPONENTS		
7411	Boom Assembly, 2 -Section	118-1	118
7411	Boom Nose Sheave and Cable Retainer	119-1	119
7411	Boom Pivot Pin Installation	120-1	120
7411	Boom Angle Indicator Installation	121-1	121
7411	Hook Block and Latch Assembly	122-1	122
7417	Hoist Installation	123-1	123
7417	Hoist Assembly w/Wedge Socket	124-1	124
7417	Hoist Primary and Secondary Carrier	125-1	125
7417	Hoist Hydraulic Motor Assembly	126-1	126
7417	Hoist Motor Control Valve	127-1	127
7417	Cable Follower Installation	128-1	128
7419	Turntable Bolt Installation	129-1	129
7419	Turntable Drive w/Breather Vent Installation	130-1	130
7419	Swing Drive w/Valve Assembly	131-1	131
7419	Swing Drive Gear Reducer Assembly	132-1	132
7419	Swing Brake Assembly	133-1	133
7419	Swing Motor Assembly	134-1	134
7419	Electric/Hydraulic Swivel Installation	135-1	135
7419	Hydraulic Swivel Assembly	136-1	136
7419	Electric Slip Ring Assembly	137-1	137
	76 - FIRE FIGHTING EQUIPMENT COMPONENTS		
7638	Fire Extinguisher Installation	138-1	138
	Kits	139-1	139
Section III	Special Tools List - N/A		
Section IV	Cross-Reference Indexes		
	National Stock Number Index	I-1	
	Part Number Index	I-13	
	Figure and Item Number Index	I-62	

v/(vi blank)

SECTION I INTRODUCTION

1. SCOPE

This manual lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of unit, direct support and general support maintenance with depot maintenance of the 10K Warehouse Truck Crane, M469. It authorizes the requisitioning, issue, and disposition of spares, repair parts, and special tools as indicated by the source, maintenance, and recoverability (SMR) codes.

2. GENERAL

This Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. This list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending item number sequence, with the parts in each group listed in ascending item number sequence. Figure numbers are listed directly beneath the group header. Bulk materials are listed in item name sequence. Repair parts kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in this section. Items listed are shown on the associated illustration.

b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL as indicated by Basis of Issue (BOI) information (column (5)) for the performance of maintenance.

c. Section IV. Cross-Reference Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. The figure number and item number index lists figure and item numbers in numeric sequence and cross-references National stock number. Commercial and Government Entity Code, and part numbers.

3. EXPLANATION OF COLUMNS (Sections II and III)

a. Item No. (Column (1)). Indicates the number used to identify items called out in the illustrations.