
TECHNICAL MANUAL

UNIT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS)

CRANE, TRUCK MOUNTED,
HYDRAULIC, 25 TON (CCE)
NON-WINTERIZED
NSN 3810-00-018-2021
WINTERIZED
NSN 3810-00-018-2007

HARNISCHFEGGER MODEL MT-250

This manual supersedes TM 5-3810-293-20P, dated 29 August 1986.

Distribution: Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY
25 JULY 1988

**UNIT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS**

**CRANE, TRUCK MOUNTED,
HYDRAULIC, 25 TON (CCE)
NON-WINTERIZED
NSN 3810-00-018-2021
WINTERIZED
NSN 3810-00-018-2007
HARNISCHFEGER MODEL MT-250**

Current as of 21 MARCH 1988

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in back of this manual direct to: U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release: distribution is unlimited.

TABLE OF CONTENTS

			PAGE	ILLUS FIG
SECTION	I.	INTRODUCTION	1	
SECTION	II	REPAIR PARTS LIST	1-1	

*This manual supersedes TM 5-3810-293-20P, dated 29 August 1986.

TABLE OF CONTENTS

	PAGE	ILLUS FIG
GROUP 01 ENGINE		
0101 - CRANKCASE, BLOCK, CYLINDER HEAD	1-1	
BLOCK ASSEMBLY	1-1	1
0105 - VALVES, CAMSHAFTS, AND TIMING SYSTEM.....	2-1	
UPPER FRONT ENGINE COVER	2-1	2
LOWER FRONT ENGINE COVER	3-1	3
ROCKER ARM COVER.....	4-1	4
0106 - ENGINE LUBRICATION SYSTEM	5-1	
OIL PAN.....	5-1	5
OIL FILTER.....	6-1	6
GROUP 03 FUEL SYSTEM		
0304 - AIR CLEANER	7-1	
AIR FILTER	7-1	7
0306 - TANKS, LINES, FITTINGS, HEADERS.....	8-1	
FUEL TANK AND LINES	8-1	8
FUEL FILTER LINES	9-1	9
0309 - FUEL FILTERS.....	10-1	
FUEL FILTER AND STRAINER	10-1	10
0311 - ENGINE STARTING AIDS	11-1	
ETHER STARTING AIDS	11-1	11
0312 - ACCELERATOR, THROTTLE OR CHOKE CONTROLS	12-1	
AIR THROTTLE PEDAL AND VALVE.....	12-1	12
THROTTLE DELAY MECHANISM	13-1	13
GROUP 04 EXHAUST SYSTEM		
0401—MUFFLER AND PIPES	14-1	
MUFFLER AND EXHAUST PIPES.....	14-1	14
GROUP 05 COOLING SYSTEM		
0503 - WATER MANIFOLD, HEADERS, THERMOSTATS AND HOUSING		
GASKET.....	15-1	
RADIATOR HOSES.....	15-1	15
GROUP 06 ELECTRICAL SYSTEM		
0601 - GENERATOR, ALTERNATOR.....	16-1	
ALTERNATOR MOUNTING	16-1	16
MOTOROLA ALTERNATOR	17-1	17
DELCO REMY ALTERNATOR.....	18-1	18
0602 - GENERATOR REGULATOR (VOLTAGE)	19-1	
VOLTAGE REGULATORS	19-1	19
0603 - STARTING MOTOR	20-1	
STARTER SOLENOID AND RELATED PARTS	20-1	20
STARTER BRUSHES AND RELATED PARTS	21-1	21
STARTER MAGNETIC SWITCH	22-1	22
0606 - ENGINE SAFETY CONTROLS	23-1	
ENGINE SHUT OFF SOLENOID	23-1	23
SAFETY SWITCHES.....	24-1	24
0607 - INSTRUMENT OR ENGINE CONTROL PANEL	25-1	
INSTRUMENT PANEL SWITCHES	25-1	25
INSTRUMENT PANELS	26-1	26

TABLE OF CONTENTS

		PAGE	ILLUS FIG
0609 -	LIGHTS.....	27-1	
	LIGHTS AND RELATED PARTS.....	27-1	27
	FLOODLIGHTS AND RELATED PARTS.....	28-1	28
0610 -	SENDING UNITS AND WARNING SWITCHES.....	29-1	
	MAIN AND AUXILIARY WINCH ROTATION INDICATOR (SERIAL RANGE 42370 TO 42412, 43357 TO 43373).....	29-1	29
0611 -	HORN, SIREN.....	30-1	
	HORN AND RELATED PARTS.....	30-1	30
0612 -	BATTERIES, STORAGE.....	31-1	
	BATTERY, CABLES AND RELATED PARTS.....	31-1	31
0613 -	CHASSIS WIRING HARNESS.....	32-1	
	CARRIER WIRING HARNESS ASSEMBLY.....	32-1	32
	CARRIER WIRING HARNESS.....	33-1	33
	CARRIER BASIC UPPER ELECTRICAL ASSEMBLY.....	34-1	34
0705 -	TRANSMISSION SHIFTING COMPONENTS.....	35-1	
	AUXILIARY TRANSMISSION CONTROL LEVER ASSEMBLY.....	35-1	35
GROUP 09	PROPELLER, PROPELLER SHAFTS, UNIVERSAL JOINTS, COUPLER AND CLAMP ASSEMBLY		
0900 -	PROPELLER SHAFTS.....	36-1	
	PROPELLER SHAFTS AND UNIVERSAL JOINTS.....	36-1	36
GROUP 12	BRAKES		
1208 -	AIR BRAKE SYSTEM.....	37-1	
	DUAL BRAKE VALVE AND FRONT AXLE BRAKE CHAMBER ASSEMBLIES.....	37-1	37
GROUP 13	WHEELS AND TRACKS		
1301 -	SUSPENSION ASSEMBLY.....	38-1	
	REAR SUSPENSION ASSEMBLY (ALL EXCEPT SERIAL RANGE 42387 TO 42412, 43357 TO 43373).....	38-1	38
	REAR SUSPENSION ASSEMBLY (SERIAL RANGE 42387 TO 42412, 43357 TO 43373).....	39-1	39
1311 -	WHEEL ASSEMBLY.....	40-1	
	FORWARD AND REAR REAR AXLE HUB AND DRUM ASSEMBLY.....	40-1	40
	FORWARD AND REAR REAR AXLE HUB AND DRUM ASSEMBLY (ALL EXCEPT SERIAL RANGE 36080 TO 36139).....	41-1	41
	FRONT AND REAR FRONT AXLE HUB AND DRUM ASSEMBLY (SERIAL RANGE 36080 TO 36139).....	42-1	42
	FRONT AND REAR FRONT AXLE HUB AND DRUM ASSEMBLY (ALL EXCEPT SERIAL RANGE 36080 TO 36139).....	43-1	43
	WHEEL AND RIM ASSEMBLY.....	44-1	44
1313 -	TIRES, TUBES, TIRE CHAINS.....	45-1	
	TIRES, SPARE WHEEL AND TIRE.....	45-1	45
GROUP 14	STEERING		
1401 -	MECHANICAL STEERING GEAR ASSEMBLY.....	46-1	
	STEERING SYSTEM MECHANICAL PARTS.....	46-1	46
	FRONT AND REAR FRONT TIE ROD ASSEMBLIES.....	47-1	47
1411 -	HOSES, LINES, FITTINGS.....	48-1	
	STEERING SYSTEM LINES AND FITTINGS.....	48-1	48
1412 -	HYDRAULIC OR AIR CYLINDERS.....	49-1	
	STEERING CYLINDER.....	49-1	49

TABLE OF CONTENTS

		PAGE	ILLUS FIG
	1413 - TANKS, RESERVOIRS	50-1	
	POWER STEERING FILTER	50-1	50
	1414 - STEERING SYSTEM VALVES.....	51-1	
	POWER STEERING VALVE HOUSING	51-1	51
GROUP 18	BODY, CAB, HOOD AND HULL		
	1801 - BODY, CAB, AND HOOD ASSEMBLIES	52-1	
	CARRIER CAB DOOR	52-1	52
	1806 - UPHOLSTERY, SEATS AND CARPETS	53-1	
	CARRIER SEAT	53-1	53
	CARRIER SEAT (SERIAL RANGE 36080 TO 36106)	54-1	54
	OPERATOR SEAT	55-1	55
	SUN VISOR	56-1	56
	1808 - STOWAGE RACKS	57-1	
	SPARE TIRE RACK	57-1	57
GROUP 20	HOIST, WINCH, CAPSTAN, WINDLASS, POWER CONTROL UNIT, AND POWER TAKE OFF		
	2001 - HOIST, CAPSTAN, WINDLASS, CRANE OR WINCH ASSEMBLY	58-1	
	WINCH ASSEMBLY	58-1	58
	AUXILLARY WINCH ROLLER, SHEAVE AND SOCKET	59-1	59
	AUXILLARY AND MAIN WINCH SOLENOID VALVE AND RELATED PARTS	60-1	60
GROUP 22	BODY, CHASSIS, AND HULL ACCESSORY ITEMS		
	2202 - ACCESSORY ITEMS	61-1	
	OPERATOR'S CAB HEATER AND DEFROSTER.....	61-1	61
	CARRIER HEATER AND DEFROSTER	62-1	62
	OPERATOR'S CAB WINDSHIELD WIPER ASSEMBLY	63-1	63
	CARRIER REAR VIEW MIRROR (RIGHT HAND)	64-1	64
	CARRIER CAB HORN AND MIRROR (LEFT SIDE)	65-1	65
	REFLECTORS AND WIPER	66-1	66
	2210 - DATA PLATES AND INSTRUCTION HOLDERS.....	67-1	
	DATA PLATES AND INSTRUCTION HOLDERS.....	67-1	67
GROUP 24	HYDRAULIC AND FLUID SYSTEMS		
	2406 - STRAINERS, FILTERS, LINES AND FITTINGS, ETC.....	68-1	
	PRIORITY VALVE LINES AND FITTINGS.....	68-1	68
	SWING BRAKE VALVE LINES AND FITTINGS	69-1	69
	SWING AND SWING BRAKE CONTROL LINES AND FITTINGS	70-1	70
	WINCH VALVE LINES AND FITTINGS	71-1	71
	WINCH CONTROL LINES (SERIAL RANGE 36080 TO 36139, 36155 TO 36199, 37223 TO 37247, 37591 TO 37670, 38155, 41402 TO 41407, 41745).....	72-1	72
	WINCH CONTROL LINES (SERIAL RANGE 41746 TO 41775, 41777 TO 41804, 41812, 42043 TO 42096, 42370 TO 42412, 43357 TO 43373)	73-1	73
	SUCTION MANIFOLD AND HYDRAULIC PUMPS, LINES AND FITTINGS	74-1	74
	HYDRAULIC PUMPS TO SWIVEL LINES AND FITTINGS AND OIL FILTER (SERIAL RANGE 42370 TO 42412, 43357 TO 43373)	75-1	75
	HYDRAULIC PUMPS TO SWIVEL LINES AND FITTINGS (SERIAL RANGE 42370 TO 42412, 43357 TO 43373)	76-1	76

TABLE OF CONTENTS

		PAGE	ILLUS FIG
	OUTRIGGER LINES AND FITTINGS	77-1	77
	BOOM HOIST AND TELESCOPE LINES AND FITTINGS	78-1	78
	LOWER TELESCOPE CYLINDER LINES AND FITTINGS	79-1	79
GROUP 43	GAS, AIR, AND VACUUM SYSTEMS		
	4316 - -ASSEMBLED HOSE, FITTING, LINES, BREATHERS, FILTERS AND TRAPS	80-1	
	AIR THROTTLE LINES AND FITTINGS	80-1	80
	AIR THROTTLE FOOT AND HAND CONTROL LINES AND FITTINGS	81-1	81
	4317 - MANIFOLD AND/OR CONTROL VALVES	82-1	
	AIR THROTTLE FOOT AND HAND CONTROL VALVES AND RELATED PARTS	82-1	82
	AIR THROTTLE VALVES AND RELATED PARTS	83-1	83
GROUP 47	GAGES, WEIGHING AND MEASURING DEVICES		
	4701 - INSTRUMENTS	84-1	
	SPEEDOMETERS AND DRIVE	84-1	84
	4702 - GAGES, MOUNTINGS, LINES, AND FITTINGS	85-1	
	GAGES	85-1	85
GROUP 74	CRANES, SHOVELS, AND EARTH MOVING EQUIPMENT COMPONENTS		
	7411 - CRANE DRAGLINE OR CLAMSHELL ATTACHMENTS	86-1	
	SAFELoad INDICATOR	86-1	86
	THREE SHEAVE HOOK BLOCK	87-1	87
	HOOK BLOCK AND LINK	88-1	88
	TAGLINE ROPE AND BRACKET	89-1	89
	TAGLINE WINDER	90-1	90
	TAGLINE RELATED PARTS	91-1	91
	BOOM BASE SECTION	92-1	92
	BOOM MID SECTION	93-1	93
	BOOM FLY SECTION MAIN AND IDLER SHEAVE ASSEMBLY	94-1	94
	JIB ASSEMBLY	95-1	95
	JIB MOUNTING AND SUSPENSION	96-1	96
	BOOM ANGLE INDICATOR	97-1	97
	7413 - PILE DRIVE ATTACHMENT	98-1	
	PILE DRIVER	98-1	98
	7414 - BASE DECK	99-1	
	REVOLVING FRAME AND BASE	99-1	99
GROUP 94	REPAIR KITS		
	9401 - REPAIR KITS	KIT-1	
	KIT	KIT-1	KIT
GROUP 95	GENERAL USE STANDARDIZED PARTS		
	9501 - BULK MATERIEL	BULK-1	
	BULK MATERIEL	BULK-1	BULK
SECTION III.	SPECIAL TOOLS LIST (NOT APPLICABLE)		

TABLE OF CONTENTS

		PAGE	ILLUS FIG
SECTION	IV.	CROSS REFERENCE INDEXES.....	I-1
		NATIONAL STOCK NUMBER INDEX.....	I-1
		PART NUMBER INDEX.....	I-6
		FIGURE AND ITEM NUMBER INDEX	I-32

UNIT MAINTENANCE

REPAIR PARTS AND SPECIAL TOOLS LIST

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit Maintenance of the Crane. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).


b. *Section III. Special Tools List.* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. *Cross-reference Indexes.* A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, FSCM, and part numbers.

3. Explanation of Columns (Sections II and III).

a. *ITEM NO. (Column (1)).* Indicates the number used to identify items called out in the illustration.

b. *SMR CODE (Column (2)).* The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

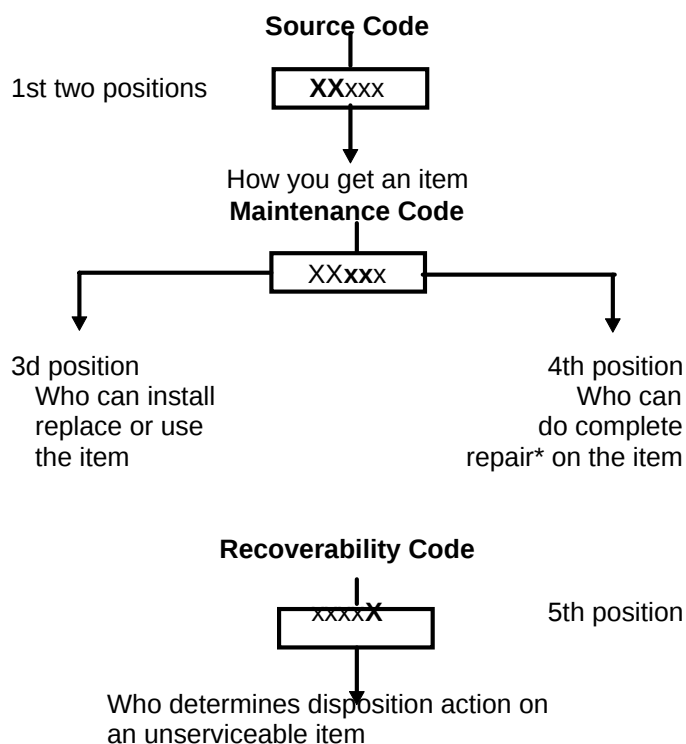

**Complete Repair.* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.