

TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS**

**CRUSHING AND SCREENING PLANT,
DIESEL ENGINE DRIVEN, SEMITRAILER MTD,
35 TON PER HOUR CAPACITY
NSN 3820-00-878-4285
IOWA MANUFACTURING COMPANY MODEL 2A**

CONSISTS OF:

**PRIMARY UNIT: ARMY MODEL 2A2PRIM
NSN 3820-00-851-6728
IOWA MANUFACTURING COMPANY MODEL 2A-2A**

AND

**SECONDARY UNIT: ARMY MODEL 2A2SEC
NSN 3820-00-938-7942
IOWA MANUFACTURING COMPANY MODEL 2A-2B**

**This manual supersedes TM 5-3820-233-20P, 12 April 1985 and
TM 5-3820-233-34P, 16 April 1985.**

Approved for public release; distribution is unlimited.

**HEADQUARTERS, DEPARTMENT OF THE ARMY
13 AUGUST 1990**

TECHNICAL MANUAL
*TM 5-3820-233-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington D.C., 13 August 1990

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS

CRUSHING AND SCREENING PLANT,
DIESEL ENGINE DRIVEN, SEMITRAILER MTD,
35 TON PER HOUR CAPACITY
NSN 3820-00-878-4285

IOWA MANUFACTURING COMPANY MODEL 2A

CONSISTS OF:
PRIMARY UNIT: ARMY MODEL 2A2PRIM
NSN 3820-00-851-6728
IOWA MANUFACTURING COMPANY MODEL 2A-2A

AND
SECONDARY UNIT: ARMY MODEL 2A2SEC
NSN 3820-00-938-7942
IOWA MANUFACTURING COMPANY MODEL 2A-2B

Current as of 20 April 1990

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		Illus. Page	Fig.
SECTION I.	INTRODUCTION	1	
SECTION II.	REPAIR PARTS LIST	1-1	
GROUP 01	ENGINE		
	0100 - ENGINE ASSEMBLY	1-1	
	ENGINE AND ENGINE BASE	1-1	1

* This manual supersedes TM 5-3820-233-20P, 12 April 1985 and TM 5-3820-233-34P, 16 April 1985.

TABLE OF CONTENTS - Continued

	Illus. Page	Fig
0100 - ENGINE ASSEMBLY (CON'T)		
LIFTING BRACKETS	2-1	2
SUB FRAME	3-1	3
0101 - CRANKCASE, BLOCK, CYLINDER HEAD	4-1	
CYLINDER HEAD	4-1	4
CYLINDER BLOCK	5-1	5
0102 - CRANKSHAFT	6-1	
CRANKSHAFT	6-1	6
PULLEY AND COVER	7-1	7
0103 - FLYWHEEL ASSEMBLY	8-1	
FLYWHEEL	8-1	8
FLYWHEEL HOUSING	9-1	9
0104 - PISTONS, CONNECTING RODS	10-1	
PISTON AND ROD	10-1	10
0105 - VALVES, CAMSHAFTS, AND TIMING SYSTEM	11-1	
VALVES	11-1	11
TIMING GEAR	12-1	12
TIMING GEARS AND SHAFTS	13-1	13
ROCKER ARM AND SHAFT	14-1	14
0106 - ENGINE LUBRICATION SYSTEM	15-1	
OIL PUMP	15-1	15
OIL PRESSURE REGULATOR AND PIPING	16-1	16
OIL COOLER AND FILTER	17-1	17
OIL FILTER	18-1	18
LEVEL GAGE AND TUBES	19-1	19
OIL PAN	20-1	20
GOVERNOR LUBRICATION AND OIL PUMP DRIVE GEAR	21-1	21
0108 - MANIFOLDS	22-1	
MANIFOLD AND GASKETS	22-1	22
 GROUP 02 CLUTCH		
0200 - CLUTCH ASSEMBLY	23-1	
POWER TAKE OFF	23-1	23
0202 - CLUTCH RELEASE MECHANISM	24-1	
CLUTCH LEVER (2A-2A)	24-1	24
CLUTCH LEVER (2A-2)	25-1	25
 GROUP 03 FUEL SYSTEM		
0301 - CARBURETOR, FUEL INJECTOR	26-1	
FUEL INJECTOR	26-1	26
INJECTOR	27-1	27
0302 - FUEL PUMPS	28-1	
FUEL PUMP	28-1	28
0304 - AIR CLEANER	29-1	
AIR CLEANER AND MOUNTING PARTS	29-1	29
0305 - SUPERCHARGER, BLOWER, TURBOCHARGER OR ALTITUDE COMPENSATOR	30-1	
AIR INLET HOUSING	30-1	30
BLOWER DRIVE	31-1	31
BLOWER	32-1	32
0306 - TANKS, LINES, FITTING, HEADERS	33-1	
FUEL LINES	33-1	33
TANKS, LINES, AND FITTINGS	34-1	34
FUEL DRAIN TUBE	35-1	35

TABLE OF CONTENTS - Continued

	Illus. Page	Fig
0306 - TANKS, LINES, FITTING, HEADERS (CON'T)		
FUEL STRAINER LINES AND FITTINGS	36-1	36
INJECTOR LINES.....	37-1	37
0308 - ENGINE SPEED GOVERNOR AND CONTROLS	38-1	
GOVERNOR AND DRIVE	38-1	38
0309 - FUEL FILTERS	39-1	
FUEL FILTER	39-1	39
FUEL STRAINER.....	40-1	40
0311 - ENGINE STARTING AIDS	41-1	
DISCHARGE.....	41-1	41
0313 - ACCELERATOR, THROTTLE OR CHOKE CONTROLS	42-1	
LINKAGE AND CONTROLS.....	42-1	42
INJECTOR CONTROLS	43-1	43
 GROUP 04 EXHAUST SYSTEM		
0401 - MUFFLER AND PIPES.....	44-1	
MUFFLER	44-1	44
 GROUP 05 COOLING SYSTEM		
0501 - RADIATOR, EVAPORATIVE COOLER, OR HEAT EXCHANGER.....	45-1	
RADIATOR AND GUARDS	45-1	45
0503 - WATER MANIFOLD, HEADERS, THERMOSTATS AND HOUSING GASKET.....	46-1	
RADIATOR, HOSES, MANIFOLD, AND THERMOSTAT.....	46-1	46
0504 - WATER PUMP	47-1	
WATER PUMP, EXPLODED VIEW	47-1	47
0505 - FAN ASSEMBLY	48-1	
RADIATOR GUARD	48-1	48
FAN HUB AND BLADES.....	49-1	49
 GROUP 06 ELECTRICAL SYSTEM		
0601 - GENERATOR, ALTERNATOR.....	50-1	
GENERATOR PULLEY AND MOUNTING HARDWARE	50-1	50
GENERATOR	51-1	51
0602 - GENERATOR REGULATOR.....	52-1	
REGULATOR.....	52-1	52
0603 - STARTING MOTOR	53-1	
STARTER LEAD	53-1	53
STARTER	54-1	54
STARTER	55-1	55
0606 - ENGINE SAFETY CONTROLS	56-1	
OVERSPEED GOVERNOR.....	56-1	56
SAFETY CONTROLS	57-1	57
0607 - INSTRUMENT OR ENGINE CONTROL PANEL	58-1	
CONTROLS AND INSTRUMENTS	58-1	58
0608 - MISCELLANEOUS ITEMS	59-1	
RECEPTACLE AND GROUND CABLE.....	59-1	59
0609 - LIGHTS	60-1	
LIGHTS	60-1	60
0610 - SENDING UNITS AND WARNING SWITCHES	61-1	
OIL PRESSURE AND WATER TEMPERATURE TRANSMITTERS	61-1	61

TABLE OF CONTENTS - Continued

	Illus. Page	Fig
0612 - BATTERIES, STORAGE	62-1	
BATTERY BOX COMPONENTS	62-1	62
BATTERIES AND LEADS	63-1	63
0613 - HULL OR CHASSIS WIRING HARNESS	64-1	
WIRING HARNESS	64-1	64
 GROUP 10 FRONT AXLE		
1000 - FRONT AXLE ASSEMBLY	65-1	
FRONT AXLE ASSEMBLY	65-1	65
 GROUP 11 REAR AXLE		
1100 - REAR AXLE ASSEMBLY	66-1	
REAR AXLE ASSEMBLY	66-1	66
REAR AXLE BEAM ASSEMBLY	67-1	67
TRAILER RISER	68-1	68
 GROUP 12 BRAKES		
1202 - SERVICE BRAKES	69-1	
BRAKES, DOLLY	69-1	69
BRAKES, TRAILER AXLE	70-1	70
1206 - MECHANICAL BRAKE SYSTEM	71-1	
SLACK ADJUSTER	71-1	71
1208 - AIR BRAKE SYSTEM	72-1	
RESERVOIR, LINES, AND FITTINGS	72-1	72
BRAKE CHAMBER, TRAILER	73-1	73
BRAKE CHAMBER, DOLLY	74-1	74
RELAY EMERGENCY VALVE	75-1	75
BRAKE COMPONENTS	76-1	76
FLEXASTIK	77-1	77
 GROUP 13 WHEELS AND TRACKS		
1311 - WHEEL ASSEMBLY	78-1	
WHEELS AND RELATED PARTS, DOLLY	78-1	78
WHEELS AND RELATED PARTS, TRAILER	79-1	79
1313 - TIRES, TUBES, TIRE CHAINS	80-1	
TIRE	80-1	80
 GROUP 15 FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEMS		
1501 - FRAME ASSEMBLY	81-1	
WALKWAYS	81-1	81
LADDER AND DECK	82-1	82
MAIN FRAME	83-1	83
WALKWAYS AND LADDERS	84-1	84
SHACKLE AND ATTACHMENTS	85-1	85
RAILS AND POSTS	86-1	86
DOLLY FRAME	87-1	87
1503 - PINTLES AND TOWING ATTACHMENTS	88-1	
PINTLE	88-1	88

TABLE OF CONTENTS - Continued

	Illus. Page	Fig
1506 - FIFTH WHEEL	89-1	
SUB BASE	89-1	89
1507 - LANDING GEAR, LEVELING JACKS.....	90-1	
STABILIZING JACK	90-1	90
STABILIZING JACK	91-1	91
LEVELING JACK	92-1	92
 GROUP 16 SPRINGS AND SHOCK ABSORBERS		
1601 - SPRINGS.....	93-1	
SPRINGS	93-1	93
1605 - TORQUE, RADIUS, AND STABILIZER RODS	94-1	
STABILIZER ARM.....	94-1	94
 GROUP 18 BODY, CAB, HOOD, AND HULL		
1801 - BODY, CAB, HOOD AND HULL ASSEMBLIES	95-1	
DOLLY FRAME GUARD.....	95-1	95
ENGINE HOUSING	96-1	96
1802 - FENDERS, RUNNING BOARDS WITH MOUNTING AND ATTACHING PARTS, OUTRIGGERS, WINDSHIELD, GLASS, ETC	97-1	
FENDERS AND SUPPORTS (2A-2)	97-1	97
FENDERS AND SUPPORTS (2A-2A)	98-1	98
1808 - STOWAGE RACKS, BOXES, STRAPS, CARRYING CASES, CABLE REELS, HOSE REELS, ETC.	99-1	
TOOL BOX.....	99-1	99
TOOL BOX SUPPORTS.....	100-1	100
 GROUP 22 BODY, CHASSIS, AND HULL ACCESSORY ITEMS		
2202 - ACCESSORY ITEMS	101-1	
REFLECTORS	101-1	101
HYDRAULIC PUMP	102-1	102
2210 - DATA PLATES AND INSTRUCTION HOLDERS.....	103-1	
DATA PLATES.....	103-1	103
 GROUP 47 GAGES (NONELECTRICAL), WEIGHING AND MEASURING DEVICES		
4701 - INSTRUMENTS.....	104-1	
TACHOMETER	104-1	104
 GROUP 75 CONVEYING, FEEDING AND CRUSHING, SCREENING AND WASHING EQUIPMENT COMPONENTS		
7501 - BELTING, CHAIN	105-1	
CONVEYOR DRIVE BELTS	105-1	105
SIDE DELIVERY CONVEYOR	106-1	106
LOWER CONVEYOR	107-1	107
DRIVE GUARDS (2A-2).....	108-1	108
DRIVE GUARDS (2A-2A)	109-1	109
DRIVE GUARDS (2A-2A)	110-1	110
DELIVERY CONVEYOR FRONT SUPPORT	111-1	111
DELIVERY CONVEYOR TAIL FRAME.....	112-1	112
DELIVERY CONVEYOR HOPPER SUPPORT	113-1	113
DELIVERY CONVEYOR, CONVEYOR HOPPER, AND FLASHING	114-1	114

TABLE OF CONTENTS - Continued

	Illus. Page	Fig
7501 - BELTING, CHAIN (CON'T)		
FEED CONVEYOR	115-1	115
FEED CONVEYOR SKIRTBOARD SUPPORT	116-1	116
FEED CONVEYOR FRAME	117-1	117
FEED CONVEYOR HOPPER SUPPORT	118-1	118
7503 - DRUMS, PULLEYS, SPROCKETS	119-1	
DELIVERY CONVEYOR PULLEY	119-1	119
FEED CONVEYOR PULLEY	120-1	120
SCREEN COUNTERSHAFT AND HEADSHAFT BEARING ASSEMBLY	121-1	121
POWER TAKE OFF PULLEY	122-1	122
SIDE DELIVERY CONVEYOR PULLEY AND BEARINGS	123-1	123
LOWER CONVEYOR PULLEY	124-1	124
CONVEYOR DRIVE.....	125-1	125
SPEED REDUCING SIDE CONVEYOR GEAR ASSEMBLY	126-1	126
BELT IDLER.....	127-1	127
BEVEL GEAR ROCK AND SAND CONVEYOR DRIVE BOX ASSEMBLY.....	128-1	128
SPEED REDUCER FEED CONVEYOR GEAR ASSEMBLY	129-1	129
ELEVATING WHEEL SPROCKETS AND CONVEYOR DRIVE PULLEY.....	130-1	130
CONVEYOR AND ELEVATOR DRIVE.....	131-1	131
GEAR BOX ASSEMBLY, LOWER CONVEYOR, AND ELEVATOR DRIVE	132-1	132
SPEED REDUCER GEAR ASSEMBLY, LOWER CONVEYOR, AND ELEVATOR DRIVE	133-1	133
SPEED REDUCER GEAR HOUSING AND OUTPUT HUB ASSEMBLIES	134-1	134
CONVEYOR AND SCREEN DRIVE PULLEY	135-1	135
7504 - ROLLS	136-1	
ROLL ASSEMBLY LOWER SIDE, FEED, AND DELIVERY CONVEYOR.....	136-1	136
ROLL ASSEMBLY TROUGHING, IMPACT FEED CONVEYOR	137-1	137
ROLL ASSEMBLY RETURN DELIVERY CONVEYOR.....	138-1	138
DELIVERY CONVEYOR SCRAPER	139-1	139
7505 - CLUTCH AND CONTROLS.....	140-1	
CONVEYOR AND SCREEN DRIVE.....	140-1	140
CLUTCH	141-1	141
7506 - SHAFTS.....	142-1	
CONVEYOR DRIVE.....	142-1	142
BEARING	143-1	143
COUNTERSHAFT DRIVE	144-1	144
7507 - WINDING, FOLDING AND HOISTING.....	145-1	
WINCH AND ACCESSORIES	145-1	145
7508 - ELEVATING WHEEL	146-1	
ELEVATING WHEEL	146-1	146
ELEVATING WHEEL AND DISCHARGE HOPPER.....	147-1	147
BEARING ASSEMBLY.....	148-1	148
7510 - FEEDING FRAMES	149-1	
DRIVE GUARD	149-1	149
HOPPER AND SUPPORTS	150-1	150
7511 - RECIPROCATING AND VIBRATING PLATES AND GRIZZLEYS	151-1	
BEARING ASSEMBLY SUPPORT SHAFT	151-1	151
FEEDER GRIZZLEY	152-1	152
7512 - FEEDING SHAFTS.....	153-1	
BEARING ASSEMBLY DRIVE CRANK.....	153-1	153
BEARING ASSEMBLY COUNTERSHAFT.....	154-1	154
FEEDER DRIVE.....	155-1	155
CLUTCH ASSEMBLY FEEDER DRIVE.....	156-1	156

TABLE OF CONTENTS - Continued

	Illus. Page	Fig
7513 - FEEDER DISCHARGE	157-1	
CHUTE	157-1	157
7520 - CRUSHER FRAMES	158-1	
DRIVE GUARDS	158-1	158
HOPPER AND PLATFORM	159-1	159
CRUSHER COMPONENTS, HOUSING ASSEMBLY SPUR GEAR	160-1	160
CRUSHER COMPONENTS, HOUSING ASSEMBLY FINGER GEAR	161-1	161
CRUSHER FRAME	162-1	162
CRUSHER SUPPORT	163-1	163
7521 - CRUSHING JAWS, BASE AND PITMAN	164-1	
JAW CRUSHER COMPONENTS	164-1	164
JAW CRUSHER BASE	165-1	165
CRUSHER PITMAN	166-1	166
7522 - ROLLS	167-1	
ROLL SHELL MOVABLE AND STATIONARY SHAFT	167-1	167
7523 - SHAFTS	168-1	
CRUSHER FLYWHEEL	168-1	168
CRUSHER DRIVE BEARING HOUSING, LEFT HAND	169-1	169
CRUSHER DRIVE BEARING HOUSING, RIGHT HAND	170-1	170
ROLL CRUSHER FLYWHEEL	171-1	171
CRUSHER ROLL SHAFT MOVABLE	172-1	172
ROLL SHAFT STATIONARY	173-1	173
SCREENING CRUSHER AND JAW CRUSHER DRIVE PULLEYS	174-1	174
IDLER COMPONENTS	175-1	175
7525 - SCREENING BASE, BOX	176-1	
CRUSHER AND SCREEN SUPPORTS	176-1	176
HOPPER AND LINERS	177-1	177
SCREEN BOX	178-1	178
SCREEN BASE	179-1	179
DISCHARGE CHUTE	180-1	180
7526 - CLUTCH SHAFTS	181-1	
SCREEN DRIVE	181-1	181
COUNTERSHAFT BEARING ASSEMBLY	182-1	182
IDLER	183-1	183
7528 - SCREENS AND ATTACHING PARTS	184-1	
SCREENS	184-1	184
7529 - ECCENTRIC OR GYRATOR SHAFT	185-1	
VIBRATOR DRIVE	185-1	185
ECCENTRIC SHAFT	186-1	186
 GROUP 94 REPAIR KITS		
9401 - REPAIR KITS	KIT-1	
REPAIR KITS	KIT-1	KIT
 GROUP 95 GENERAL USE STANDARDIZED PARTS		
9501 - BULK MATERIEL	BULK-1	
BULK MATERIEL	BULK-1	BULK
 SECTION III SPECIAL TOOLS LIST (NOT APPLICABLE)		
 SECTION IV CROSS-REFERENCE INDEXES		
NATIONAL STOCK NUMBER INDEX	I-1	
PART NUMBER INDEX	I-15	
FIGURE AND ITEM NUMBER INDEX	I-92	

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support, and General Support Maintenance of the M544E Forklift Truck. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).


b. *Section III. Special Tools List.* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. *Section IV Cross-reference Indexes.* A list, In National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. Explanation of Columns (Sections II and III).


a. *ITEM NO. (Column (1)).* Indicates the number used to identify items called out in the illustration.

b. *SMR CODE (Column (2)).* The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

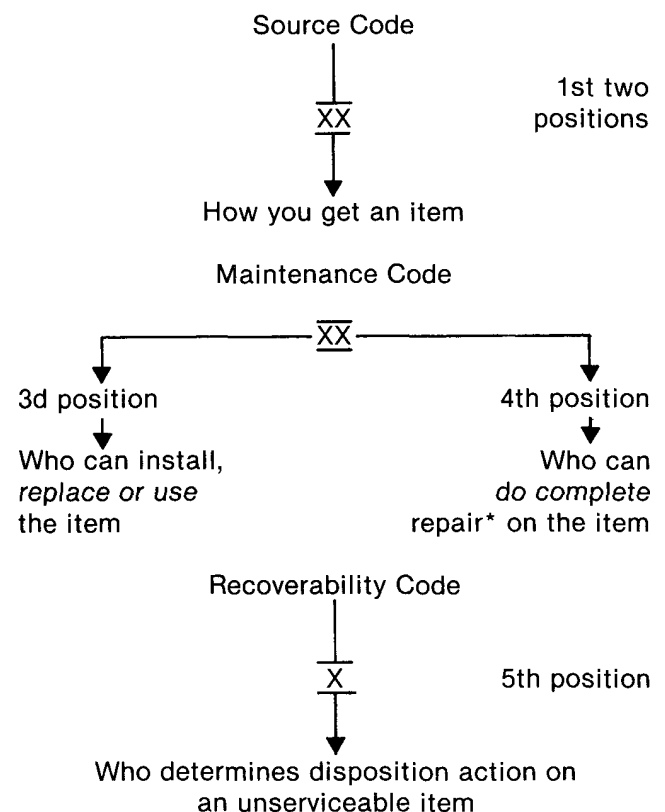

* *Complete Repair.* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) *Source Code.* The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows:

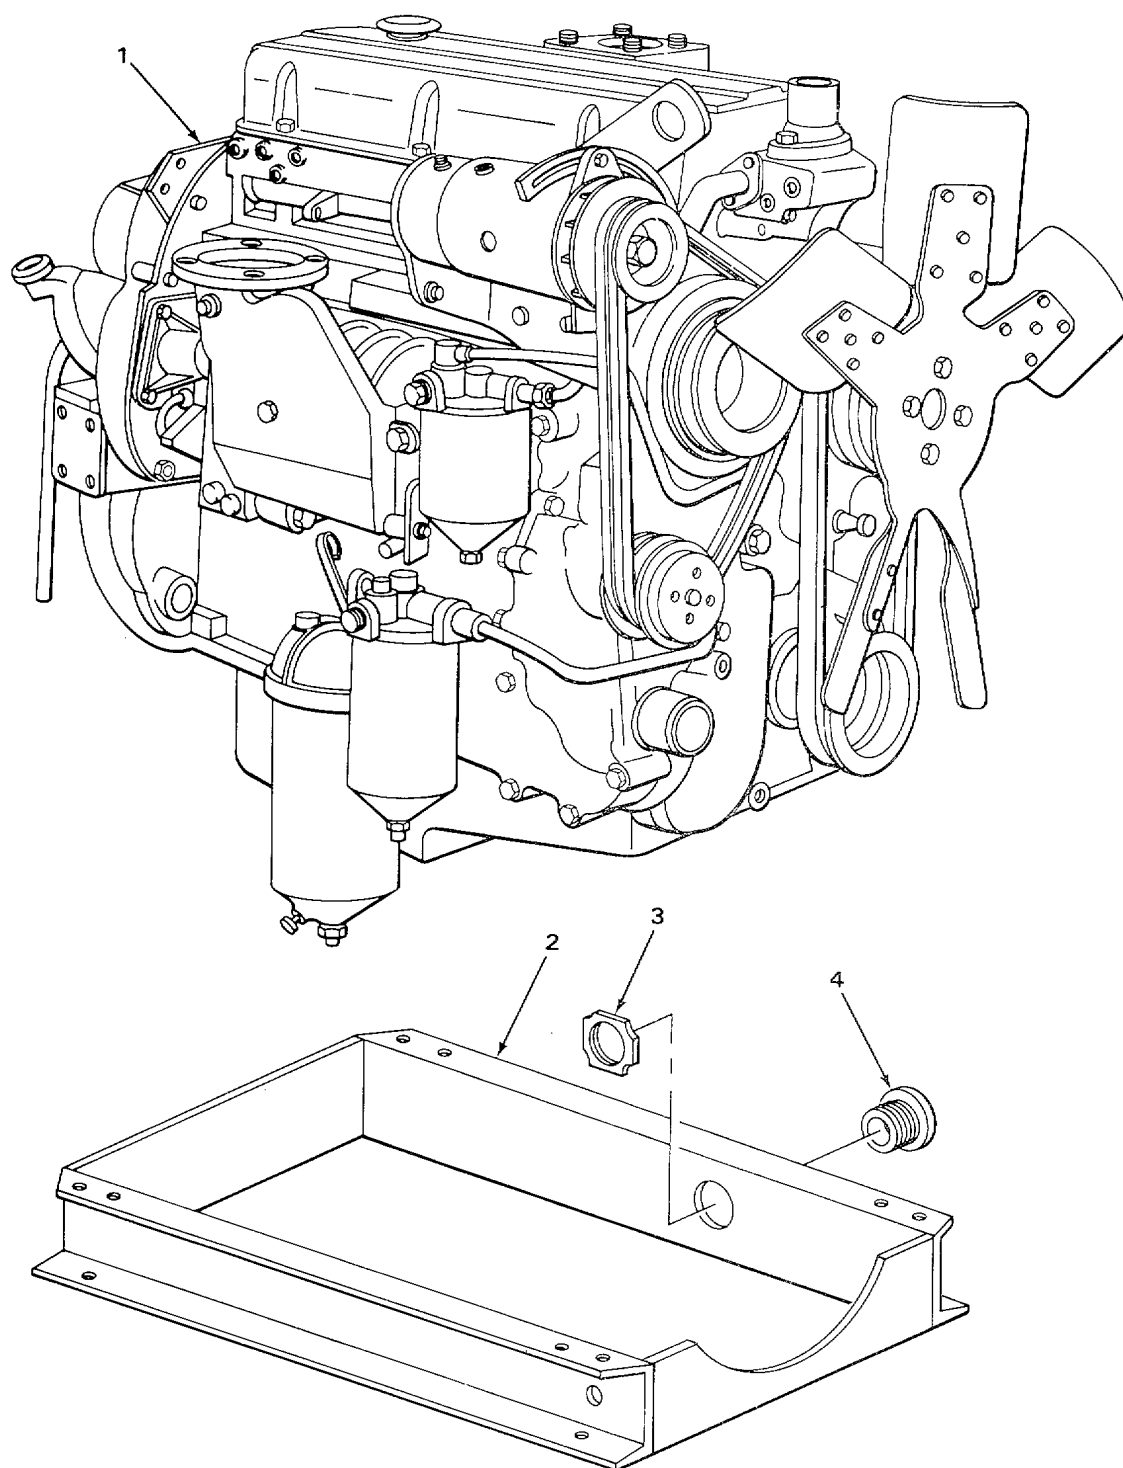

TA502569

FIGURE 1. ENGINE AND ENGINE BASE.

SECTION II				TM 5-3820-233-24P	
(1)	(2)	(3)	(4)	(5)	(6)
ITEM	SMR		PART		
NO	CODE	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES (UOC)	QTY

GROUP 01 ENGINE

GROUP 0100 ENGINE ASSEMBLY

FIG. 1. ENGINE AND ENGINE BASE.

1	XDFHH	72582	1043-7000	ENGINE, DIESEL.....	2
2	XBFZZ	72582	5123301	BASE, ENGINE, MOUNT.....	2
3	XDOZZ	72582	5169559	BONDNUT, ELECTRICAL CABLE BUSHING.....	2
4	XDOZZ	83C90	1-2-0	BUSHING, ELECTRICAL STARTER CABLE.....	2

END OF FIGURE