

LUBRICATION
ORDER

8 JANUARY 1971 (Supersedes LO 5-2410-227-12, dtd 16 March 1970)

TRACTOR, FULL TRACKED; D E D; 9900 LB. DRAWBAR PULL,
W/DOZER BLADE, BACK RIP SCARIFIER (J.I. CASE MODEL
M-450) AND LOADER, SCOOP-TYPE; W/FORK LIFT
ATTACHMENT (J.I. CASE MODEL M-450-L)
W/ENGINE CASE MODEL G188D

Reference: LO 5-2410-227-12-2 and C9100-IL

Intervals are based on normal hours of operation. Adjust to compensate for abnormal operation and severe conditions. During inactive periods, sufficient lubrication must be performed for adequate preservation.

Relubricate after washing.

Clean fitting before lubricating.

Clean parts with SOLVENT, dry-cleaning, or with OIL, fuel, Diesel. Dry before lubricating.

Lubricate points indicated by dotted arrow shaft on both sides of equipment.

A dotted circle indicates a drain below.

Drain crankcase and gearcase when hot. Fill and check level.

FOLD

FOLD

LUBRICANT ● INTERVAL

INTERVAL ● LUBRICANT

