

TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING
DEPOT MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS)**

**TRACTOR, CRAWLER: LOW SPEED, DED: 16,000 TO
24,900 LB. DRAWBAR PULL; 60 IN. MIN. GAGE;
SEGMENTED; AIR TRANSPORTABLE,
W/MOBILITY KIT**

(CATERPILLAR MODEL D5A)

NSN 2410-00-142-5283

(CATERPILLAR MODEL D5A)

NSN 2410-00-230-2767

This manual supersedes TM 5-2410-223-20P, dated 18 January 1971 and
TM 5-2410-223-35P, dated 18 January 1971, and all changes.

Approved for public release; distribution is unlimited.

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING
DEPOT MAINTENANCE REPAIR PARTS AND
SPECIAL TOOLS LISTS)**

**TRACTOR, CRAWLER: LOW SPEED, DED: 16,000 TO
24,900 LB. DRAWBAR PULL; 60 IN. MIN. GAGE;
SEGMENTED; AIR TRANSPORTABLE,
W/MOBILITY KIT**

(CATERPILLAR MODEL D5A)

NSN 2410-00-142-5283

(CATERPILLAR MODEL D5A)

NSN 2410-00-230-2767

Current as of 20 May 1992

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (*Recommended Changes to Publications and Blank Forms*), or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

	Page	Illus Fig
SECTION I. INTRODUCTION	1	
SECTION II. REPAIR PARTS LIST	1-1	
GROUP 01 ENGINE		
0100 - ENGINE ASSEMBLY	1-1	
ENGINE ASSEMBLY.	1-1	1
0101 - CRANKCASE, BLOCK, CYLINDER HEAD	2-1	
CYLINDER HEAD AND VALVES	2-1	2
CYLINDER HEAD COVER AND VALVE ADJUSTING SCREW	3-1	3
CYLINDER BLOCK COVERS	4-1	4
CYLINDER BLOCK COMPONENTS	5-1	5
CYLINDER BLOCK ASSEMBLY	6-1	6

* This manual supersedes TM 5-2410-223-20P, dated 18 January 1971 and TM 5-2410-223-35P dated 18 January 1971, and all changes.

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
0102 - CRANKSHAFT	7-1	
CRANKSHAFT	7-1	7
0103 - FLYWHEEL ASSEMBLY	8-1	
FLYWHEEL	8-1	8
FLYWHEEL CLUTCH COVER	9-1	9
FLYWHEEL CLUTCH	10-1	10
0104-PISTONS AND CONNECTING RODS	11-1	
PISTON AND CONNECTING ROD	11-1	11
0105-VALVES, CAMSHAFTS, AND TIMING SYSTEM	12-1	
CAMSHAFT	12-1	12
INJECTION VALVES	13-1	13
0106-ENGINE LUBRICATION SYSTEM	14-1	
OIL PUMP	14-1	14
OIL PUMP ASSEMBLY	15-1	15
OIL PUMP MOUNTING	16-1	16
OIL RELIEF VALVE	17-1	17
MAGNETIC OIL SCREEN	18-1	18
OIL FILTER	19-1	19
OIL FILTER ASSEMBLY (CODE B).....	20-1	20
OIL FILTER ASSEMBLY (CODE A).....	21-1	21
OIL FILTER AND LINES	22-1	22
OIL LINES	23-1	23
ENGINE BREATHER	24-1	24
0108 - MANIFOLDS	25-1	
MANIFOLDS	25-1	25
0109-ACCESSORY DRIVING MECHANISMS	26-1	
ACCESSORY DRIVE AND PRIMARY FUEL FILTER	26-1	26
GROUP 03 FUEL SYSTEM		
0302 - FUEL PUMPS	27-1	
FUEL PUMP	27-1	27
FUEL TRANSFER PUMP	28-1	28
0304 - AIR CLEANER	29-1	
AIR CLEANER	29-1	29
PRECLEANER ASSEMBLY, DUST EJECTOR	30-1	30
AIR FILTER SERVICE INDICATOR	31-1	31
0306 -TANKS, LINES, FITTINGS, HEADERS	32-1	
FUEL TANK	32-1	32
FUEL LINES	33-1	33
0308-ENGINE SPEED GOVERNOR AND CONTROLS	34-1	
GOVERNOR TORQUE SPRING	34-1	34
GOVERNOR	35-1	35
FUEL PUMP AND GOVERNOR HOUSING	36-1	36
GOVERNOR CONTROLS	37-1	37
0309 - FUEL FILTERS	38-1	
FUEL FILTER	38-1	38
0311 -ENGINE STARTING AIDS.....	39-1	
PRIMER ASSEMBLY	39-1	39
PRIMING PUMP AND LINES	40-1	40
GLOW PLUG	41-1	41
GROUP 04 EXHAUST SYSTEM		
0401 -MUFFLER AND PIPES	42-1	
MUFFLER	42-1	42

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
GROUP 05	COOLING SYSTEM	
0501 - RADIATOR, EVAPORATIVE COOLER, OR HEAT EXCHANGER . .	43-1	
RADIATOR FRAME AND MOUNTING COMPONENTS	43-1	43
Radiator	44-1	44
0503- WATER MANIFOLD, HEADERS, THERMOSTATS, AND HOUSING GASKET . .	45-1	
Water lines	45-1	45
0504- WATER PUMP	46-1	
WATER PUMP	46-1	46
0505- FAN ASSEMBLY	47-1	
FAN DRIVE AND SUPPORT	47-1	47
FAN GROUP,	48-1	48
ENGINE COOLING FAN	49-1	49
GROUP 06	ELECTRICAL SYSTEM	
0601- GENERATOR, ALTERNATOR	50-1	
GENERATOR MOUNTING.	50-1	50
ALTERNATOR AND MOUNTING PARTS.	51-1	51
GENERATOR ASSEMBLY	52-1	52
ALTERNATOR ASSEMBLY	53-1	53
0603 - STARTING MOTOR	54-1	
STARTER ASSEMBLY	54-1	54
STARTER,	55-1	55
STARTER SOLENOID.	56-1	56
0605 - IGNITION COMPONENTS.	57-1	
IGNITION SWITCH.	57-1	57
0607 - INSTRUMENT OR ENGINE CONTROL PANEL	56-1	
ENGINE GAGES	56-1	58
TIME TOTALIZER	59-1	59
0609- Lights	60-1	
FLOODLIGHT	60-1	60
0612 - BATTERIES, STORAGE	61-1	
BATTERY AND WIRING	61-1	61
0613 - HULL OR CHASSIS WIRING HARNESS,	62-1	
LIGHT WIRING	62-1	62
LIGHT WIRING	63-1	63
WIRING AND GAGES.	64-1	64
INSTRUMENT PANEL WIRING HARNESS	65-1	65
MAIN WIRING HARNESS	66-1	66
GROUP 07	TRANSMISSION	
0700 - TRANSMISSION ASSEMBLY	67-1	
TRANSMISSION CASE,	67-1	67
TRANSMISSION COVER	66-1	66
0701 - TRANSMISSION SHAFTS	69-1	
TRANSMISSION GEARS	69-1	69
0710 - TRANSMISSION ASSEMBLY AND ASSOCIATED PARTS	70-1	
GEARSHIFT AND FLYWHEEL CLUTCH CONTROL	70-1	70
CLUTCH CONTROL,	71-1	71
CLUTCH COMPONENTS	72-1	72

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
0721 - COOLERS, PUMPS, MOTORS	73-1	
CLUTCH AND TRANSMISSION LUBRICATION	73-1	73
CLUTCH AND TRANSMISSION LUBRICATION LINES	74-1	74
GROUP 09 PROPELLER, PROPELLER SHAFTS, UNIVERSAL JOINTS, COUPLER, AND CLAMP ASSEMBLY		
0900- PROPELLER SHAFTS.	75-1	
UNIVERSAL JOINTS	75-1	75
GROUP 10 FRONT AXLE		
1003-PLANETARY OR FINAL DRIVE	76-1	
FINAL DRIVE (LOWER HALF)	76-1	76
FINAL DRIVE (UPPER HALF)	77-1	77
GROUP 13 WHEELS AND TRACKS		
1301 - SUSPENSION ASSEMBLY	78-1	
TRACK ROLLER FRAME	78-1	78
1302-TRACK SUPPORT ROLLERS AND BRACKETS	79-1	
TRACK AND ROLLER	79-1	79
TRACK CARRIER ROLLER... ..	80-1	80
ROLLER GROUP, TRACK CARRIER	81-1	81
TRACK ROLLER FRAME GUARD	82-1	82
TRACK GUARD GROUP	83-1	83
1303-TRACK IDLERS AND BRACKETS	84-1	
FRONT IDLER	84-1	84
HYDRAULIC TRACK ADJUSTING	85-1	85
1305- TRACK ASSEMBLY	86-1	
TRACK ASSEMBLY	86-1	86
1311- WHEEL ASSEMBLY... ..	87-1	
NOSEWHEEL	87-1	87
GROUP 14 STEERING		
1403 - STEERING BRAKES	88-1	
STEERING CLUTCH BOOSTER	88-1	88
STEERING CLUTCH AND BRAKE CONTROLS	89-1	89
BRAKE BAND LEVERS	90-1	90
BRAKE BANDS	91-1	91
STEERING CLUTCH	92-1	92
GROUP 15 FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEMS		
1501- FRAME ASSEMBLY	93-1	
BEVEL GEARCASE	93-1	93
1503-PINTLES AND TOWING ATTACHMENTS	94-1	
DRAWBAR	94-1	94
GROUP 16 SPRINGS AND SHOCK ABSORBERS		
1601 - SPRINGS	95-1	
EQUALIZER SPRING	95-1	95

TABLE OF CONTENTS (Con't)

	Page	Ilus Fig
GROUP 18	BODY CAB, HOOD, AND HULL	
1801 - BODY, CAB, HOOD, AND HULL ASSEMBLIES	96-1	
RADIATOR GUARD	96-1	96
HOOD AND DASH (SIDE)	97-1	97
DOOR EJECTOR BRACE	98-1	98
HOOD AND DASH (FRONT)	99-1	99
BEVEL GEARCASE AND COVERS	100-1	100
1802 - FENDERS, RUNNING BOARDS WITH MOUNTING AND ATTACHING PARTS, OUTRIGGERS, WINDSHIELD, GLASS, ETC.	101-1	
FENDERS	101-1	101
1805 - FLOORS, SUBFLOORS, AND RELATED COMPONENTS	102-1	
FLOOR PLATE	102-1	102
1806 -UPHOLSTERY SEATS, AND CARPETS	103-1	
OPERATOR' S SEAT ASSEMBLY	103-1	103
OPERATOR' S SEAT	104-1	104
OPERATOR'S SEAT SUSPENSION	105-1	105
SEAT CUSHION AND BATTERY BOX	106-1	106
1808- STOWAGE RACKS, BOXES, STRAPS, CARRYING CASES, CABLE REELS, HOSE REELS, ETC	107-1	
STORAGE BASKET	107-1	107
GROUP 21	BUMPERS, GUARDS, AND MARINE FENDERS	
2101 - BUMPERS, BRACKETS, GUARDS, AND PROTECTIVE DEVICES	108-1	
CRANKCASE GUARD	108-1	108
GROUP 24	HYDRAULIC AND FLUID SYSTEMS	
2401 -PUMP AND MOTOR	109-1	
HYDRAULIC PUMP	109-1	109
HYDRAULIC PUMP AND MOUNTINGS	110-1	110
2402 -MANIFOLD AND/OR CONTROL VALVES	111-1	
HYDRAULIC RELIEF VALVE	111-1	111
2403 - HYDRAULIC CONTROLS AND/OR MANUAL CONTROLS	112-1	
HYDRAULIC CONTROLS (TOP VIEW).... .	112-1	112
HYDRAULIC CONTROLS (SIDE VIEW).... .	113-1	113
2406- STRAINERS, FILTERS, LINES, AND FITTINGS, ETC.	114-1	
HYDRAULIC PUMP LINES	114-1	114
2408 -LIQUID TANKS OR RESERVOIRS	115-1	
HYDRAULIC TANK MOUNTING	115-1	115
HYDRAULIC TANK COMPONENTS	116-1	116
HYDRAULIC TANK AND COMPONENTS.	117-1	117
HYDRAULIC TANK CONTROL VALVE..... .	118-1	118
GROUP 74	CRANES, SHOVELS, AND EARTHMOVING EQUIPMENT COMPONENTS	
7435 -MOLDBOARD ASSEMBLY	119-1	
DOZER BLADE	119-1	119
7436 -LIFT ARMS AND PIVOT ASSEMBLIES	120-1	
PUSH ARM AND BRACE	120-1	120
DOZER LINKAGE GROUP	121-1	121
DOZER TRUNNION	122-1	122

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
7439- CIRCLE REVERSE DRAWBAR SIDESHIFT AND LIFT MECHANISM	123-1	
DOZER CYLINDER LINES	123-1	123
LIFT CYLINDER MOUNTING	124-1	124
TILT CYLINDER	125-1	125
GROUP 94 REPAIR KITS		
9401 - REPAIR KITS	KIT-1	
REPAIR KITS	KIT-1	KIT
GROUP 95 GENERAL USE STANDARDIZED PARTS		
9501 - BULK MATERIEL	BULK-1	
BULK MATERIEL	BULK -1	BULK
SECTION III. SPECIAL TOOLS		
GROUP 26 TOOLS AND TEST EQUIPMENT		
2604 - SPECIAL TOOLS	126-1	
SPECIAL TOOLS.	126-1	126
SPECIAL TOOL	127-1	127
SECTION IV. CROSS-REFERENCE INDEXES		
NATIONAL STOCK NUMBER INDEX.....	I-1	
PART NUMBER INDEX	I-18	
FIGURE AND ITEM NUMBER INDEX.....	1-85	

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS)

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support, and General Support Maintenance of the Crawler Tractor. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).

b. *Section III. Special Tools List.* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.


c. *Section IV. Cross-reference Indexes.* A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item number appearance.

The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. Explanation of Columns (Sections II and III).

a. *ITEM NO. (Column (1)).* Indicates the number used to identify items called out in the illustration.

b. *SMR CODE (Column (2)).* The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

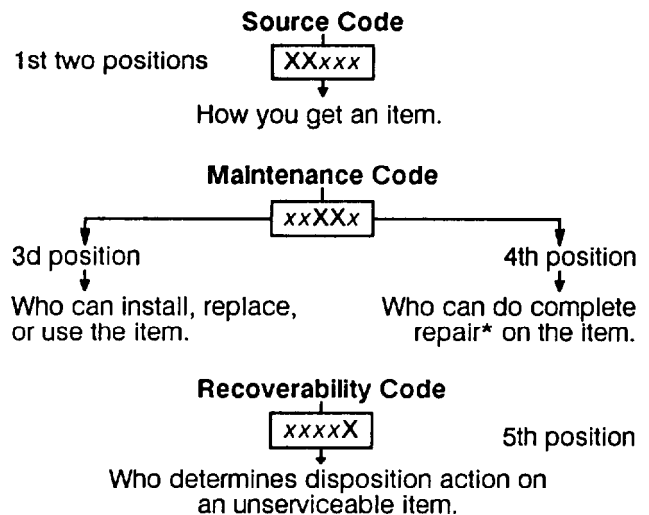

**Complete Repair:* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) *Source Code.* The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: