

TECHNICAL MANUAL

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST)

TRACTOR, FULL-TRACKED, LOW
SPEED, DED, MEDIUM DRAWBAR
PULL; OSCILLATING TRACK,
78 IN. GAGE

NSN 2410-00-177-7283 W/RIPPER

NSN 2410-00-177-7284 W/WINCH

NSN 2410-00-185-9794

W/RIPPER AND ROPS

NSN 2410-00-185-9792

W/WINCH AND ROPS

CATERPILLAR MODEL D7F

This manual Supersedes TM 5-2410-233-24P, 22 September 1989 and all changes.

Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY
21 JANUARY 2002

Technical Manual

*TM 5-2410-233-24P

HEADQUARTERS,
DEPARTMENT OF THE ARMY
Washington, DC, 21 January 2002

UNIT
DIRECT SUPPORT AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST (INCLUDING
DEPOT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LISTS)
TRACTOR, FULL-TRACKED, LOW SPEED, DED,
MEDIUM DRAW BAR PULL; OSCILLATING TRACK,
78 IN. GAGE
NSN 2410-00-177-7283 W/RIPPER
NSN 2410-00-185-7284 W/WINCH
NSN 2410-00-185-9794 W/RIPPER AND ROPS
NSN 2410-00-185-9792 W/WINCH AND ROPS

CATERPILLAR MODEL D7F

CURRENT AS OF 06 November 2001

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this publication. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Submit your DA Form 2028 (Recommended Changes to Equipment Technical Publications), through the Internet, on the Army Electronic Product Support (AEPS) website. The Internet address is <http://aeeps.ria.army.mil>. If you need a password, scroll down and click on "ACCESS REQUEST FORM". The DA Form 2028 is located in the ONLINE FORMS PROCESSING section of the AEPS. Fill out the form and click on SUBMIT. Using this form on the AEPS will enable us to respond quicker to your comments and better manage the DA Form 2028 program. You may also mail, fax or E-mail your letter or DA Form 2028 direct to: AMSTA-LC-CI / TECH PUBS, TACOM-RI, 1 Rock Island Arsenal, Rock Island, IL 61299-7630. The email address is TACOM-TECH-PUBS@ria.army.mil. The fax number is DSN 793-0726 or Commercial (309) 782-0726.

Approved for public release: distribution is unlimited.

TABLE OF CONTENTS

	ILLUS PAGE	FIG
SECTION I. INTRODUCTION	1	
SECTION II REPAIR PARTS LIST	1-1	
GROUP 01 ENGINE		
0100- ENGINE ASSEMBLY	1-1	
ENGINE AND MOUNTING BRACKETS 5R0829, 5R3715, 5R7757, 5R3857 ENGINES	1-1	1
ENGINE FRONT SUPPORT, 5R0829 ENGINE	2-1	2
ENGINE FRONT SUPPORT, 5R3715, 5R7757, 5R3857 ENGINES	3-1	3

*THIS PUBLICATION SUPERSEDES TM 5-2410-233-24P, DATED 22 SEPTEMBER 1989 AND ALL CHANGES.

TABLE OF CONTENTS

	ILLUS PAGE	FIG
0101- CRANKCASE, BLOCK, CYLINDER HEAD_____	4-1	
ENGINE BLOCK, 5R0829 ENGINE_____	4-1	4
ENGINE BLOCK ACCESS COVER, 5R0829 ENGINE_____	4A-1	4A
ENGINE BLOCK, 5R3715, 5R7757, 5R8357 ENGINES_____	5-1	5
CYLINDER SLEEVE, 5R0829, 5R3715, 5R7757, 5R8357 ENGINES_____	6-1	6
CYLINDER HEAD, 5R0829 ENGINE_____	7-1	7
CYLINDER HEAD, 5R3715 ENGINE_____	8-1	8
CYLINDER HEAD, 5R7757, 5R8357 ENGINES_____	9-1	9
0102- CRANKSHAFT_____	10-1	
CRANKSHAFT AND PULLEY, 5R0829 ENGINE_____	10-1	10
CRANKSHAFT AND PULLEY, 5R3715, 5R7757, 5R8357 ENGINES_____	11-1	11
0103 FLYWHEEL ASSEMBLY_____	12-1	
FLYWHEEL AND HOUSING, 5R0829 ENGINE_____	12-1	12
FLYWHEEL AND HOUSING, 5R3715, 5R7757, 5R8357 ENGINES_____	13-1	13
0104 PISTONS, CONNECTING RODS_____	14-1	
PISTONS AND CONNECTING RODS 5R0829, 5R3715, 5R7757, 5R8357 ENGINES_____	14-1	14
0105 VALVES, CAMSHAFTS AND TIMING SYSTEMS_____	15-1	
TIMING GEAR HOUSING AND COVERS, 5R0829 ENGINE_____	15-1	15
TIMING GEAR HOUSING AND COVERS, 5R3715, 5R7757, 5R8357 ENGINES_____	16-1	16
BEARING GEARSHAFT AND HOUSING, 5R0829 ENGINE_____	17-1	17
CAMSHAFT AND GEAR, 5R0829 ENGINE_____	18-1	18
CAMSHAFT, 5R3715, 5R7757, 5R8357 ENGINES_____	19-1	19
VALVE COVER, LIFTERS AND ROCKER ARMS, 5R0829 ENGINE_____	20-1	20
VALVE COVER, LIFTERS AND ROCKER ARMS, 5R3715, 5R7757, 5R8357 ENGINES_____	21-1	21
INTAKE AND EXHAUST VALVES, 5R0829 ENGINE_____	22-1	22
INTAKE AND EXHAUST VALVES, 5R3715, 5R7757, 5R8357 ENGINES_____	23-1	23
0106- ENGINE LUBRICATION SYSTEM_____	24-1	
ENGINE OIL FILLER, 5R0829 ENGINE_____	24-1	24
ENGINE OIL FILLER, 5R3715 ENGINE_____	25-1	25
ENGINE OIL FILLER, 5R7757, 5R8357 ENGINES_____	25A-1	25A
OIL FILTER AND LINES, 5R0829 ENGINE_____	26-1	26
OIL FILTER, 5R0829, ENGINE_____	26A-1	26A
OIL FILTER, 5R3715, 5R7757, 5R8357 ENGINES_____	27-1	27
OIL COOLER, BONNET, AND HOSE, 5R0829 ENGINE_____	28-1	28
OIL COOLER, BONNET, AND HOSE, 5R3715, 5R7757, 5R8357 ENGINES_____	29-1	29
ENGINE BREATHER, 5R0829 ENGINE_____	30-1	30
ENGINE BREATHER, 5R3715, 5R7757, 5R8357 ENGINES_____	30A-1	30A
OIL PAN, 5R0829 ENGINE_____	31-1	31
OIL PAN, 5R3715, 5R7757, 5R8357 ENGINES_____	32-1	32
OIL PUMP, 5R0829 ENGINE_____	33-1	33
OIL PUMP, 5R3715, 5R7757, 5R8357 ENGINES_____	34-1	34
ENGINE OIL PUMP LINES, 5R3715, 5R7757, 5R8357 ENGINES_____	35-1	35
ARMY OIL ANALYSIS PROGRAM_____	35A-1	35A
0108- MANIFOLDS_____	36-1	
EXHAUST MANIFOLD, 5R0829 ENGINE_____	36-1	36
EXHAUST MANIFOLD, 5R3715, 5R7757, 5R8357 ENGINES_____	37-1	37
0109- ACCESSORY DRIVING MECHANISMS_____	38-1	
ACCESSORY DRIVE TO FUEL INJECTION PUMP, 5R0829 ENGINE_____	38-1	38
GROUP 03 FUEL SYSTEM		
0301- FUEL INJECTION_____	39-1	
FUEL INJECTORS, LINES AND FITTINGS, 5R0829 ENGINE_____	39-1	39
FUEL INJECTORS, LINES AND FITTINGS, 5R3715 ENGINE_____	40-1	40
FUEL INJECTORS, LINES AND FITTINGS, 5R7757, 5R8357 ENGINES_____	41-1	41
0302- FUEL PUMPS_____	42-1	
FUEL PRIMER INJECTION PUMP, 5R0829 ENGINE_____	42-1	42
FUEL PRIMER INJECTION PUMP, 5R3715, 5R7757, 5R8357 ENGINES_____	43-1	43
FUEL INJECTION PUMP, 5R0829 ENGINE_____	44-1	44
FUEL INJECTION PUMP AND TRANSFER PUMP, 5R3715 ENGINE_____	45-1	45

TABLE OF CONTENTS

	ILLUS PAGE	FIG
FUEL INJECTION PUMP, 5R3715 ENGINE	46-1	46
FUEL INJECTION PUMP, 5R3715 ENGINE	47-1	47
FUEL INJECTION PUMP HOUSING, 5R3615 ENGINE	48-1	48
FUEL PUMP DIAPHRAGM AND HOUSING, 5R3715 ENGINE	49-1	49
FUEL PUMP DIAPHRAGM AND HOUSING, 5R7757, 5R8357 ENGINE	49A-1	49A
FUEL PUMP, 5R7757, 5R8357 ENGINES	50-1	50
FUEL TRANSFER PUMP, 5R0829 ENGINE	51-1	51
FUEL TRANSFER PUMP, 5R7757, 5R8357 ENGINES	52-1	52
0304- AIR CLEANER	52A-1	
AIR CLEANER, 5R0829, 5R3715, 5R7757, 5R8357 ENGINES	52A-1	52A
AIR CLEANER INDICATOR, 5R0829, 5R3715, 5R7757, 5R8357 ENGINES	53-1	53
0305- TURBOCHARGER	54-1	
TURBOCHARGER, 5R0829, 5R3715, 5R7757, 5R8357 ENGINES	54-1	54
TURBOCHARGER LINES, 5R0829 ENGINE	55-1	55
TURBOCHARGER LINES AND FITTINGS, 5R3715 ENGINE	56-1	56
TURBOCHARGER LINES AND FITTINGS, 5R7757, 5R8357 ENGINES	57-1	57
AIR CLEANER OUTLET PIPE, 5R8357 ENGINE	57A-1	57A
0306- TANKS, LINES, FITTINGS AND HEADERS	58-1	
FUEL TANK, LINES FITTINGS	58-1	58
0308- ENGINE SPEED GOVERNOR AND CONTROLS	58A-1	
ENGINE SPEED GOVERNOR, 5R0829 ENGINE	58A-1	58A
ENGINE SPEED GOVERNOR, 5R0829 ENGINE	59-1	59
ENGINE SPEED GOVERNOR, 5R3715 ENGINE	59A-1	59A
ENGINE SPEED GOVERNOR, 5R3715 ENGINE	59B-1	59B
GOVERNOR, BLEED LINE, EXCESS FUEL, 5R3715 ENGINE	59C-1	59C
ENGINE SPEED GOVERNOR, 5R8357 ENGINE	60-1	60
ENGINE SPEED GOVERNOR, 5R7757, 5R8357 ENGINES	60A-1	60A
ENGINE SPEED GOVERNOR, 5R7757, 5R8357 ENGINES	60B-1	60B
GOVERNOR CONTROL TORQUE, 5R3715 ENGINE	61-1	61
0309- FUEL FILTERS	62-1	
SECONDARY FUEL FILTER, LINES AND FITTINGS, 5R0829 ENGINE	62-1	62
SECONDARY FUEL FILTER, LINES AND FITTINGS, 5R7757, 5R8357 ENGINES	62A-1	62A
FUEL FILTER AND BASE, 5R5715 ENGINE	62B-1	62B
FUEL FILTER, LINES AND FITTINGS, 5R7757, 5R8357 ENGINES	62C-1	62C
ACCESSORY DRIVE FUEL FILTER, 5R0829 ENGINE	62D-1	62D
0311- ENGINE STARTING AIDS	63-1	
GLOW PLUGS AND RELATED PARTS, 5R0829, 5R3715 ENGINES	63-1	63
ETHER STARTING AID, 5R8357 ENGINE	63A-1	63A
ETHER STARTING SWITCH, 5R8357 ENGINE	63B-1	63B
PRECOMBUSTION CHAMBER, 5R0829, 5R3715 ENGINES	63C-1	63C
0312- ACCELERATOR AND THROTTLE CONTROL	64-1	
THROTTLE LINKAGE, 5R0829 ENGINE	64-1	64
THROTTLE LINKAGE, 5R3715, 5R7757, 5R8357 ENGINES	65-1	65
THROTTLE LINKAGE FOOT CONTROLS	66-1	66
GROUP 04 EXHAUST SYSTEM		
0401- EXHAUST SYSTEM	67-1	
MUFFLER AND PIPES	67-1	67
EXHAUST PIPE	68-1	68
GROUP 05 COOLING SYSTEM		
0501- RADIATOR	69-1	
RADIATOR	69-1	69
RADIATOR GUARDS AND GRILL	70-1	70
0503- WATER MANIFOLD HEADERS, THERMOSTAT AND HOUSING GASKET	71-1	
WATER MANIFOLD, 5R0829 ENGINE	71-1	71
WATER MANIFOLD, 5R3715, 5R7757, 5R8357 ENGINES	72-1	72
THERMOSTAT AND HOUSING, 5R0829 ENGINE	73-1	73
THERMOSTAT AND HOUSING, 5R3715, 5R7757, 5R8357 ENGINES	74-1	74

TABLE OF CONTENTS

	ILLUS PAGE	FIG
0504- WATER PUMP, 5R0829 ENGINE _____	75-1	75
WATER PUMP, 5R3715, 5R7757, 5R8357 ENGINES _____	76-1	76
WATER PUMP ATTACHING PARTS _____	77-1	77
0505- FAN ASSEMBLY _____	78-1	
FAN DRIVE ASSEMBLY, 5R0829 ENGINE _____	78-1	78
FAN DRIVE ASSEMBLY, 5R3715, 5R7757, 5R8357 ENGINES _____	79-1	79
FAN AND FAN GUARD ASSEMBLY, 5R0829, 5R3715, 5R7757, 5R8357 ENGINES _____	79A-1	79A
FAN SHIELD _____	80-1	80
GROUP 06 ELECTRICAL SYSTEM		
0601- ALTERNATOR, GENERATOR _____	81-1	
GENERATOR DRIVE AND MOUNTING PARTS, 5R0829 ENGINE _____	81-1	81
ALTERNATOR DRIVE AND MOUNTING PARTS, 5R0829, 5R3715, 5R7757, 5R8357 _____	81A-1	81A
GENERATOR ASSEMBLY (DELCO REMY), 5R0829 ENGINE _____	82-1	82
ALTERNATOR ASSEMBLY (BOSCH), 5R0829, 5R3715, 5R7757, 5R8357 ENGINES _____	82A-1	82A
ALTERNATOR ASSEMBLY (NIPPONDENSO), 5R0829, 5R3715, 5R7757, 5R8357 ENGINES _____	83-1	83
ALTERNATOR ASSEMBLY (DELCO REMY), 5R0829, 5R3715, 5R7757, 5R8357 ENGINES _____	84-1	84
0602- GENERATOR REGULATOR _____	85-1	
GENERATOR REGULATOR _____	85-1	85
0603- STARTING MOTOR _____	86-1	
STARTER AND RELAY SOLENOID, 5R0829 ENGINE _____	86-1	86
STARTER (DELCO REMY), 5R0829, 5R3715, 5R7757, 5R8357 ENGINES _____	87-1	87
STARTER (DELCO REMY), 5R0829, 5R3715, 5R7757, 5R8357 ENGINES _____	87A-1	87A
RELAY SOLENOID, (DELCO REMY), 5R0829, 5R3715, 5R7757, 5R8357 ENGINES _____	88-1	88
STARTER AND RELAY SOLENOID, (BOSCH), 5R0829, 5R3715, 5R7757, 5R8357 ENGINES _____	89-1	89
STARTER AND RELAY SOLENOID, (DELCO REMY), 5R0829, 5R3715, 5R7757, 5R8357 ENGINES _____	90-1	90
STARTER AND RELAY SOLENOID, (DELCO REMY), 5R0829, 5R3715, 5R7757, 5R8357 ENGINES _____	91-1	91
STARTER (PRESTOLITE), 5R0829, 5R3715, 5R7757, 5R8357 ENGINES _____	92-1	92
0606- ENGINE SAFETY CONTROLS _____	93-1	
ENGINE SAFETY CIRCUIT BREAKER _____	93-1	93
0607- INSTRUMENT CONTROL PANEL _____	94-1	
INSTRUMENT CONTROL PANEL'S GAGES _____	94-1	94
INSTRUMENT CONTROL PANEL _____	95-1	95
INSTRUMENT CONTROL PANEL AND ATTACHING PARTS _____	96-1	96
INSTRUMENT CONTROL PANEL AND CIRCUIT BREAKERS _____	97-1	97
0609- LIGHTS _____	98-1	
LIGHTS _____	98-1	98
0610- SENDING UNITS AND WARNING SWITCHES _____	99-1	
ELECTRICAL SENDING UNITS AND WARNING SWITCHES _____	99-1	99
OIL TEMPERATURE ELECTRICAL ASSEMBLY, 5R8357 ENGINE _____	99A-1	99A
0612- BATTERIES, STORAGE _____	100-1	
BATTERIES, CABLES AND BATTERY BOX _____	100-1	100
0613- CHASSIS WIRING HARNESS _____	101-1	
WIRING HARNESS _____	101-1	101
GROUP 07 TRANSMISSION		
0705- TRANSMISSION SHIFTING CONTROL COMPONENTS _____	102-1	
TRANSMISSION SHIFTER AND RELATED PARTS _____	102-1	102
TRANSMISSION SHIFTING COMPONENTS _____	103-1	103
TRANSMISSION SELECTOR VALVE _____	104-1	104
TRANSMISSION DIRECTIONAL VALVE _____	105-1	105
TRANSMISSION'S PRESSURE CONTROL VALVE _____	106-1	106
0708- TORQUE CONVERTER _____	107-1	
TRANSMISSION TORQUE DIVIDER _____	107-1	107
0710- TRANSMISSION ASSEMBLY AND ASSOCIATED PARTS _____	108-1	
TRANSMISSION ASSEMBLY HOUSING AND COVERS _____	108-1	108
TRANSMISSION INPUT SHAFT, BEARINGS AND GEARS _____	109-1	109
TRANSMISSION PLANETARY GEAR _____	110-1	110

TABLE OF CONTENTS

	ILLUS PAGE	FIG
TRANSMISSION PLANETARY GEARS AND SHAFTS _____	111-1	111
TRANSMISSION THIRD GEAR _____	112-1	112
TRANSMISSION REVERSE GEAR _____	113-1	113
0721- COOLERS, PUMPS AND MOTORS _____	114-1	
TORQUE DIVIDER PUMP _____	114-1	114
TORQUE DIVIDER RELIEF VALVE _____	115-1	115
TRANSMISSION FILTER _____	116-1	116
TRANSMISSION STRAINER ASSEMBLY _____	117-1	117
TRANSMISSION OIL COOLER, 5R0829 ENGINE _____	118-1	118
TRANSMISSION OIL COOLER, 5R3715, 5R7757, 5R8357 ENGINES _____	119-1	119
TRANSMISSION OIL COOLER LINES AND FITTINGS, 5R3715, 5R7757, ENGINES _____	120-1	120
TRANSMISSION TO OIL COOLER LINES AND FITTINGS, 5R8357, ENGINE _____	120A-1	120A
TRANSMISSION TO OIL COOLER LINES AND FITTINGS _____	121-1	121
TRANSMISSION LINES AND FITTINGS _____	122-1	122
TRANSMISSION OIL PUMP _____	123-1	123
GROUP 08 FINAL DRIVE ASSEMBLY		
0801- FINAL DRIVE ASSEMBLY _____	124-1	
FINAL DRIVE ASSEMBLY _____	124-1	124
FINAL DRIVE CASE _____	125-1	125
FINAL DRIVE TOP RIGHT COVER _____	126-1	126
FINAL DRIVE TOP LEFT COVER _____	127-1	127
GROUP 09 PROPELLER AND PROPELLER SHAFTS		
0900- PROPELLER SHAFTS _____	128-1	
PROPELLER SHAFTS AND UNIVERSAL JOINTS _____	128-1	128
GROUP 13 WHEELS AND TRACKS		
1301- SUSPENSION ASSEMBLY _____	129-1	
TRACK FRAME _____	129-1	129
SUSPENSION EQUALIZER AND RELATED PARTS _____	130-1	130
TRACK FRAME GUARDS _____	131-1	131
TRACK ROLLER GUARDS _____	132-1	132
1302- TRACK SUPPORT ROLLERS AND BRACKETS _____	133-1	
TRACK SUPPORT CARRIER ROLLERS AND BRACKETS _____	133-1	133
TRACK SUPPORT LOWER ROLLERS _____	134-1	134
TRACK TENSION AND IDLER PARTS _____	135-1	135
1303- TRACK IDLERS AND BRACKETS _____	136-1	
TRACK IDLER COMPENSATING WHEEL _____	136-1	136
1304- TRACK DRIVE SPROCKETS _____	137-1	
TRACK DRIVE SPROCKET _____	137-1	137
1305- TRACK ASSEMBLY _____	138-1	
TRACK ASSEMBLY _____	138-1	138
GROUP 14 STEERING		
1403- STEERING BRAKES _____	139-1	
STEERING BRAKE _____	139-1	139
STEERING BRAKE CONTROL PEDALS _____	140-1	140
STEERING BRAKE HAND CONTROL AND LINKAGE _____	141-1	141
STEERING CLUTCH _____	142-1	142
1414- STEERING SYSTEM VALVE _____	143-1	
STEERING CLUTCH CONTROL VALVE _____	143-1	143
STEERING SYSTEM CHECK VALVE _____	144-1	144
STEERING SYSTEM RELIEF VALVE _____	145-1	145
GROUP 18 BODY, CAB AND HOOD		
1801- BODY, CAB AND HOOD ASSEMBLIES _____	146-1	
LEFT SIDE ENGINE COVER AND RELATED PARTS _____	146-1	146
RIGHT SIDE ENGINE COVER AND HOOD _____	147-1	147
RADIATOR GUARD _____	148-1	148

TABLE OF CONTENTS

	ILLUS PAGE	FIG
ROLL OVER PROTECTION ASSEMBLY _____	149-1	149
CRANKCASE GUARD ASSEMBLY _____	150-1	150
DASH ASSEMBLY _____	151-1	151
FENDERS _____	152-1	152
FLOORS _____	153-1	153
1806- UPHOLSTERY SEATS AND CARPETS _____	154-1	
PASSENGER SEAT _____	154-1	154
OPERATOR SEAT AND RELATED PARTS _____	155-1	155
1808- STOWAGE RACKS, BOXES, STRAPS AND CARRYING CASES _____	156-1	
TOOL BOX _____	156-1	156
GROUP 20 HOIST, WINCH, CAPSTAN, WINDLASS, POWER CONTROL UNIT AND POWER TAKEOFF		
2001- HOIST, CAPSTAN, WINDLASS AND WINCH ASSEMBLY _____	157-1	
WINCH ASSEMBLY _____	157-1	157
WINCH'S DRUM SHAFT AND CABLE _____	158-1	158
WINCH'S INTERMEDIATE GEAR AND SHAFT _____	159-1	159
WINCH'S BRAKE WHEEL AND SHAFT _____	160-1	160
WINCH'S CLUTCH SHAFT _____	161-1	161
WINCH'S CLUTCH _____	162-1	162
WINCH'S BRAKE AND LINKAGE _____	163-1	163
WINCH'S BRAKE CYLINDER _____	164-1	164
WINCH'S HYDRAULIC LINES AND FITTINGS _____	165-1	165
WINCH'S HYDRAULIC CONTROL VALVE _____	166-1	166
WINCH'S HYDRAULIC PUMP _____	167-1	167
WINCH CONTROLS _____	168-1	168
2004- WINCH'S DRIVE SHAFT FROM POWER TAKEOFF _____	169-1	169
GROUP 22 ACCESSORY ITEMS		
2210- DATA PLATES AND INSTRUCTION HOLDERS _____	170-1	
LUBRICATING INSTRUCTIONS _____	170-1	170
STARTING INSTRUCTION PLATES _____	171-1	171
SERVICE INSTRUCTION PLATES _____	172-1	172
AIR FILTER AND PRESSURE CYLINDER INSTRUCTION PLATES _____	173-1	173
WARNING AND DATA PLATES, 5R0829, 5R3715, 5R7757 ENGINES _____	174-1	174
GROUP 24 HYDRAULIC AND FLUID SYSTEMS		
2401- PUMP AND MOTOR _____	175-1	
HYDRAULIC PUMP DRIVE _____	175-1	175
HYDRAULIC PUMP DRIVE, 5R0829 ENGINE _____	176-1	176
HYDRAULIC PUMP DRIVE, 5R3715, 5R7757, 5R8357 ENGINES _____	176A-1	176A
MAIN HYDRAULIC PUMP ASSEMBLY _____	177-1	177
2402- MANIFOLD AND CONTROL VALVE _____	178-1	
HYDRAULIC TILT CONTROL VALVE _____	178-1	178
HYDRAULIC RELIEF VALVE _____	179-1	179
HYDRAULIC RIPPER CONTROL VALVE _____	180-1	180
MAIN HYDRAULIC CONTROL VALVE _____	181-1	181
2403- HYDRAULIC AND MANUAL CONTROLS _____	182-1	
HYDRAULIC RIPPER CONTROL VALVE LINKAGE _____	182-1	182
MAIN HYDRAULIC CONTROL VALVE LINKAGE _____	183-1	183
2404- TILT CYLINDERS _____	184-1	
HYDRAULIC TILT CYLINDERS _____	184-1	184
2405- MAST COLUMN _____	185-1	
HYDRAULIC LIFT CYLINDER _____	185-1	185
HYDRAULIC LIFT CYLINDER CARRIAGE AND MOUNTING BRACKETS _____	186-1	186
2406- STRAINERS, FILTERS, LINES AND FITTINGS _____	187-1	
HYDRAULIC TILT CYLINDER LINES AND FITTINGS _____	187-1	187
HYDRAULIC LINES AND FITTINGS _____	188-1	188
HYDRAULIC LIFT CYLINDER LINES AND FITTINGS _____	189-1	189
HYDRAULIC TUBES AND FLANGES _____	190-1	190
HYDRAULIC PUMP LINES AND FITTINGS _____	191-1	191
HYDRAULIC RIPPER LINES AND FITTINGS _____	192-1	192
HYDRAULIC TANK FILTER AND RELATED PARTS _____	193-1	193

TABLE OF CONTENTS

	ILLUS PAGE	FIG
2407-HYDRAULIC CYLINDERS _____	194-1	
HYDRAULIC RIPPER CYLINDER _____	194-1	194
2408- LIQUID TANKS OR RESERVOIRS _____	195-1	
HYDRAULIC TANK AND RELATED PARTS _____	195-1	195
HYDRAULIC MANIFOLD VALVE _____	196-1	196
HYDRAULIC TANK EXPLODED VIEW _____	197-1	197
GROUP 47 GAGES, WEIGHING AND MEASURING DEVICES		
4702- FUEL PRESSURE INDICATORS _____	197A-1	
FUEL PRESSURE INDICATOR, 5R0829 ENGINE _____	197A-1	197A
FUEL PRESSURE INDICATOR, 5R3715 ENGINE _____	197B-1	197B
FUEL PRESSURE INDICATOR, 5R7757, 5R8357 ENGINES _____	197C-1	197C
4703- HOURMETER _____	198-1	
HOURMETER, 5R0829 ENGINE _____	198-1	198
HOURMETER, 5R3715, 5R7757, 5R8357 ENGINES _____	199-1	199
GROUP 74 GRADERS, DOZERS AND EARTH MOVING EQUIPMENT COMPONENTS		
7435- MOLDBOARD ASSEMBLY _____	200-1	
MOLDBOARD ASSEMBLY _____	200-1	200
7436- LIFT ARMS AND PIVOT ASSEMBLIES _____	201-1	
LIFT ARMS AND PIVOT ASSEMBLY _____	201-1	201
7440- SCARIFIER ASSEMBLY _____	202-1	
SCARIFIER ASSEMBLY _____	201-1	202
7465- ROOTERS, RIPPERS, PLOWS, HARROWS AND ROTARY TILLERS _____	203-1	
RIPPER ASSEMBLY _____	203-1	203
GROUP 94 REPAIR KITS		
9401- KITS _____	KIT-1	
KITS _____	KIT-1	KIT
GROUP 95 GENERAL USE STANDARDIZED PARTS		
9501- BULK MATERIAL _____	BULK-1	
BULK _____	BULK-1	BULK
SECTION III. SPECIAL TOOLS LIST (NOT APPLICABLE)		
SECTION IV. CROSS REFERENCE INDEX		
NATIONAL STOCK NUMBER TO FIGURE AND ITEM NUMBER INDEX	I-1	
PART NUMBER TO ITEM NUMBER INDEX	I-53	

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts, special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support and General Support Maintenance of the Tractor. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).

 
b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as Indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Cross-reference Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration, figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE and part numbers.

3. Explanation of Columns (Sections II and III).

a. *ITEM NO.* (Column (1)). Indicates the number used to identify items called out in the illustration.

b. *SMR CODE* (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria and disposition instructions, as shown in the following breakout:

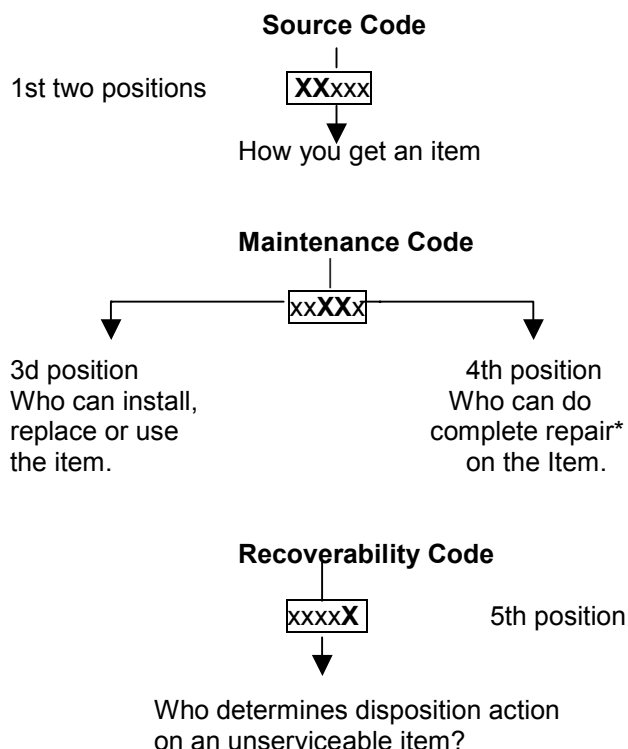

*Complete Repair. Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

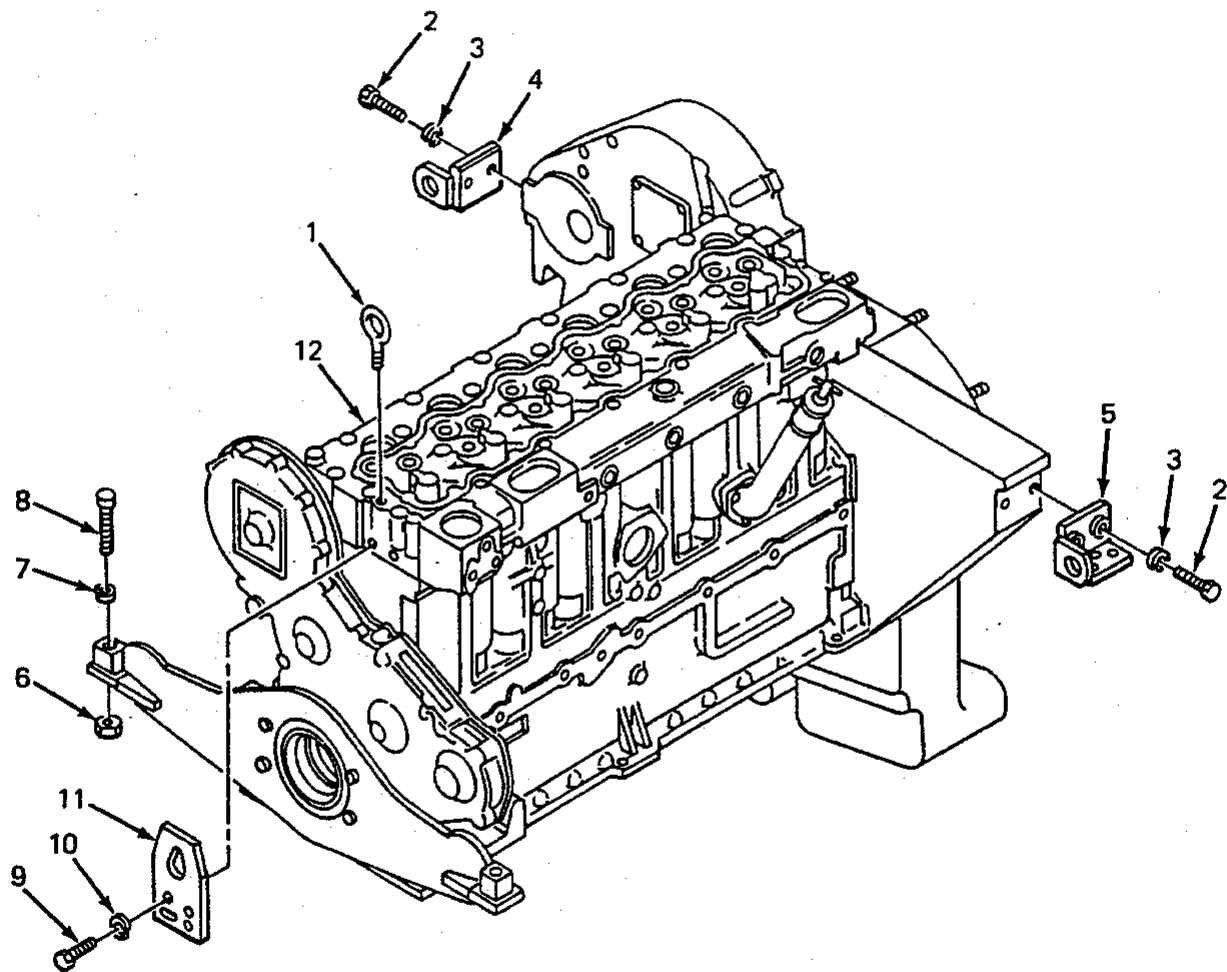 


FIGURE 1. ENGINE AND MOUNTING BRACKETS, 5R0829, 5R3715, 5R7757, 5R8357 ENGINES.

SECTION II		TM5-2410-233-24P						
(1)	(2)	(3)	(4)	(5)		(6)	(7)	
ITEM	SMR			PART				
NO	CODE	NSN	CAGEC	NUMBER		DESCRIPTION AND USABLE ON CODES(UOC)	QTY	
GROUP 01 ENGINE								
GROUP 0100 ENGINE ASSEMBLY								
FIG. 1 ENGINE AND MOUNTING BRACKETS, 5R0829, 5R3715, 5R7757, 5R8357 ENGINES								
1	PAFZZ	5306001401975	11083	5L4544		BOLT,EYE.....	1	
						UOC:BSU,BSV,BSW,BSX,BSZ,GAB		
2	PFFZZ	5305007247221	80204	B1821BH063C175N		SCREW,CAP,HEXAGON H 5/8" 11NC	4	
						1.75" LONG.....		
						UOC:BSQ,BST,BSU,BSV,BSW,BSX,BSY,BSZ, GAB,RJG		
3	PFOZZ	5310008206653	96906	MS35338-50		WASHER, LOCK.....	4	
						UOC:BSR,BSS,BSU,BSV,BSW,BSX		
4	PAFZZ	2510013515937	11083	9S6987		BRACKET,ENGINE MOUN.....	1	
						UOC:BSQ,BST,BSU,BSV,BSW,BSX,BSY,BSZ, GAB,RJG		
5	PAFZZ	2510013514026	11083	9S8926		BRACKET,ENGINE MOUN.....	1	
						UOC:BSQ,BST,BSU,BSV,BSW,BSX,BSY,BSZ, GAB,RJG		
6	PAFZZ	5310009785406	11083	2J3506		NUT,PLAIN,HEXAGON.....	2	
						UOC:BSQ,BST,BSU,BSV,BSW,BSX,BSY,BSZ, GAB,RJG		
7	PAFZZ	5310004191363	11083	2S0115		WASHER,FLAT.....	2	
						UOC:BSQ,BST,BSU,BSV,BSW,BSX,BSY,BSZ, GAB,RJG		
8	PAFZZ	5306004264171	11083	3B2968		BOLT,MACHINE.....	2	
						UOC:BSQ,BST,BSU,BSV,BSW,BSX,BSY,BSZ, GAB,RJG		
9	PAFZZ	5305007215322	96906	MS35307-462		SCREW,CAP,HEXAGON H.....	2	
						UOC:BSQ,BST,BSU,BSV,BSW,BSX,BSY,BSZ, GAB,RJG		
10	PAFZZ	5310011073590	11083	8D5054		WASHER,FLAT.....	2	
						UOC:BSQ,BST,BSU,BSV,BSW,BSX,BSY,BSZ, GAB,RJG		
11	PAFZZ	5365011575068	11083	8N8721		SPACER,PLATE.....	1	
						UOC:BSQ,BST,BSU,BSV,BSW,BSX,BSY,BSZ, GAB,RJG		
END OF FIGURE								

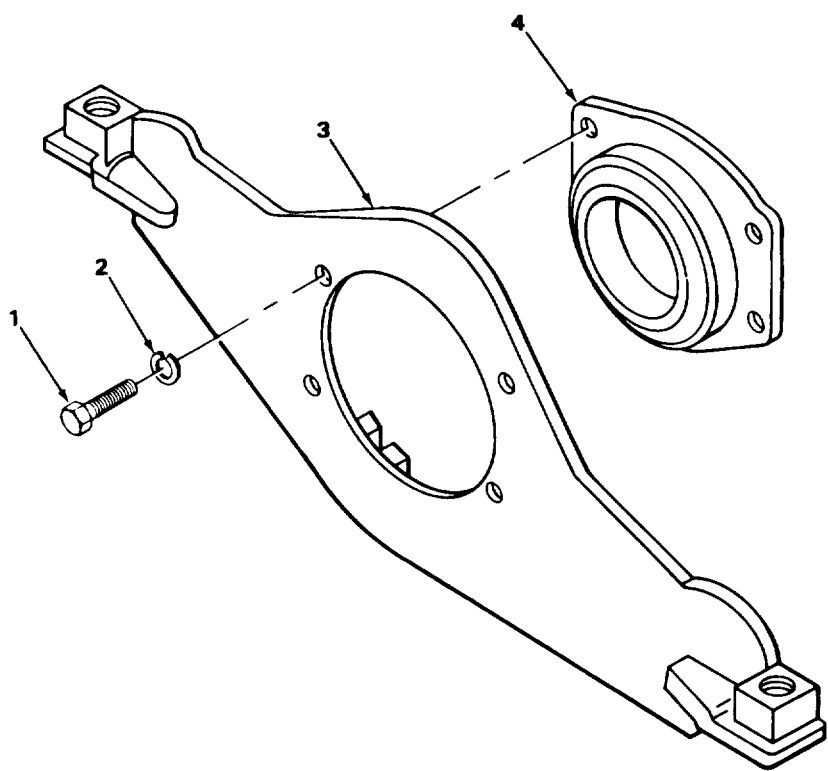 


FIGURE 2. ENGINE FRONT SUPPORT.

SECTION II			TM5-2410-233-24P			
(1)	(2)	(3)	(4)	(5)	(6)	(7)
ITEM	SMR			PART		
NO	CODE	NSN	CAGEC	NUMBER	DESCRIPTION AND USABLE ON CODES(UOC)	QTY
					GROUP 0100 ENGINE ASSEMBLY	
					FIG. 2 ENGINE FRONT SUPPORT, 5R0829 ENGINE	
1	PAFZZ	5306004238117	11083	S1595	BOLT, MACHINE.....	4
					UOC:BSR, BSS, BSU, BSV, BSW, BSX	
2	PFFZZ	5310005845272	96906	MS35338-48	WASHER, LOCK.....	4
					UOC:BSR, BSS, BSU, BSV, BSW, BSX	
3	XDFZZ	2510013515938	11083	1P6074	BRACKET, ENGINE MOUN.....	1
					UOC:BSR, BSS, BSU, BSV, BSW, BSX	
4	PFFZZ	3120004933910	11083	7S1234	BUSHING, SLEEVE.....	1
					UOC:BSR, BSS, BSU, BSV, BSW, BSX	
END OF FIGURE						