

TECHNICAL MANUAL

DIRECT SUPPORT
AND
GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL
TOOLS LIST (INCLUDING DEPOT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST)

**TRACTOR, FULL TRACKED, LOW SPEED,
HEAVY DRAWBAR PULL, (SIZE T-11)
W/ANGLE DOZER, WINCH AND ROPS**

CATERPILLAR MODEL D8K-8A-58 (CCE)

**NSN 2410-00-574-7597
AND
W/BULLDOZER (SEMI-U-TILT), RIPPER
AND ROPS**

CATERPILLAR MODEL D8K-8S-8 (CCE)

NSN 2410-00-574-7598

This manual Supersedes TM 5-2410-234-34P, 27 Jun 1988

Approved for public release; distribution is unlimited.

DIRECT SUPPORT
AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST (INCLUDING
DEPOT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LISTS)
FOR
TRACTOR, FULL-TRACKED, LOW SPEED,
HEAVY DRAW BAR PULL, (SIZE T-11)
W/ANGLE DOZER, WINCH AND ROPS
NSN 2410-00-574-79057
CATERPILLAR MODEL D8K-8A-58 (CCE)
AND
W/BULLDOZER (SEMI-U-TILT), RIPPER
NSN 2410-00-574-7598

CATERPILLAR MODEL D8K-8S-8 (CCE)

CURRENT AS OF: 5 MAY 2000

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this publication. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Submit your DA Form 2028-2 (Recommended Changes to Equipment Technical Publications), through the Internet, on the Army Electronic Product Support (AEPS) website. The Internet address is <http://aeaps.ria.army.mil>. If you need a password, scroll down and click on "ACCESS REQUEST FORM". The DA Form 2028 is located in the ONLINE FORMS PROCESSING section of the AEPS. Fill out the form and click on SUBMIT. Using this form on the AEPS will enable us to respond quicker to your comments and better manage the DA Form 2028 program. You may also mail, fax or email your letter, DA Form 2028, or DA Form 2028-2 direct to: Commander, U.S. Army Tank-automotive and Armaments Command, ATTN: AMSTA-LC-CI, Rock Island, IL 61299-7630. The email address is AMSTA-LC-CI@ria.army.mil. The fax number is DSN 793-0726 or Commercial (309) 782-0726.

Approved for public release: distribution is unlimited.

TABLE OF CONTENTS

	ILLUS PAGE	FIG
SECTION I. INTRODUCTION	1	
SECTION II REPAIR PARTS LIST	1-1	
GROUP 01 ENGINE		
0100- ENGINE ASSEMBLY _____	1-1	
ENGINE ASSEMBLY _____	1-1	1
ENGINE BRACES _____	2-1	2
ENGINE SUPPORTS _____	3-1	3

*THIS PUBLICATION SUPERSEDES TM 52410-234-34P, DATED 27 JUNE 1988 AND ALL CHANGES.

TABLE OF CONTENTS

	ILLUS PAGE	FIG
0101- CRANKCASE, BLOCK, CYLINDER HEAD _____	4-1	
CYLINDER BLOCK AND RELATED PARTS, 4N4445 ENGINE _____	4-1	4
CYLINDER BLOCK AND RELATED PARTS, 7N3491 AND 5R8866 ENGINES _____	4A-1	4A
CYLINDER BLOCK SERVICE PARTS, 4N3491 AND 5R8866 ENGINES _____	4B-1	4B
CYLINDER HEAD AND RELATED PARTS, 4N4445 ENGINE _____	5-1	5
CYLINDER HEAD AND RELATED PARTS, 7N3491 AND 5R8866 ENGINES _____	5A-1	5A
CYLINDER BLOCK COVER _____	6-1	6
0102- CRANKSHAFT _____	7-1	
CRANKSHAFT _____	7-1	7
CRANKSHAFT PULLEY AND DAMPER _____	8-1	8
0103- FLYWHEEL ASSEMBLY _____	9-1	
FLYWHEEL ASSEMBLY _____	9-1	9
FLYWHEEL HOUSING _____	10-1	10
0104- PISTONS, CONNECTING RODS _____	11-1	
PISTONS AND CONNECTING RODS _____	11-1	11
0105- VALVES, CAMSHAFTS AND TIMING SYSTEMS _____	12-1	
TIMING GEAR HOUSING _____	12-1	12
CAMSHAFT ASSEMBLY _____	13-1	13
INTAKE AND EXHAUST VALVES, 4N4445 ENGINE _____	14-1	14
INTAKE AND EXHAUST VALVES, 7N3491, 5R7757 AND 5R8866 ENGINES _____	14A-1	14A
ROCKER ARMS, LIFTERS AND PUSH RODS _____	15-1	15
ROCKERARM COVER _____	16-1	16
0106- ENGINE LUBRICATION SYSTEM _____	17-1	
OIL FILTER, BASE AND BRACKET, 4N4445 AND 7N3491 ENGINES _____	17-1	17
OIL FILTER, BASE AND BRACKET 5R8866 ENGINE _____	18-1	18
OIL SAMPLING 5R8866 ENGINES _____	17B-1	17B
OIL FILLER AND BREATHING ASSEMBLY _____	18-1	18
OIL LEVEL GAUGE _____	19	19
FRONT AND REAR OIL PAN _____	20-1	20
OIL PUMP COVER SCREEN AND BELL _____	21-1	21
OIL PUMP _____	22-1	22
OIL PUMP DRIVE _____	23-1	23
ENGINE OIL COOLER _____	24-1	24
ENGINE OIL COOLER LINES _____	25-1	25
OIL MANIFOLD LINES _____	26-1	26
OIL LINES _____	27-1	27
0108- MANIFOLDS _____	28-1	
EXHAUST MANIFOLD _____	28-1	28
INLET MANIFOLD 4N4455 ENGINE _____	29-1	29
INLET MANIFOLD 7N3491 AND 5R8866 ENGINES _____	29A-1	29A
0109- ACCESSORY DRIVING MECHANISMS _____	30-1	
ACCESSORY DRIVE _____	30-1	30
GROUP 03 FUEL SYSTEM		
0301- CARBURATOR, FUEL INJECTION _____	31-1	
FUEL INJECTORS, AND LINE S _____	31-1	31
0302- FUEL PUMPS _____	32-1	
FUEL PUMP LINES _____	32-1	32
FUEL INJECTION PUMP _____	33-1	33
FUEL INJECTION PUMP HARDWARE _____	34-1	34
FUEL TRANSFER PUMP _____	35-1	35
THROTTLE DELAY _____	36-1	36
0304- AIR CLEANER _____	37-1	
AIR CLEANER _____	37-1	37
AIR CLEANER AND RELATED PARTS _____	38-1	38

TABLE OF CONTENTS

	ILLUS PAGE	FIG
0305- SUPERCHARGER, BLOWER, TURBOCHARGER OR ALTITUDE COMPENSATOR _____	39-1	
MANIFOLD AIR LINES _____	39-1	39
MANIFOLD LINES _____	39A-1	39A
TURBOCHARGER 4N4445 ENGINE _____	40-1	40
TURBOCHARGER 7N3491 AND 5R8866 ENGINES _____	40A-1	40A
TURBOCHARGER CARTRIDGE ASSEMBLY, 7N3491 AND 5R8866 ENGINES _____	40B-1	40B
0306- TANKS, LINES, FITTINGS AND HEADERS _____	41-1	
FUEL TANK AND CAP _____	41-1	41
FUEL LINES _____	42-1	42
FUEL LINES (FOR USE WITH SERIAL RANGE 77V9411 THRU 77V9475) _____	43-1	43
0308- ENGINE SPEED GOVERNOR AND CONTROLS _____	44-1	
GOVERNOR SIDE VIEW _____	44-1	44
GOVERNOR END VIEW _____	45-1	45
TORQUE CONTROL _____	46-1	46
GOVERNOR CONTROL LEVER AND RELATED PARTS _____	47-1	47
GOVERNOR CONTROL BELL CRANK AND RELATED PARTS _____	48-1	48
GOVERNOR CONTROLS LINK AND RELATED PARTS _____	49-1	49
0309- FUEL FILTERS _____	50-1	
PRIMARY FUEL FILTER _____	50-1	50
FUEL FILTER _____	51-1	51
0311- ENGINE STARTING AIDS _____	52-1	
FUEL PRIMING PUMP (USE WITH ENGINE SERIAL RANGE 17S5088 THRU 17S5307) _____	52-1	52
FUEL PRIMING PUMP _____	53-1	53
GLOW PLUG AND LEAD (USE WITH ENGINE SERIAL RANGE 17S5088 AND UP) _____	54-1	54
GROUP 04 EXHAUST SYSTEM		
0401- MUFFLER AND PIPES _____	55-1	
EXHAUST MUFFLER _____	55-1	55
MUFFLER _____	56-1	56
GROUP 05 COOLING SYSTEM		
0501- RADIATOR, EVAPORATIVE COOLER, OR HEAT EXCHANGER _____	57-1	
RADIATOR (REAR VIEW, USE WITH SERIAL NUMBER RANGE 77V5006 THRU 77V5953) _____	57-1	57
RADIATOR (SIDE VIEW USE WITH SERIAL RANGE 77V5006 THRU 77V5953) _____	58-1	58
RADIATOR (REAR VIEW) _____	59-1	59
RADIATOR (SIDE VIEW) _____	60-1	60
RADIATOR CAP PROTECTIVE COVER _____	61-1	61
0502- COWLING, DEFLECTORS, AIR DUCTS, SHROUDS _____	62-1	
RADIATOR GUARDS _____	62-1	62
0503- WATER MANIFOLD HEADERS, THERMOSTAT AND HOUSING GASKET _____	63-1	
WATER MANIFOLD _____	63-1	63
WATER MANIFOLD LINES AND RELATED PARTS _____	64-1	64
WATER LINES, TURBO, 7N3491 ENGINE _____	64A-1	64A
WATER LINES, TURBO, 7N3491 ENGINE _____	64B-1	64B
WATER LINES, TURBO, 5R8866 ENGINE _____	64C-1	64C
WATER LINES, TURBO, 5R8866 ENGINE _____	64D-1	64D
WATER LINES, AFTER COOLER, 7N3491 AND 5R8866 ENGINES _____	64E-1	64E
WATER LINES, AFTER COOLER, 7N3491 AND 5R8866 ENGINES _____	64F-1	64F
0504- WATER PUMP _____	65-1	
WATER PUMP _____	65-1	65
WATER PUMP IDLER GEAR _____	66-1	66

TABLE OF CONTENTS

	ILLUS PAGE	FIG
0505- FAN ASSEMBLY _____	67-1	
FAN GUARD AND BELT _____	67-1	67
FAN DRIVE _____	68-1	68
GROUP 06 ELECTRICAL SYSTEM		
0601- ALTERNATOR _____	69-1	
ALTERNATOR ,BRACKET AND PULLEY _____	69-1	69
PRESTOLITE ALTERNATOR _____	70-1	70
DELCO REMY ALTERNATOR _____	71-1	71
DELCO REMY ALTERNATOR _____	71A-1	71A
BOSCH ALTERNATOR _____	71B-1	71B
NIPPONDENSO ALTERNATOR _____	71C-1	71C
0603- STARTING MOTOR _____	72-1	
STARTER (USE WITH ENGINE SERIAL RANGE 17S5088 THRU 17S10786 _____	72-1	72
STARTER AND RELATED PARTS (USE WITH ENGINE SERIAL RANGE 17S5088 THRU 17S10786 _____	73-1	73
SOLENOID SWITCH ASSEMBLY(USE WITH ENGINE SERIAL RANGE 17S5088 THRU 17S10786 _____	74-1	74
DELCO REMY STARTER _____	74A-1	74A
SOLENOID _____	74B-1	74B
STARTER AND RELATED PARTS _____	75-1	75
STARTER, EXPLODED VIEW (USE WITH ENGINE SERIAL RANGE 17S10787 AND UP _____	76-1	76
STARTER HOUSING (USE WITH ENGINE SERIAL RANGE 17S10787 AND UP) _____	77-1	77
SOLENOID SWITCH (USE WITH ENGINE SERIAL RANGE 17S10787 AND UP _____	78-1	78
0607- INSTRUMENT PANEL _____	79-1	
INSTRUMENT PANEL AND VANDALISM GUARD _____	79-1	79
INSTRUMENT CONTROL PANEL SWITCHES AND CIRCUIT BREAKERS _____	80-1	80
IGNITION LOCK SWITCH _____	81-1	81
ELECTRIC HOURMETER _____	82-1	82
BACKUP WARNING ALARM HARNESS _____	83-1	83
INSTRUMENT PANEL WIRING HARNESS _____	84-1	84
0609- LIGHTS _____	85-1	
LIGHT ASSEMBLY _____	85-1	85
LAMP GUARDS AND BRACKETS (USE WITH SERIAL RANGE 77V8516 THR U 77V9475 _____	86-1	86
0610- SENDING UNITS AND WARNING SWITCHES _____	87-1	
BACKUP WARNING ALARM (FOR USE WITH ROPS) _____	87-1	87
BACKUP WARNING ALARM _____	88-1	88
COOLENT FLOW WARNING ALARM (USE WITH SERIAL RANGE 17S5966 THRU 17S9688 _____	89-1	89
0611-HORN SIREN _____	90-1	
ELECTRIC HORN AND ATTACHING PARTS (USE WITH SERIAL RANGE 77V8516 THRU 77V9475 _____	90-1	90
DUEL ELECTRIC HORNS (USE WITH SERIAL RANGE 77V9163 THRU 77V9475 _____	91-1	91
CENTER MOUNTED ELECTRIC HORN _____	92-1	92
ELECTRIC HORN _____	93-1	93
0612- BATTERIES, STORAGE _____	94-1	
BATTERY AND CABLES _____	94-1	94
BATTERY BOX _____	95-1	95
BATTERY BOX STRAP _____	96-1	96
0613- HULL OR CHASIS WIRING HARNESS _____	97-1	
MAIN WIRING HARNESS (USE WITH SERIAL RANGE 77V5006 THRU 77V8515) _____	97-1	97
MAIN WIRING HARNESS (USE WITH SERIAL RANGE 17S5966 THRU 17S9688) _____	98-1	98

TABLE OF CONTENTS

	ILLUS PAGE	FIG
MAIN ELECTRICAL WIRING HARNESS (USE WITH SERIAL RANGE 77V85166 THRU 77V9475) _____	99-1	99
HEADLIGHT WIRING HARNESS _____	100-1	100
RIPPER LIGHT WIRING _____	101-1	101
 GROUP 07 TRANSMISSION		
0705- TRANSMISSION SHIFTING COMPONENTS _____	102-1	
TRANSMISSION AND LINKAGE (SIDE VIEW) _____	102-1	102
TRANSMISSION SHIFTER COMPONENTS (SIDE VIEW, USE WITH SERIAL RANGE 77V8516 THRU 77V9475) _____	103-1	103
TRANSMISSION SHIFTER LINKAGE (TOP VIEW) _____	104-1	104
TRANSMISSION HYDRAULIC CONTROLS _____	105-1	105
0708- TORQUE CONVERTER OR FLUID COUPLING _____	106-1	
TORQUE CONVERTER ASSEMBLY _____	106-1	106
TORQUE CONVERTER CARRIER, COVER AND SHAFT _____	107-1	107
TORQUE CONVERTER ASSOCIATED PARTS _____	108-1	108
TORQUE CONVERTER COOLER LINES (USE WITH SERIAL RANGE 77V5006 THRU 77V9475) _____	109-1	109
0710- TRANSMISSION ASSEMBLY _____	109A-1	
TRANSMISSION ARRANGEMENT _____	109A-1	109A
TRANSMISSION CASE AND COVERS _____	110-1	110
PLANETARY TRANSMISSION SHAFT AND RELATED PARTS _____	111-1	111
PLANETARY TRANSMISSION FIRST, SECOND AND THIRD GEARS _____	112-1	112
PLANETARY TRANSMISSION FORWARD AND REVERSE CLUTCH PLATES _____	113-1	113
0721- COOLERS, PUMPS AND MOTORS _____	114-1	
TRANSMISSION OIL COOLER _____	114-1	114
OIL COOLER _____	115-1	115
TRANSMISSION OIL PUMP _____	116-1	116
TORQUE CONVERTER OIL PUMP _____	117-1	117
TRANSMISSION OIL FILTER _____	118-1	118
TRANSMISSION FLUID FILTER (MAGNETIC) _____	119-1	119
TRANSMISSION OIL LINES _____	120-1	120
POWER TRAIN OIL LINES _____	121-1	121
TRANSMISSION OIL LINES AND MOUNTING PARTS _____	122-1	122
TRANSMISSION RELIEF VALVE _____	123-1	123
TRANSMISSION PRESSURE CONTROL VALVE _____	124-1	124
TRANSMISSION PRIORITY VALVE _____	125-1	125
SELECTOR VALVE _____	126-1	126
SELECTOR VALVE _____	126-1A	126A
 GROUP 08 TRANSFER AND OIL DRIVE ASSEMBLIES		
0801- POWER TRANSFER AND FINAL DRIVE ASSEMBLIES _____	127-1	
TRANSFER GEAR _____	127-1	127
FINAL DRIVE (UPPER HALF) _____	128-1	128
FINAL DRIVE (LOWER HALF) _____	129-1	129
0804- LUBRICATION, COOLING OR HYDRAULIC COMPONENTS AND SERVO UNITS _____	130-1	
FINAL DRIVE LUBRICATION SYSTEM _____	130-1	130
 GROUP 09 PROPELLER, PROPELLER SHAFTS, UNIVERSAL JOINTS, COUPLER AND CLAMP ASSEMBLY		
0900- PROPELLER SHAFTS _____	131-1	
UNIVERSAL JOINT ASSEMBLY _____	131-1	131
 GROUP 13 WHEELS AND TRACKS		
1301- SUSPENSION ASSEMBLY _____	132-1	
TRACK ROLLER FRAME _____	132-1	132
EQUALIZER BAR _____	133-1	133
1302- TRACK SUPPORT ROLLERS AND BRACKETS _____	134-1	

TABLE OF CONTENTS

	ILLUS PAGE	FIG
TRACK CARRIER ROLLER (USE WITH SERIAL RANGE 77V5006 THRU 77V9190) _____	134-1	134
TRACK CARRIER ROLLER (USE WITH SERIAL RANGE 77V9191 THRU 77V9475) _____	135-1	135
CARRIER ROLLER (USE WITH SERIAL RANGE 77V5006 THRU 77V6053) _____	136-1	136
TRACK CARRIER ROLLER (USE WITH SERIAL RANGE 77V5006 THRU 77V60053) _____	137-1	137
TRACK CARRIER ROLLER (USE WITH SERIAL RANGE 77V6054 THRU 77V9475) _____	138-1	138
TRACK ROLLER GUARD _____	139-1	139
RECOIL MECHANISM GUARD _____	140-1	140
1303- TRACK IDLER AND BRACKETS _____	141-1	
FRONT IDLER (EXTERNAL VIEW) _____	141-1	141
TRACK IDLER (INTERNAL VIEW) _____	142-1	141
1304- TRACK DRIVE SPROCKETS _____	143-1	
HUB AND SPROCKET SEGMENTS _____	143-1	143
1305- TRACK ASSEMBLY _____	144-1	
TRACK (SEALED AND LUBRICATED) _____	144-1	144
TRACK (SEALED AND NONLUBRICATED) _____	145-1	145
GROUP 14 STEERING		
1403- STEERING BRAKES _____	146-1	
STEERING BRAKE LINKAGE (TOP VIEW) _____	146-1	146
STEERING BRAKE LINKAGE (SIDE VIEW) _____	147-1	147
BRAKE BAND AND LINING _____	148-1	148
STEERING CLUTCH _____	149-1	149
STEERING CLUTCH CONTROL LINKAGE (TOP VIEW) _____	150-1	150
STEERING CLUTCH CONTROL LINKAGE (SIDE VIEW) _____	151-1	151
STEERING BRAKE HYDRAULIC MECHANISM _____	152-1	152
1411- HOSES, LINES, FITTINGS _____	153-1	
STEERING BRAKE HYDRAULIC MECHANISM LINES AND FITTINGS _____	153-1	153
1414- STEERING SYSTEM VALVES _____	154-1	
STEERING CLUTCH CONTROL VALVE _____	154-1	154
GROUP 15 FRAME, TOWING ATTACHMENTS, DRAWSARS, AND ARTICULATION SYSTEMS		
1501- FRAME ASSEMBLY _____	155-1	
FRAME AND CASE _____	155-1	155
FRAME AND CASE ATTACHING HARDWARE _____	156-1	156
1503- PINTLES AND TOWING ATTACHMENTS _____	157-1	
FRONT PULL HOOK AND DRAWBAR _____	157-1	157
SWINGING DRAWBAR _____	158-1	158
GROUP 18 BODY, CAB HOOD AND HULL		
1801- BODY, CAB HOOD AND HULL ASSEMBLIES _____	159-1	
BRUSH GUARD _____	159-1	159
HEAVY DUTY CRANKCASE GUARD _____	160	160
CRANKCASE GUARD _____	161-1	161
ROLLOVER PROTECTION STRUCTURE _____	162-1	162
PROTECTIVE SCREEN _____	163-1	163
ROLLOVER PROTECTION STRUCTURE MOUNTING _____	164-1	164
ROLLOVER PROTECTION STRUCTURE MOUNTING (FOR USE WITH SERIAL RANGE 77V7830) _____	165-1	165
HOOD AND DASH _____	166-1	166
HOOD AND DASH (FOR USE WITH SERIAL RANGE THRU 77V5953) _____	167-1	167
1802- FENDERS, RUNNING BOARDS WITH MOUNTING AND ATTACHING PARTS, OUTRIGGERS, WINDSHIELD, GLASS, ETC. _____	168-1	
RIGHT HAND FENDER _____	168-1	168
LEFT HAND FENDER _____	169-1	169

TABLE OF CONTENTS

	ILLUS PAGE	FIG
1804- FLOORS, SUBFLOORS, AND RELATED COMPONENTS _____	170-1	
FLOOR PLATE _____	170-1	
1806- UPHOLSTERY SEATS AND CARPETS _____	171-1	
ADJUSTABLE SEAT _____	171-1	171
SEAT BASE _____	172-1	172
1808- STOWAGE RACKS, BOXES, STRAPS, CARRYING CASE, CABLE REELS, HOSE REELS, ETC. _____	173-1	
TOOL BOX _____	173-1	173
GROUP 20 HOIST, WINCH, CAPSTAN, WINDLASS, POWER CONTROL UNIT AND POWER TAKEOFF		
2001- HOIST, CAPSTAN, WINDLASS, CRANE OR WINCH ASSEMBLY _____	174-1	
WINCH CARRIER ASSEMBLY _____	174-1	174
WINCH DRUM AND RELATED PARTS _____	175-1	175
WINCH HUB AND SHAFT _____	176-1	176
WINCH DRIVE SHAFT _____	177-1	177
WINCH CASE ASSEMBLY (SIDE VIEW) _____	178-1	178
WINCH CASE ASSEMBLY (TOP VIEW) _____	179-1	179
WINCH CABLE GUIDE _____	180-1	180
WINCH CABLE GUIDE TUBE ASSEMBLIES _____	181-1	181
WINCH COUPLING DISK AND RELATED PARTS (FOR USE WITH WINCH SERIAL RANGE 33U196 AND UP AND 34U1 AND UP) _____	182-1	182
WINCH COVER (FOR USE WITH WINCH SERIAL RANGE 33U1 AND UP AND 34U1 AND UP) _____	183-1	183
SHEAVE CABLE AND HITCH _____	184-1	184
WINCH SCREEN AND OIL FILTER _____	185-1	185
WINCH FILTER AND RELATED PARTS _____	186-1	186
WINCH PUMP _____	187-1	187
WINCH CONTROLS (FRONT VIEW) _____	188-1	188
WINCH CONTROLS (SIDE VIEW) _____	189-1	189
2004- POWER TAKE -OFF ASSEMBLY _____	190-1	
POWER TAKE -OFF _____	190-1	190
POWER TAKE -OFF DRIVE _____	191-1	191
2006- BULLDOZER TRIPOD, MAIN FRAME, JACK AND MOUNTING _____	192-1	
WINCH VALVE _____	192-1	191
WINCH SELECTOR VALVE _____	193-1	193
WINCH PRESSURE CONTROL VALVE _____	194-1	194
WINCH PRESSURE CONTROL VALVE (USE WITH WINCH SERIAL RANGE 33U290 AND 34U194 AND UP) _____	195-1	195
WINCH FAIRLEADS (USE WITH LOW SPEED AND STANDARD WINCH) _____	196-1	196
WINCH PUMP LINES _____	197-1	197
2007- CHAIN HOIST ASSEMBLY _____	198-1	
WINCH MOUNTING _____	198-1	198
GROUP 22 ACCESSORY ITEMS		
2210- DATA PLATES _____	199-1	
DATA PLATES _____	199-1	199
GROUP 24 HYDRAULIC AND FLUID SYSTEMS		
2401- PUMP AND MOTOR _____	200-1	
HYDRAULIC PUMP _____	200-1	200
2402- MANIFOLD AND CONTROL VALVE _____	201-1	
RIPPER SELECTOR VALVE _____	201-1	201
RIPPER SELECTOR VALVE LEVER HOUSING _____	202-1	202
PIN PULLER CONTROL VALVE _____	203-1	203
DUAL VALVE FOR RIPPER _____	204-1	204

TABLE OF CONTENTS

	ILLUS PAGE	FIG
PILOT VALVE FOR RIPPER _____	205-1	205
SELECTOR VALVE (TYPE 1 AND 2) _____	206-1	206
RIPPER AND TILT CYLINDER VALVE _____	207-1	207
ADJUSTABLE RIPPER AND TILT BLADE CYLINDER VALVE _____	208-1	208
RIPPER VALVE _____	209-1	209
ADJUSTABLE RIPPER VALVE _____	210-1	210
RIPPER CONTROL VALVE _____	211-1	211
ADJUSTABLE RIPPER CONTROL VALVE _____	212-1	212
HYDRAULIC CONTROL VALVE HARDWARE _____	213-1	213
HYDRAULIC CONTROL VALVE SPRINGS, SEALS AND PLUGS _____	214-1	214
HYDRAULIC CONTROL VALVE SUBORDINATE VALVES _____	215-1	215
BLADE TILT CYLINDER VALVE _____	216-1	216
BLADE TILT CYLINDER PILOT VALVE _____	217-1	217
PRESSURE CONTROL VALVE _____	218-1	218
HYDRAULIC TANK ATTACHING PARTS _____	219-1	219
2403- HYDRAULIC CONTROLS AND MANUAL CONTROLS _____	220-1	
IMPLEMENT LINKAGE USE (USE ON 8A BULLDOZERS) _____	220-1	220
IMPLEMENT LINKAGE USE (USE ON 8S BULLDOZERS) _____	221-1	221
IMPLEMENT LINKAGE USE (USE WITH RIPPER) _____	222-1	222
LEVER HOUSING _____	223-1	223
2404- TILT CYLINDERS AND TILT CRANK _____	224-1	
TILT CYLINDERS AND TILT CRANK _____	224-1	224
2406- STRAINERS, FILTERS, LINES AND FITTINGS ETC _____	225-1	
PUMP LINES, TYPE 2 (USE ON 8A BULLDOZER WITH SINGLE VALVE) _____	225-1	225
PUMP LINES, TYPE 3 (USE ON 8A BULLDOZER WITH SINGLE VALVE) _____	226-1	226
PUMP HOSES, TYPE 1, 2 AND 3 (USE WITH DOUBLE VALVE) _____	227-1	227
PUMP LINES, TYPE 1 AND 3 2 (USE WITH DOUBLE VALVE) _____	228-1	228
PUMP LINES, TYPE 2 (USE WITH DOUBLE VALVE) _____	229-1	229
RIPPER PIN PULLER LINES, TYPE 1, 2 AND 3 _____	230-1	230
PIN PULLER LINES _____	231-1	231
RIPPER LINES, LEFT AND RIGHT _____	232-1	232
BULLDOZER LINES _____	233-1	233
BULLDOZER LINES AND FITTINGS _____	234-1	234
TILT CYLINDER HYDRAULIC LINES _____	235-1	235
TILT CYLINDER LINES _____	236-1	236
HYDRAULIC FILTER _____	237-1	237
2407- HYDRAULIC CYLINDERS _____	238-1	
LIFT CYLINDERS MOUNTING HARDWARE, LEFT HAND _____	238-1	238
LIFT CYLINDERS MOUNTING HARDWARE, RIGHT HAND _____	239-1	239
RIPPER CYLINDER, LEFT AND RIGHT _____	240-1	240
RIPPER CYLINDER, CENTER _____	241-1	241
HYDRAULIC RIPPER CYLINDER _____	242-1	242
2408- LIQUID TANKS OR RESERVOIRS _____	243-1	
HYDRAULIC TANK ASSEMBLY _____	243-1	243
HYDRAULIC TANK COVER AND PLATES _____	244-1	244
HYDRAULIC TANK CAP PROTECTION COVER _____	245-1	245
GROUP 47 GAGES, WEIGHING AND MEASURING DEVICES		
4702-GAGES, MOUNTINGS, LINES AND FITTINGS _____	246-1	
PRESSURE GAGES _____	246-1	246
SERVICE METER, 4N4445 ENGINE _____	247-1	247
PRESSURE GAGES LINES AND FITTINGS _____	248-1	248
GROUP 60 STEAM BOILERS, WATER HEATERS, HEATING UNITS BURNERS		
6015- WATER HEATER ASSEMBLY _____	249-1	
WATER HEATER JACKET _____	249-1	249
PILOT VALVE FOR RIPPER _____	205-1	205
SELECTOR VALVE (TYPE 1 AND 2) _____	206-1	206

TABLE OF CONTENTS

	ILLUS PAGE	FIG
PILOT VALVE FOR RIPPER _____	205-1	205
SELECTOR VALVE (TYPE 1 AND 2) _____	206-1	206
7435- MOLDBOARD ASSEMBLY _____	251-1	
STRAIGHT BULLDOZER BLADE _____	251-1	251
7436- LIFT ARMS AND PIVOT ASSEMBLIES _____	253-1	
BULLDOZER PUSH ARM _____	253-1	253
ARM AND BRACE _____	254-1	254
BLADE CYLINDER MOUNTING _____	255-1	255
TRUNNION _____	256-1	256
7443- MAIN FRAME ASSEMBLY _____	257-1	
BULLDOZER C-FRAME _____	257-1	257
7465- ROOTERS, RIPPERS, PLOWS AND HARROWS _____	258-1	
RIPPER TOOTH _____	258-1	258
RIPPER LINK _____	259-1	259
RIPPER FRAME _____	260-1	260
RIPPER LINES _____	261-1	261
PIN PULLER _____	262-1	262
RIPPER CYLINDER LINES _____	263-1	263
ADJUSTABLE RIPPER LINES (TYPE 1) _____	264-1	264
ADJUSTABLE RIPPER LINES (TYPE 2) _____	265-1	265
GROUP 94 REPAIR KITS		
9401- KITS _____	KIT-1	
KITS _____	KIT-1	KIT
GROUP 95 GENERAL USE STANDARDIZED PARTS		
9501- BULK MATERIAL _____	BULK-1	
BULK MATERIAL _____	BULK-1	BULK
SECTION III. SPECIAL TOOLS LIST (NOT APPLICABLE)		
SECTION IV. CROSS REFERENCE INDEX _____ I-1		
NATIONAL STOCK NUMBER TO FIGURE AND ITEM NUMBER INDEX _____ I-1		
PART NUMBER TO ITEM NUMBER INDEX _____ I-53		

**DIRECT SUPPORT
AND
GENERAL SUPPORT
MAINTENANCE REPAIR PARTS AND SPECIAL
TOOLS LISTS (INCLUDING DEPOT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST)**

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts, special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Direct Support and General Support Maintenance of the Tractor. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).


b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as Indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. Cross-reference Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration, figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE and part numbers.

3. Explanation of Columns (Sections II and III).

a. *ITEM NO.* (Column (1)). Indicates the number used to identify items called out in the illustration.

b. *SMR CODE* (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria and disposition instructions, as shown in the following breakout:

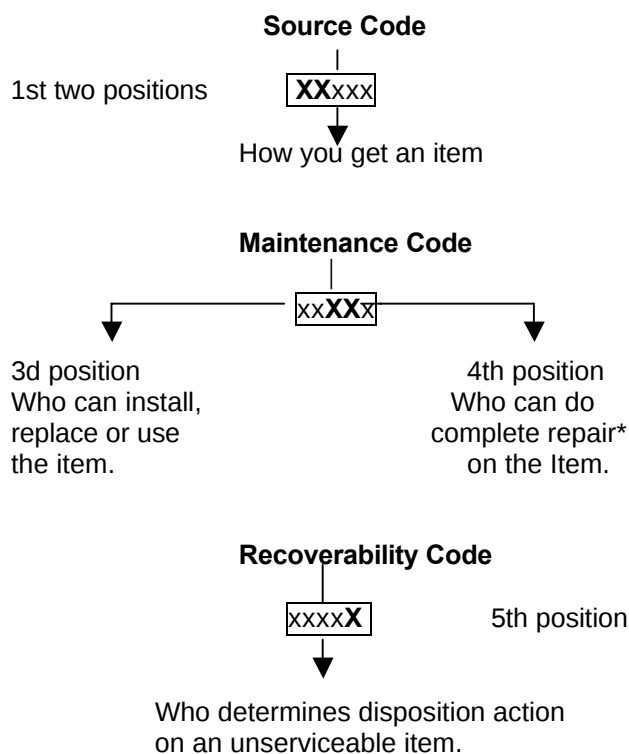

*Complete Repair. Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.