

TECHNICAL MANUAL

**UNIT, DIRECT SUPPORT; AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING
DEPOT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LISTS)**

**TRACTOR, CRAWLER: DIESEL ENGINE DRIVEN,
FULL-TRACKED, LOW SPEED,
AIR-TRANSPORTABLE
JOHN DEERE MODEL 550C
(NSN 2410-01-139-9859)**

Approved for public release; distribution is unlimited.

**HEADQUARTERS, DEPARTMENT OF THE ARMY
NOVEMBER 1993**

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING
DEPOT MAINTENANCE REPAIR PARTS
AND SPECIAL TOOLS LISTS)**

**TRACTOR, CRAWLER: DIESEL ENGINE DRIVEN,
FULL-TRACKED, LOW SPEED,
AIR-TRANSPORTABLE**

JOHN DEERE MODEL 550C

(NSN 2410-01-139-9859)

Current as of 14 May 1993

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of away to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 20282, located in the back of this manual, direct to: Commander, U.S. Army Tank Automotive Command, ATTN: AMSTAMB, Warren, MI 483975000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

	Page	Illus Fig
SECTION I INTRODUCTION.....	1	
SECTION II REPAIR PARTS LIST	1-1	
GROUP 01 ENGINE		
0100 - ENGINE ASSEMBLY	1-1	
ENGINE ASSEMBLY	1-1	1
0101 - CRANKCASE, BLOCK, CYLINDER HEAD	2-1	
CYLINDER BLOCK ASSEMBLY	2-1	2
CYLINDER HEAD ASSEMBLY.....	3-1	3
0102 - CRANKSHAFT	4-1	
CRANKSHAFT	4-1	4
ENGINE BALANCER SHAFT	5-1	5
0103 - FLYWHEEL ASSEMBLY	6-1	
FLYWHEEL, HOUSING, AND FASTENERS	6-1	6
0104 - PISTONS AND CONNECTING RODS	7-1	
PISTON AND CONNECTING ROD ASSEMBLY	7-1	7

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
0105 - VALVES, CAMSHAFTS AND TIMING SYSTEM.....	8-1	
CAMSHAFT ASSEMBLY	8-1	8
ROCKER ARMS SHAFT, AND PUSHRODS	9-1	9
ROCKER ARM COVER.....	10-1	10
TIMING GEAR COVER	11-1	11
0106 - ENGINE LUBRICATION SYSTEM	12-1	
ENGINE OIL PAN AND DIPSTICK.....	12-1	12
ENGINE OIL PUMP	13-1	13
ENGINE OIL FILTER.....	14-1	14
TURBOCHARGER OIL LINES	15-1	15
ENGINE VENTILATOR TUBE.....	16-1	16
ENGINE OIL COOLER AND LINES	17-1	17
0108 - MANIFOLDS	18-1	
EXHAUST MANIFOLD AND ELBOW	18-1	18
GROUP 03 FUEL SYSTEM		
0301 - CARBURETOR, FUEL INJECTOR.....	19-1	
FUEL INJECTION NOZZLE	19-1	19
0302 - FUEL PUMPS	20-1	
FUEL INJECTION SYSTEM.....	20-1	20
FUEL INJECTION PUMP HOUSING AND DRIVE.....	21-1	21
FUEL INJECTION PUMP TRANSFER GROUP	22-1	22
FUEL TRANSFER PUMP ASSEMBLY.....	23-1	23
FUEL INJECTION PUMP ELECTRIC SHUTOFF	24-1	24
FUEL INJECTION PUMP HYDRAULIC HEAD AND ROTOR.....	25-1	25
FUEL INJECTION PUMP ADVANCE.....	26-1	26
FUEL INJECTION PUMP GOVERNOR	27-1	27
FUEL INJECTION LINKAGE	28-1	28
FRONT FUEL LINES	29-1	29
0304 - AIR CLEANER	30-1	
AIR CLEANER WITH PRECLEANER AND PIPING	30-1	30
AIR CLEANER RESTRICTION INDICATOR.....	31-1	31
0305 - SUPERCHARGER, BLOWER, TURBOCHARGER, OR ALTITUDE COMPENSATOR	32-1	
TURBOCHARGER	32-1	32
AIR INTAKE SYSTEM	33-1	33
0306 - TANKS, LINES, FITTINGS, HEADERS.....	34-1	
FUEL TANK AND SUPPORT	34-1	34
FUEL LINES	35-1	35
0308 - ENGINE SPEED GOVERNOR AND CONTROLS	36-1	
ENGINE SPEED CONTROL CABLE AND MOUNTING	36-1	36
DECELERATOR PEDAL AND LINKAGE.....	37-1	37
0309 - FUEL FILTERS	38-1	
FUEL FILTER	38-1	38
0311 - ENGINE STARTING AIDS.....	39-1	
ENGINE COOLANT HEATER	39-1	39
FLUID STARTING AID AND SWITCH	40-1	40
GROUP 04 EXHAUST SYSTEM		
0401 - MUFFLER AND PIPES.....	41-1	
EXHAUST EXTENSION, MUFFLER, AND COVER.....	41-1	41

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
GROUP 05	COOLING SYSTEM		
	0501 - RADIATOR, EVAPORATIVE COOLER, OR HEAT EXCHANGER	42-1	
	RADIATOR AND SUPPORTS	42-1	42
	RADIATOR SUPPORTS.....	43-1	43
	RADIATOR CAP HOSES, AND BAFFLES.....	44-1	44
	0502 - COWLING, DEFLECTORS, AIR DUCTS, SHROUDS, E T C.....	45-1	
	RADIATOR FAN SHROUD.....	45-1	45
	0503 - WATER MANIFOLD, HEADERS, THERMOSTATS, AND HOUSING GASKET	46-1	
	ENGINE THERMOSTAT AND THERMOSTAT HOUSING	46-1	46
	0504 - WATER PUMP.....	47-1	
	WATER PUMP ASSEMBLY	47-1	47
	0505 - FAN ASSEMBLY.....	48-1	
	FAN BLADE, FAN BELT, AND CRANKSHAFT PULLEY	48-1	48
GROUP 06	ELECTRICAL SYSTEM		
	0601 - GENERATOR, ALTERNATOR.....	49-1	
	ALTERNATOR SUPPORTING PARTS	49-1	49
	ALTERNATOR	50-1	50
	0603 - STARTING MOTOR	51-1	
	STARTING MOTOR AND SOLENOID	51-1	51
	STARTING MOTOR ASSEMBLY	52-1	52
	0606 - ENGINE SAFETY CONTROLS	53-1	
	ENGINE WIRING HARNESS	53-1	53
	0607 - INSTRUMENT OR ENGINE CONTROL PANEL.....	54-1	
	INSTRUMENT PANEL WIRING HARNESS.....	54-1	54
	INSTRUMENT PANEL LIGHT, STARTER, AND IGNITION SWITCHES	55-1	55
	PRESSURE, TEMPERATURE, AND VOLTMETER GAGES, ENGINE		
	HOURMETER, AND LIGHT HARNESS	56-1	56
	FILTER BYPASS LENS.....	57-1	57
	0608 - MISCELLANEOUS ITEMS.....	58-1	
	CIGAR LIGHTER ASSEMBLY.....	58-1	58
	0609 - L I G H T S	59-1	
	LIGHT ASSEMBLY	59-1	59
	CANOPY FRONT AND REAR LIGHT ASSEMBLIESAND WIRING HARNESS	60-1	60
	0610 - SENDING UNITS AND WARNING SWITCHES	61-1	
	ENGINE TEMPERATURE SENDING UNIT	61-1	61
	0611 - HORN, SIREN.....	62-1	
	GRILLE-MOUNTED HORN WIRING AND SWITCH	62-1	62
	GRILLE-MOUNTED WARNING HORN.....	63-1	63
	REVERSE WARNING ALARM	64-1	64
	0612 - BATTERIES, STORAGE	65-1	
	BATTERY TRAYS AND CLAMPS	65-1	65
	BATTERIES, CABLES, AND DISCONNECT SWITCH	66-1	66
	BATTERY BOX.....	67-1	67
GROUP 07	TRANSMISSION		
	0705 - TRANSMISSION SHIFTING COMPONENTS.....	68-1	
	SPEED CONTROL AND NEUTRAL LOCK	68-1	68
	TRANSMISSION SHIFTING LEVER AND LINKAGE.....	69-1	69
	TRANSMISSION SELECTOR VALVE.....	70-1	70
	TRANSMISSION SELECTOR VALVE, HOUSING SPOOLS, AND TOP COVER	71-1	71
	TRANSMISSION CONTROL VALVE.....	72-1	72

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
0708 - TORQUE CONVERTER OR FLUID COUPLING	73-1	
CONVERTER HOUSINGS AND COVERS.....	73-1	73
CONVERTER DRIVE SPIDER GEAR.....	74-1	74
CONVERTER, IMPELLER WHEEL, AND HOUSING	75-1	75
CONVERTER OUTPUT SHAFT	76-1	76
CONVERTER GEARS AND SHAFTS	77-1	77
CONVERTER HYDRAULICS	78-1	78
0710 - TRANSMISSION ASSEMBLY AND ASSOCIATED PARTS.....	79-1	
POWER SHIFT HOUSING AND COVER	79-1	79
TRANSMISSION CASE AND COVERS	80-1	80
COUNTERSHAFT WITH GEARS	81-1	81
0713 - INTERMEDIATE CLUTCH.....	82-1	
FIRST RANGE CLUTCH	82-1	82
SECOND RANGE CLUTCH	83-1	83
THIRD RANGE CLUTCH.....	84-1	84
DIRECTIONAL CLUTCH ASSEMBLY	85-1	85
FORWARD DIRECTIONAL CLUTCH	86-1	86
REVERSE DIRECTIONAL CLUTCH, DRUM, AND SHAFT	87-1	87
0721 - COOLERS, PUMPS, MOTORS.....	88-1	
TRANSMISSION COLLECTOR OIL LINES	88-1	88
FORWARD AND REVERSE CLUTCH COLLECTOR	89-1	89
TRANSMISSION CASE LUBRICATING OIL LINES.....	90-1	90
TRANSMISSION COOLER PUMPS.....	91-1	91
TRANSMISSION OIL FILTER ASSEMBLY	92-1	92
TRANSMISSION OIL FILTER HYDRAULICS	93-1	93
TRANSMISSION CONTROL VALVE LINES TO OIL COOLER.....	94-1	94
TRANSMISSION OIL PUMP.....	95-1	95
TRANSMISSION OIL FILTER SUPPORTS AND OIL FILLER GAGE.....	96-1	96
0725 - IDLER GEARS.....	97-1	
IDLER GEARS AND SHAFTS	97-1	97
GROUP 08 TRANSFER, FINAL DRIVE, PLANETARY, AND DROP GEARBOX ASSEMBLIES		
0801 - POWER TRANSFER, FINAL DRIVE, PLANETARY, OR DROP		
GEARBOX ASSEMBLIES.....	98-1	
FINAL DRIVE PINION SHAFT.....	98-1	98
FINAL DRIVE AXLE SHAFT	99-1	99
FIRST AND SECOND DRIVE SHAFT WITH IDLER	100-1	100
THIRD DRIVE GEAR AND PINION SHAFT	101-1	101
RING GEAR AND QUILLS.....	102-1	102
FINAL DRIVE HOUSING	103-1	103
GROUP 12 BRAKES		
1201 - HANDBRAKES	104-1	
HANDBRAKE LOCK	104-1	104
GROUP 13 WHEELS AND TRACKS		
1301 - SUSPENSION ASSEMBLY	105-1	
TRACKS, FRAMES, ROCK GUARDS, AND SPROCKET SHIELDS.....	105-1	105
FRONT AND REAR CROSSBAR	106-1	106
1302 - TRACK SUPPORT ROLLERS AND BRACKETS.....	107-1	
TRACK ROLLER AND SPROCKET	107-1	107
UPPER TRACK CARRIER ROLLER.....	108-1	108

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
1303 - TRACK IDLERS AND BRACKETS	109-1	
FRONT TRACK IDLER	109-1	109
TRACK IDLER SPRING AND COVER	110-1	110
1304 - TRACK DRIVE SPROCKETS	111-1	
HYDRAULIC TRACK TENSION ADJUSTER	111-1	111
1305 - TRACK ASSEMBLY	112-1	
TRACK CHAIN	112-1	112
MASTER PIN ASSEMBLY	113-1	113
TRACK SHOES	114-1	114
GROUP 14 STEERING		
1401 - MECHANICAL STEERING GEAR ASSEMBLY	115-1	
LEVER STEERING LINKAGE	115-1	115
1403 - STEERING BRAKES	116-1	
BRAKE LINKAGE	116-1	116
STEERING CLUTCH HOUSING	117-1	117
BRAKE ANCHOR AND BAND	118-1	118
STEERING CLUTCH	119-1	119
1411 - HOSES, LINES, FITTINGS	120-1	
STEERING CLUTCH PRESSURE OIL LINE	120-1	120
1414 - STEERING SYSTEM VALVES	121-1	
STEERING VALVE HYDRAULICS	121-1	121
GROUP 15 FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEMS		
1501 - FRAME ASSEMBLY	122-1	
MAIN FRAME	122-1	122
FRONT AND REAR BOTTOM GUARDS	123-1	123
1503 - PINTLES AND TOWING ATTACHMENTS	124-1	
DRAWBAR	124-1	124
WINCH DRAWBAR	125-1	125
GROUP 18 BODY, CAB, HOOD, AND HULL		
1801 - BODY, CAB, HOOD, AND HULL ASSEMBLIES	126-1	
FRONT HITCH	126-1	126
ROLL-OVER PROTECTIVE STRUCTURE (ROPS)	127-1	127
PROTECTIVE BAR	128-1	128
GRILLE AND GRILLE HOUSING	129-1	129
ENGINE SIDESHIELDS AND SUPPORTS	130-1	130
HOOD, COWL, AND SUPPORT	131-1	131
VANDAL PROTECTION COVER	132-1	132
BOTTOM GUARD BRUSH AND TRASH SHIELDS	133-1	133
1802 - FENDERS, RUNNING BOARDS WITH MOUNTING AND ATTACHING PARTS, OUTRIGGERS, WINDSHIELD, GLASS, ETC	134-1	
FENDER SHIELD, REAR COVER, AND EXTENSION	134-1	134
FENDERS AND GUARDS	135-1	135
1805 - FLOORS, SUBFLOORS, AND RELATED COMPONENTS	136-1	
PLATFORMS	136-1	136
1806 - UPHOLSTERY, SEATS, AND CARPETS	137-1	
SEAT	137-1	137

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
GROUP 20	HOIST, WINCH, CAPSTAN, WINDLASS, POWER CONTROL UNIT, AND POWER TAKE-OFF		
	2001 - HOIST, CAPSTAN, WINDLASS, CRANE, OR WINCH ASSEMBLY	138-1	
	POWER WINCH CONTROL LEVER AND VALVE	138-1	138
	POWER WINCH HOUSING AND ADAPTER.....	139-1	139
	POWER WINCH RIGHT-HAND QUILL	140-1	140
	POWER WINCH GEAR COVER	141-1	141
	POWER WINCH DRUM	142-1	142
	POWER WINCH LEFT-HAND QUILL	143-1	143
	POWER WINCH GEARS AND SHAFTS.....	144-1	144
	POWER WINCH BRAKE AND CLUTCH DISKS	145-1	145
	POWER WINCH BRAKE	146-1	146
	POWER WINCH PUMP AND OIL LINES	147-1	147
	POWER WINCH HYDRAULIC PUMP	148-1	148
	POWER WINCH OIL FILTER	149-1	149
	POWER WINCH CONTROL VALVE	150-1	150
	WINCH DRIVE SHAFT	151-1	151
	TOOL TRAY AND PLATE.....	152-1	152
GROUP 22	BODY, CHASSIS, AND HULL ACCESSORY ITEMS		
	2210 - DATA PLATES AND INSTRUCTION HOLDERS	153-1	
	DECALS AND LABELS.....	153-1	153
GROUP 24	HYDRAULIC AND FLUID SYSTEMS		
	2401 - PUMP AND MOTOR.....	154-1	
	HYDRAULIC PUMP, 15 GPM.....	154-1	154
	2402 - MANIFOLD AND/OR CONTROL VALVES.....	155-1	
	CONTROL VALVE	155-1	155
	2403 - HYDRAULIC CONTROLS AND/OR MANUAL CONTROLS	156-1	
	CONTROL VALVE HANDLE ASSEMBLY	156-1	156
	CONTROL VALVE LINKAGE ASSEMBLY	157-1	157
	2404 - TILT CYLINDERS AND TILT CRANK	158-1	
	TILT CYLINDER.....	158-1	158
	2406 - STRAINERS, FILTERS, LINES, AND FITTINGS, ETC	159-1	
	DOZER CONTROL VALVE HYDRAULICS	159-1	159
	HYDRAULIC PUMP RETURN CIRCUIT	160-1	160
	OIL LINES AND FITTINGS, TILT CIRCUIT	161-1	161
	OIL LINES AND FITTINGS, LEFT CIRCUIT	162-1	162
	ANGLING CYLINDER HYDRAULICS.....	163-1	163
	2407 - HYDRAULIC CYLINDERS.....	164-1	
	HYDRAULIC CYLINDER PIVOT PINS	164-1	164
	LIFT CYLINDER.....	165-1	165
	ANGLING CYLINDER	166-1	166
	2408 - LIQUID TANKS OR RESERVOIRS	167-1	
	RESERVOIR	167-1	167
	RESERVOIR COVER AND DOOR.....	168-1	168
	HYDRAULIC RETURN FILTER LINES.....	169-1	169

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
GROUP 33	SPECIAL PURPOSE KITS		
	3307 - SPECIAL PURPOSE KITS	170-1	
	SWINGFIRE HEATER ASSEMBLY	170-1	170
	HEATER HOUSING AND VIBRATOR	171-1	171
	AIR PUMP DIAPHRAGM ASSEMBLY	172-1	172
	COVER AND PUMP HANDLE ASSEMBLIES	173-1	173
	CARBURETOR VALVE AND MIXING CHAMBER	174-1	174
	MIXING CHAMBERS	175-1	175
	REGULATOR VALVE AND CARBURETOR	176-1	176
	PULSATING PIPE AND QUICK COUPLING	177-1	177
	FUEL TANK ASSEMBLY	178-1	178
GROUP 74	CRANES, SHOVELS, AND EARTHMOVING EQUIPMENT COMPONENTS		
	7435 - MOLDBOARD ASSEMBLY	179-1	
	BLADE	179-1	179
	7436 - LIFT ARMS AND PIVOT ASSEMBLIES	180-1	
	MOUNTING FRAMES AND PIVOT ASSEMBLIES	180-1	180
	C-FRAME	181-1	181
	GUIDE BLOCK	182-1	182
	ANGLING FRAME	183-1	183
GROUP 94	REPAIR KITS		
	9401 - REPAIR KITS	KIT-1	
	REPAIR KITS	KIT-1	KIT
GROUP 95	GENERAL USE STANDARDIZED PARTS		
	9501 - BULK MATERIEL	BULK-1	
	BULK MATERIEL	BULK-1	BULK
SECTION III	SPECIAL TOOLS (NOT APPLICABLE)		
SECTION IV	CROSS-REFERENCE INDEXES		
	NATIONAL STOCK NUMBER INDEX	I-1	
	PART NUMBER INDEX	I-27	
	FIGURE AND ITEM NUMBER INDEX	I-88	

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS)

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support, and General Support Maintenance of the Crawler Tractor. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).

b. *Section III. Special Tools List.* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.


c. *Section IV. Cross-reference Indexes.* A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item number appearance. The

figure and Item number Index lists figure and Item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. Explanation of Columns (Sections II and III).

a. *ITEM NO. (Column (1)).* Indicates the number used to identify items called out in the illustration.

b. *SMR CODE (Column (2)).* The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

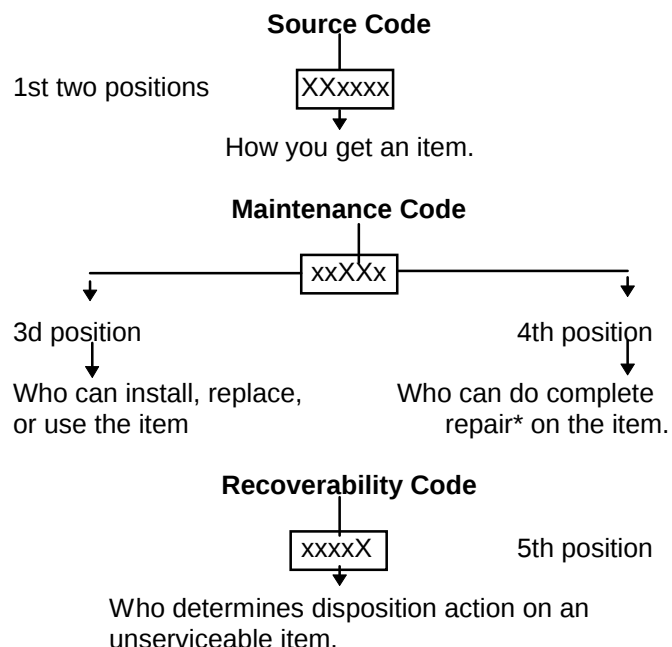

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) *Source Code.* The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: