

TECHNICAL MANUAL
UNIT MAINTENANCE,
DIRECT SUPPORT
AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS

TRACTOR, FULL TRACKED, LOW SPEED
DIESEL-ENGINE DRIVEN, SECTIONALIZED
AND
NONSECTIONALIZED W/ANGLE DOZER,
WINCH
AND ROPS

MODEL D5BNS
NSN 2410-01-126-7902

MODEL D5BS
NSN 2410-01-127-6512

MODEL D5BS1
NSN 2410-01-270-1192

MODEL D5BNS1
NSN 2410-01-296-8479

This manual supersedes TM 5-241 0-236-24P, 15 November 1989

Approved for Public Release; Distribution is Unlimited

HEADQUARTERS, DEPARTMENT OF THE ARMY

15 SEPTEMBER 1992

**UNIT MAINTENANCE,
DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LIST
FOR**

**TRACTOR, FULL TRACKED, LOW SPEED
DIESEL-ENGINE DRIVEN, SECTIONALIZED AND
NONSECTIONALIZED W/ANGLE DOZER, WINCH
AND ROPS**

MODEL D5BNS
NSN 2410-01-126-7902

MODEL D5BS
NSN 2410-01-127-6512

MODEL D5BS1
NSN 2410-01-270-1192

MODEL D5BNS1
NSN 2410-01-296-8479

CURRENT AS OF

REPORTING OF ERRORS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter DA Form 2028 (Recommended Changes to Publications and Blank Forms) or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, Mi 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

	PAGE	ILLUS FIG
SECTION I. INTRODUCTION	1	
SECTION II. REPAIR PARTS LIST	1-1	

***This publication supersedes TM 5-2410-236-24P, dated 15 November 1989.**

TABLE OF CONTENTS

	PAGE	ILLUS FIG
GROUP 01 ENGINE		
0100-ENGINEASSEMBLY	1-1	
ENGINE ASSEMBLY	1-1	1
ENGINE LIFTING EYES AND MOUNTS	2-1	2
0101-CRANKCASE, BLOCK, CYLINDER HEAD	3-1	
CYLINDER HEAD AND FASTENERS	3-1	3
ENGINE BLOCK	4-1	4
0102-CRANKSHAFT	5-1	
CRANKSHAFTASSEMBLY	5-1	5
0103-FLYWHEEL ASSEMBLY	6-1	
FLYWHEEL AND FLYWHEEL HOUSING	6-1	6
0104-PISTONS, CONNECTING RODS	7-1	
PISTON AND CONNECTING RODS	7-1	7
0105-VALVES, CAMSHAFTS, AND TIMING SYSTEM	8-1	
CAMSHAFT ASSEMBLY	8-1	8
VALVE COVER AND VALVE MECHANISM.....	9-1	9
FRONT HOUSING, COVER AND FASTENER GROUP	10-1	10
TIMING GEARS	11-1	11
0106-ENGINE LUBRICATION SYSTEM	12-1	
ENGINE OIL COOLER (D5BS1)	12-1	12
ENGINE OIL FILTER (D5BNS AND D5BS)	13-1	13
ENGINE OIL COOLER ASSEMBLY (D5BNS AND D5BS)	14-1	14
ENGINE OIL LINES	15-1	15
FUMES DISPOSAL AND BREATHER	16-1	16
OIL FILLER AND DIPSTICK	17-1	17
OIL PAN ASSEMBLY	18-1	18
OIL PUMP MOUNTING AND ASSEMBLY	19-1	19
ENGINE OIL SAMPLING VALVE	20-1	20
0108-MANIFOLDS	21-1	
EXHAUSTMANIFOLD.....	21-1	21
GROUP 03 FUEL SYSTEM		
0301-CARBURETOR, FUEL INJECTOR	22-1	
FUEL INJECTION LINES	22-1	22
0302-FUEL PUMPS	23-1	
GOVERNOR	23-1	23
FUEL INJECTION PUMP	24-1	24
FUEL PRIMING PUMP AND FILTER	25-1	25
FUEL DRAIN LINES	26-1	26
0304-AIR CLEANER	27-1	
AIR CLEANER	27-1	27
0306-TANKS, LINES, FITTINGS, HEADERS	28-1	
AIR LINES	28-1	28
FUEL LINES	29-1	29
FUELTANK	30-1	30

TABLE OF CONTENTS

	PAGE	ILLUS FIG
0308-ENGINE SPEED GOVERNOR AND CONTROLS	31-1	
GOVERNOR CONTROL	31-1	31
DECELERATOR CONTROL	32-1	32
0309-FUEL FILTERS	33-1	
WATER SEPARATOR	33-1	33
0311-ENGINE STARTING AIDS.....	34-1	
ETHER STARTING AID	34-1	34
GROUP 04 EXHAUST SYSTEM		
0401-MUFFLER AND PIPES	35-1	
MUFFLER	35-1	35
GROUP 05 COOLING SYSTEM		
0501-RADIATOR, EVAPORATIVE COOLER, OR HEAT EXCHANGER	36-1	
RADIATOR	36-1	36
0503-WATER MANIFOLD, HEADERS, THERMOSTATS AND HOUSING GASKETS	37-1	
WATER LINES (D5BNS AND D5BS)	37-1	37
THERMOSTAT HOUSING	38-1	38
0504-WATER PUMP	39-1	
WATER PUMP (D5BNS AND D5BS)	39-1	39
WATER PUMP (D5BS1 AND REPLACEMENT FOR MODELS D5BNS AND D5BS)	40-1	40
0505-FAN ASSEMBLY	41-1	
FAN AND GUARD	41-1	41
FAN DRIVE AND PULLEY	42-1	42
GROUP 06 ELECTRICAL SYSTEM		
0601-GENERATOR, ALTERNATOR	43-1	
ALTERNATOR MOUNTING	43-1	43
ALTERNATOR ASSEMBLY (D5BNS AND D5BS)	44-1	44
ALTERNATOR ASSEMBLY (D5BS1)	45-1	45
0603-STARTING MOTOR	46-1	
STARTING MOTOR AND MOUNTING	46-1	46
STARTING MOTOR ASSEMBLY (D5BNS AND D5BS)	47-1	47
STARTING MOTOR ASSEMBLY (D5BS1)	48-1	48
STARTER SOLENOID	49-1	49
STARTER SWITCH	50-1	50
0607-INSTRUMENT OR ENGINE CONTROL PANEL	51-1	
ENGINE CONTROL PANEL WIRING	51-1	51
STARTING RECEPTACLE (D5BS1 AND D5BNS1)	52-1	52
0609-LIGHTS	53-1	
LIGHTING GROUP	53-1	53
ROPS MOUNTED LIGHTS (D5BS1)	54-1	54
0611-HORN, SIREN	55-1	
ELECTRIC HORN	55-1	55

TABLE OF CONTENTS

	PAGE	ILLUS FIG
0612-BATTERIES, STORAGE	56-1	
BATTERIES AND HOLDDOWN	56-1	56
0613-HULL OR CHASSIS WIRING HARNESS	57-1	
CHASSIS WIRING	57-1	57
WIRING HARNESSES	58-1	58
0615-RADIO INTERFERENCE SUPPRESSION	59-1	
RADIO INTERFERENCE SUPPRESSION	59-1	59
 GROUP 07 TRANSMISSION		
0704-TRANSMISSION TOP COVER ASSEMBLY	60-1	
TRANSMISSION CONTROL LINKAGE	60-1	60
0708-TORQUE CONVERTER OR FLUID COUPLING	61-1	
TORQUE CONVERTER	61-1	61
FLEXIBLE COUPLING DRIVE	62-1	62
0710-TRANSMISSION ASSEMBLY	63-1	
TRANSMISSION ARRANGEMENT	63-1	63
TRANSMISSION AND SUPPORT	64-1	64
PLANETARY TRANSMISSION	65-1	65
0714-SERVO UNIT	66-1	
TRANSMISSION HYDRAULIC CONTROL	66-1	66
TRANSMISSION SELECTOR AND PRESSURE CONTROL VALVE	67-1	67
0719-REDUCTION OR TRANSFER GEARS, SHAFTS, AND BEARINGS	68-1	
TRANSFER GEAR	68-1	68
0721-COOLERS, PUMPS, MOTORS	69-1	
TRANSMISSION OIL SAMPLING VALVE	69-1	69
TRANSMISSION OIL FILTER	70-1	70
POWER TRAIN OIL LINES	71-1	71
BY-PASS VALVE	72-1	72
TRANSMISSION OIL COOLER (D5BNS AND D5BS)	73-1	73
TRANSMISSION OIL COOLER (D5BS1)	74-1	74
TRANSMISSION OIL PUMP	75-1	75
MAGNETIC SCREEN	76-1	76
 GROUP 08 TRANSFER AND FINAL DRIVE ASSEMBLIES		
0801-POWER TRANSFER AND FINAL DRIVE ASSEMBLIES	77-1	
FINAL DRIVE - UPPER HALF	77-1	77
FINAL DRIVE - LOWER HALF	78-1	78
 GROUP 12 BRAKES		
1204-HYDRAULIC BRAKE SYSTEM	79-1	
BRAKE CONTROL LINES	79-1	79
HYDRAULIC BRAKE MECHANISM	80-1	80

TABLE OF CONTENTS

	PAGE	ILLUS FIG
GROUP 13	WHEELS AND TRACKS	
1301-SUSPENSION ASSEMBLY	81-1	
LIFT AND TIEDOWN EYES	81-1	81
TRACK ROLLER FRAME (D5BNS AND D5BS)	82-1	82
1302-TRACK SUPPORT ROLLERS AND BRACKETS	83-1	
TRACK ROLLER FRAME (D5BS1 AND D5BNS1)	83-1	83
TRACK CARRIER ROLLER	84-1	84
TRACK ROLLER GROUP - SINGLE FLANGE	85-1	85
TRACK ROLLER GROUP - DOUBLE FLANGE	86-1	86
1303-TRACK IDLERS AND BRACKETS	87-1	
IDLER SPRING TENSION - FRONT	87-1	87
IDLER WHEEL - FRONT	88-1	88
1305-TRACK ASSEMBLY	89-1	
TRACK	89-1	89
1311-WHEEL ASSEMBLY	90-1	
NOSE WHEEL (D5BS AND D5BS1)	90-1	90
GROUP 14	STEERING	
1403-STEERING BRAKES	91-1	
STEERING CLUTCH	91-1	91
STEERING BRAKE FOOT PEDALS AND LINKAGE	92-1	92
STEERING BRAKE BAND, LINING AND RELATED PARTS	93-1	93
STEERING CLUTCH HAND CONTROL AND LINKAGE	94-1	94
STEERING CLUTCH CONTROL VALVE AND PIPING	95-1	95
1414-STEERING SYSTEM VALVES	96-1	
STEERING CLUTCH CONTROL VALVE ASSEMBLY	96-1	96
GROUP 15	FRAME, TOWING ATTACHMENTS, AND DRAWBARS	
1501-FRAME ASSEMBLY	97-1	
FRAME	97-1	97
CHASSIS AND POWER TRAIN SECTIONALIZING I		
GROUP (D5BS AND D5BS1)	98-1	98
DOZER SECTIONALIZING GROUP (D5BS AND D5BS1)	99-1	99
RECOIL MECHANISM GUARD	100-1	100
1503-PINTLES AND TOWING ATTACHMENTS	101-1	
FIXED DRAWBAR (D5BS AND D5BS1)	101-1	101
GROUP 16	SPRINGS AND SHOCK ABSORBERS	
1601-SPRINGS	102-1	
EQUALIZER SPRINGS	102-1	102
GROUP 18	BODY, CAB, HOOD AND HULL	
1801-BODY, CAB, HOOD AND HULL ASSEMBLIES	103-1	
RADIATOR GUARD	103-1	103
CRANKCASE GUARD	104-1	104

TABLE OF CONTENTS

	PAGE	ILLUS FIG
PROTECTIVE SCREEN (D5BS1 AND D5BNS1)	105-1	105
CONTROL CONSOLE AND GUARDS	106-1	106
ENGINE HOOD AND MOUNTING	107-1	107
ROLLOVER PROTECTIVE STRUCTURE	108-1	108
DECONTAMINATION TANK MOUNTING (D5BS1)	109-1	109
TRACK ROLLER DIRT GUARD (D5BNS AND D5BS)	110-1	110
TRACK AND ROLLER GUARD (D5BS1 AND D5BNS1)	111-1	111
1802-FENDERS	112-1	
FENDERS	112-1	112
1805-FLOORS	113-1	
FLOOR PLATES	113-1	113
1806-UPHOLSTERY SEATS AND CARPETS	114-1	
SUPPORT AND SEAT	114-1	114
SEATSUPPORT	115-1	115
SEAT ASSEMBLY	116-1	116
1808-STOWAGE RACKS, BOXES, STRAPS, CARRYING CASES, CABLE REELS, HOSE REELS, ETC	117-1	
BASKET ASSEMBLY (D5BS AND D5BS1)	117-1	117
GROUP 20 HOIST, WINCH, CAPSTAN, WINDLASS, POWER CONTROL UNIT, AND POWER TAKE-OFF		
2001 -WINCH ASSEMBLY	118-1	
WINCH CASE MOUNTING	118-1	118
CABLE GUIDE AND WINCH CASE	119-1	119
WINCH CASE COVERS, BREATHER AND MAGNETIC SCREEN	120-1	120
WINCH DRUM AND DRIVING GEARS	121-1	121
WINCH DRIVING GEARS	122-1	122
WINCH DRIVING AND INPUT GEARS	123-1	123
WINCH INPUT GEARS	124-1	124
WINCH OIL FILTER	125-1	125
WINCH DRIVE SHAFT	126-1	126
WINCH HAND CONTROL	127-1	127
WINCH GEAR PUMP ASSEMBLY	128-1	128
WINCH PUMP LINES	129-1	129
WINCH CONTROL VALVE	130-1	130
WINCH SELECTOR VALVE ASSEMBLY	131-1	131
WINCH PRESSURE CONTROL VALVE ASSEMBLY	132-1	132
GROUP 22 BODY CHASSIS OR HULL, AND ACCESSORY ITEMS		
2210-DATA PLATES AND INSTRUCTION HOLDERS	133-1	
NAMEPLATES AND DECALS	133-1	133
GROUP 24 HYDRAULIC AND FLUID SYSTEMS		
2401-PUMP AND MOTOR	134-1	
HYDRAULIC OIL PUMP	134-1	134

TABLE OF CONTENTS

	PAGE	ILLUS FIG
2402-MANIFOLD AND/OR CONTROL VALVES	135-1	
HYDRAULIC TANK SUCTION LINE CONTROL VALVE (D5BNS AND D5BS)	135-1	135
HYDRAULIC TANK CONTROL VALVE (D5BS1 AND D5BNS1)	136-1	136
2403-HYDRAULIC CONTROLS AND/OR MANUAL CONTROLS	137-1	
BULLDOZER CONTROL LINKAGE (D5BNS AND D5BS)	137-1	137
BULLDOZER CONTROL LINKAGE (D5BS1 AND D5BNS1)	138-1	138
2406-STRAINERS, FILTERS, LINES AND FITTINGS, ETC	139-1	
BULLDOZER SUPPLY/RETURN LINES	139-1	139
BULLDOZER LIFT CYLINDER LINES	140-1	140
PUMP LINES	141-1	141
TILT CYLINDER LINES (D5BS1)	142-1	142
2407-HYDRAULIC CYLINDERS	143-1	
LIFT CYLINDER MOUNTING	143-1	143
LIFT CYLINDER ASSEMBLY	144-1	144
2408-LIQUID TANKS	145-1	
HYDRAULIC TANK AND VALVE (D5BNS AI-D D5BS).....	145-1	145
HYDRAULIC TANK MOUNTING	146-1	146
HYDRAULIC TANK AND VALVE (D5BS1 AND D5BNS1)	147-1	147
GROUP 42 ELECTRICAL EQUIPMENT		
4209-SIGNALING DEVICES	148-1	
BACK-UP WARNING GROUP	148-1	148
GROUP 47 GAGES, WEIGHING AND MEASURING DEVICES		
4701-INSTRUMENTS (SPEED AND DISTANCE)	149-1	
TACHOMETER DRIVE (D5BS1)	149-1	149
4702-GAGES, MOUNTINGS, LINES, AND FITTINGS	150-1	
NON-ELECTRICAL GAGES	150-1	150
GAGE TUBING	151-1	151
GROUP 74 CRANES, SHOVELS, AND EARTH MOVING EQUIPMENT COMPONENTS		
7435-BLADE, FRAME AND BRACES	152-1	
BLADE, FRAME AND BRACES	152-1	152
GROUP 94 REPAIR PARTS KITS		
9401-REPAIR PARTS KITS	KIT-1	
REPAIR KITS	KIT-1	KIT
GROUP 95 GENERAL USE STANDARDIZED PARTS		
9501-BULK MATERIEL	BULK-1	
BULK	BULK-1	BULK

TABLE OF CONTENTS

	PAGE	ILLUS FIG
SECTION III. SPECIAL TOOLS LIST		
GROUP 26 TOOLS AND TEST EQUIPMENT		
2604-SPECIAL TOOLS	153-1	
SPECIALTOOLS	153-1	153
SECTION IV. CROSS-REFERENCE INDEXES	I-1	
NATIONAL STOCK NUMBER INDEX	I-1	
PART NUMBER INDEX	I-44	
FIGURE AND ITEM NUMBER INDEX	I-134	

UNIT, DIRECT SUPPORT AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS

SECTION I. INTRODUCTION

1.Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support and General Support Maintenance of the Tractor, Full Tracked. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2.General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).

b. *Section III. Special Tools List.* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.


c. *Cross-reference Indexes.* A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing; in the listings. National stock numbers and part numbers are cross-referenced to each illustration, figure and item number appearance. The

figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE and part numbers.

3.Explanation of Columns (Sections II and III).

a. *ITEM NO. (Column (1)).* Indicates the number used to identify items called out in the illustration.

b. *SMR CODE (Column (2)).* The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria and disposition instructions, as shown in the following breakout:

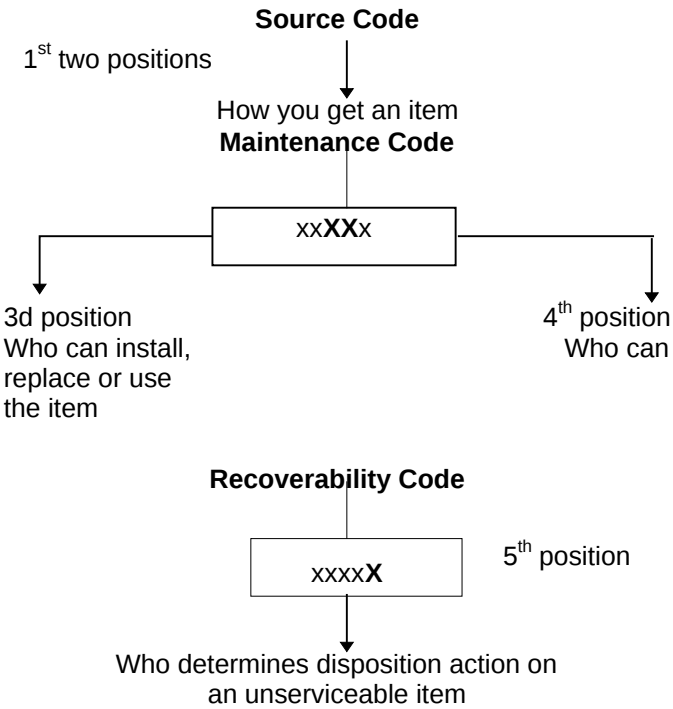

*Complete Repair. Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.