

Technical Manual

**UNIT, DIRECT SUPPORT AND GENERAL
SUPPORT INCLUDING DEPOT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOL LIST**

FOR

**TRACTOR, FULL TRACKED, LOW SPEED: DED,
MEDIUM DRAWBAR PULL, T9 SIZE, CATERPILLAR MODEL
D7G**

TRACTOR WITH RIPPER: NSN 2410-01-223-0350

TRACTOR WITH WINCH: NSN 2410-01-223-7261

**TRACTOR WITH RIPPER AND WINTERIZED CAB:
NSN 2410-01-253-2118**

**TRACTOR WITH WINCH AND WINTERIZED CAB:
NSN 2410-01-253-2117**

This manual supersedes TM 5-2410-237-24P, dated 4 April 1989.

Distribution: Approved for public release: distribution is unlimited.

**HEADQUARTERS
DEPARTMENT OF THE ARMY**

5 MAY 1993

TECHNICAL MANUAL

TM 5-2410-237-24P

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington D.C., 5 May 1993

**UNIT, INTERMEDIATE (DIRECT SUPPORT, AND GENERAL SUPPORT)
INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LIST**

FOR

**TRACTOR, FULL TRACKED, LOW SPEED: DED,
MEDIUM DRAWBAR PULL, T9 SIZE, CATERPILLAR MODEL D7G
TRACTOR WITH RIPPER: NSN 2410-01-223-0350
TRACTOR WITH WINCH: NSN 2410-01-223-7261
TRACTOR WITH RIPPER AND WINTERIZED CAB:
NSN 2410-01-253-2118
TRACTOR WITH WINCH AND WINTERIZED CAB:
NSN 2410-01-253-2117**

CURRENT AS OF

REPORTING OF ERRORS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter DA Form 2028 (Recommended Changes to Publications and Blank Forms) or DA Form 2028-2 located in the back of this manual direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Distribution: Approved for public release, distribution is unlimited.

TABLE OF CONTENTS

	.. PAGE	ILLUS FIG
SECTION I. INTRODUCTION.....	1	
SECTION II. REPAIR PARTS LIST	1-1	
GROUP 01 ENGINE		
0100-ENGINE ASSEMBLY	1-1	
ENGINE MOUNTING HARDWARE	1-1	1
ENGINE SUPPORT GROUP	2-1	2
0101-CRANKCASE, BLOCK, CYLINDER HEAD	3-1	
CYLINDER BLOCK ASSEMBLY	3-1	3
CYLINDER HEAD GROUP	4-1	4

***This manual supersedes TM 5-2410-237-24P, dated 4 April 1989.**

TABLE OF CONTENTS

	.. PAGE	ILLUS FIG
GROUP 01	ENGINE (Cont)	
	0102-CRANKSHAFT	5-1
	CRANKSHAFT GROUP	5-1
	0103-FLYWHEEL ASSEMBLY	6-1
	FLYWHEEL AND FLYWHEEL HOUSING	6-1
	0104-PISTONS, CONNECTING RODS	7-1
	PISTON AND ROD GROUP	7-1
	0105-VALVES, CAMSHAFTS, AND TIMING SYSTEM	8-1
	CAMSHAFT GROUP	8-1
	VALVE MECHANISM AND VALVE COVER	9-1
	FRONT COVER GROUP	10-1
	TIMING GEAR GROUP	11-1
	0106-ENGINE LUBRICATION SYSTEM	12-1
	OIL PAN GROUP	12-1
	ENGINE OIL LINES GROUP	13-1
	ENGINE OIL PUMP GROUP	14-1
	ENGINE OIL COOLER	15-1
	OIL FILTER, OIL LEVEL GAGE AND OIL FILTER	16-1
	CRANKCASE BREATHER	17-1
	OIL SAMPLING GROUP	18-1
	DRAIN LINES GROUP	19-1
	0108-MANIFOLDS	20-1
	EXHAUST MANIFOLD	20-1
	0109-ACCESSORY DRIVING MECHANISMS	21-1
	REAR DRIVE GEAR GROUP	21-1
GROUP 03	FUEL SYSTEM	
	0301-CARBURETOR, FUEL INJECTOR	22-1
	FUEL INJECTION NOZZLE	22-1
	0302-FUEL PUMPS	23-1
	FUEL INJECTION LINES	23-1
	FUEL PRIMING PUMP AND FILTER GROUP	24-1
	FUEL TRANSFER PUMP	25-1
	FUEL INJECTION PUMP AND GOVERNOR	26-1
	FUEL INJECTION PUMP	27-1
	0304-AIR CLEANER	28-1
	AIR CLEANER AND DUST EJECTOR	28-1
	AIR LINES GROUP	29-1
	AIR LINES GROUP - ENGINE	30-1
	0305-TURBOCHARGER	31-1
	TURBOCHARGER GROUP	31-1
	TURBOCHARGER OIL LINES	32-1
	0306-TANKS, LINES, FITTINGS, HEADERS	33-1
	LEVER AND VALVE ASSEMBLY	33-1
	FUEL LINES	34-1
	FUEL TANK GROUP	35-1
	0308-ENGINE SPEED GOVERNOR AND CONTROLS	36-1
	GOVERNOR CONTROL GROUP	36-1

TABLE OF CONTENTS

	..	ILLUS
	PAGE	FIG
GROUP 03	FUEL SYSTEM (Cont)	
	0309-FUEL FILTERS	37-1
	SECONDARY FUEL FILTER	37-1
	0311-ENGINE STARTING AIDS	38-1
	ETHER AID GROUP	38-1
	0312-ACCELERATOR, THROTTLE OR CHOKE CONTROLS	39-1
	FUEL RATIO CONTROL	39-1
GROUP 04	EXHAUST SYSTEM	
	0401-MUFFLER AND PIPES	40-1
	MUFFLER AND EXHAUST	40-1
GROUP 05	COOLING SYSTEM	
	0501-RADIATOR, EVAPORATIVE COOLER, OR	
	HEAT EXCHANGER	41-1
	RADIATOR GROUP	41-1
	RADIATOR TANK ASSEMBLY	42-1
	0503-WATER MANIFOLDS, HEADERS, THERMOSTATS	
	AND HOUSING GASKET	43-1
	WATER TEMPERATURE HOUSING AND REGULATOR	43-1
	0504-WATER PUMP	44-1
	WATER LINES GROUP	44-1
	WATER PUMP	45-1
	0505-FAN ASSEMBLY	46-1
	FAN DRIVE	46-1
	FAN GROUP	47-1
GROUP 06	ELECTRICAL SYSTEM	
	0601-GENERATOR, ALTERNATOR	48-1
	ALTERNATOR MOUNTING	48-1
	ALTERNATOR	49-1
	0603-STARTING MOTOR	50-1
	STARTING MOTOR MOUNTING GROUP	50-1
	ELECTRIC STARTING MOTOR	51-1
	STARTER SOLENOID	52-1
	0607-INSTRUMENT OR ENGINE CONTROL PANEL	53-1
	ELECTRICAL GAGE GROUP	53-1
	WIRING HARNESS	54-1
	STE/ICE WIRING	55-1
	DASH PANEL WIRING	56-1
	0608-MISCELLANEOUS ITEMS	57-1
	SWITCHES	57-1
	0609-LIGHTS	58-1
	LIGHTING GROUP	58-1
	0610-SENDING UNITS AND WARNING SWITCHES	59-1
	TRANSMISSION CONTROL WIRING	59-1

TABLE OF CONTENTS

	..	ILLUS
	PAGE	FIG
GROUP 06	ELECTRICAL SYSTEM (Cont)	
	0611-HORN, SIREN	60-1
	HORN AND BACK-UP ALARM	60-1
	0612-BATTERIES, STORAGE (WET OR DRY)	61-1
	BATTERIES AND CABLES.....	61-1
	0613-HULL OR CHASSIS WIRING HARNESS	62-1
	CHASSIS WIRING GROUP	62-1
	WIRING LEADS AND FUSEHOLDERS	63-1
	ENGINE WIRING HARNESSES	64-1
	STARTING RECEPTACLE	65-1
	WINTER CAB ELECTRICAL PACKAGE	66-1
GROUP 07	TRANSMISSION	
	0705-GEAR SHIFT, VACUUM BOOSTER AND CONTROLS.....	67-1
	TRANSMISSION CONTROL GROUP	67-1
	TRANSMISSION CONTROL LINKAGE	68-1
	0708-TORQUE CONVERTER	69-1
	TORQUE DIVIDER GROUP	69-1
	TORQUE DIVIDER ASSEMBLY	70-1
	0710-TRANSMISSION ASSEMBLY	71-1
	TRANSMISSION ARRANGEMENT	71-1
	PLANETARY TRANSMISSION	72-1
	CARRIER AND CLUTCH HOUSINGS (NO. 2 AND 3)	73-1
	CARRIER AND CLUTCH HOUSINGS (NO. 4 AND 5)	74-1
	TRANSMISSION HYDRAULIC CONTROL	75-1
	SELECTOR VALVE	76-1
	PRESSURE CONTROL VALVE	77-1
	TRANSFER GEAR PUMP	78-1
	0721-COOLERS, PUMPS, MOTORS	79-1
	TORQUE CONVERTER RELIEF VALVE	79-1
	TORQUE CONVERTER COOLER LINES.....	80-1
	TRANSMISSION OIL PUMP	81-1
	UPPER POWER TRAIN LINES AND MOUNTINGS	82-1
	POWER TRAIN LINES GROUP	83-1
	TRANSMISSION OIL COOLER.....	84-1
	TRANSMISSION AND STEERING CLUTCH FILTER.....	85-1
	MAGNETIC SCREEN GROUP	86-1
	RELIEF VALVE GROUP	87-1
	GEAR PUMP	88-1
	TRANSMISSION OIL SAMPLING VALVE.....	89-1
GROUP 08	TRANSFER AND FINAL DRIVE ASSEMBLIES	
	0801-POWER TRANSFER AND FINAL DRIVE ASSEMBLIES	90-1
	FINAL DRIVE SPROCKET SUPPORT AND CASE	90-1
	FINAL DRIVE PINION, CASE AND SHAFT.....	91-1
GROUP 09	PROPELLER AND PROPELLER SHAFTS	
	0900-PROPELLER SHAFTS	92-1
	DRIVE SHAFT.....	92-1

TABLE OF CONTENTS

	.. PAGE	ILLUS FIG
GROUP 13	WHEELS AND TRACKS	
	1301-SUSPENSION ASSEMBLY	93-1
	EQUALIZER BAR	93-1 93
	TRACK ROLLER BAR FRAME	94-1 94
	1302-TRACK SUPPORT ROLLERS	95-1
	TRACK CARRIER ROLLER	95-1 95
	SINGLE FLANGE TRACK ROLLER	96-1 96
	DOUBLE FLANGE TRACK ROLLER	97-1 97
	1303-TRACK IDLERS AND BRACKETS	98-1
	FRONT IDLER SPRING ROD AND CYLINDER	98-1 98
	FRONT IDLER COLLAR AND BEARINGS	99-1 99
	1305-TRACK ASSEMBLY	100-1
	TRACK GROUP	100-1 100
GROUP 14	STEERING	
	1403-STEERING BRAKES	
	BRAKE HYDRAULIC CONTROL AND LINES AND FITTINGS	101-1 101
	RH BRAKE HYDRAULIC CONTROL HOUSING	102-1 102
	BRAKE LINKAGE	103-1 103
	BRAKE PEDAL LINKAGE	104-1 104
	BRAKE ACTUATING MECHANISM	105-1 105
	STEERING CONTROL VALVE LINES AND LINKAGE	106-1 106
	STEERING CLUTCH CONTROL LEVER LINKAGE	107-1 107
	STEERING CLUTCH	108-1 108
	1414-STEERING SYSTEM VALVES	109-1
	STEERING CLUTCH CONTROL VALVE	109-1 109
GROUP 15	FRAME, TOWING ATTACHMENTS AND DRAWBARS	
	1501-FRAME ASSEMBLY	110-1
	FRAME AND CASE	110-1 110
GROUP 18	BODY, CAB, HOOD, AND HULL	
	1801-BODY, CAB, HOOD, AND HULL ASSEMBLIES	111-1
	CRANKCASE GUARD	111-1 111
	RADIATOR GUARD	112-1 112
	RECOIL MECHANISM GUARD	113-1 113
	TRACK ROLLER GUARD	114-1 114
	HOOD	115-1 115
	ROPS MOUNTING	116-1 116
	PROTECTIVE SCREEN	117-1 117
	WINTERIZED CAB FRONT	118-1 118
	WINTERIZED CAB RH SIDE	119-1 119
	WINTERIZED CAB LH SIDE	120-1 120
	WINTERIZED CAB REAR	121-1 121
	CAB NOISE CONTROL COMPONENTS	122-1 122
	HYDRAULIC TANK MOUNTING	123-1 123
	1802-FENDERS, RUNNING BOARDS WITH MOUNTING	
	AND ATTACHING PARTS	124-1
	FENDER GROUP	124-1 124

TABLE OF CONTENTS

	.. PAGE	ILLUS FIG
GROUP 18	BODY. CAB, HOOD AND HULL (Cont)	
	1805-FLOORS 125-1	
	FLOOR PLATES 125-1	125
	1806-UPHOLSTERY SEATS AND CARPETS 126-1	
	ADJUSTABLE SEAT GROUP 126-1	126
	SEAT GROUP 127-1	127
	SEAT FRAME 128-1	128
	1808-STOWAGE RACKS, BOXES, STRAPS, CARRYING CASES, ECT 129-1	129
	TOOL BOX 129-1	129
	DECONTAMINATION MOUNTING BRACKETS 130-1	130
GROUP 20	HOIST, WINCH, CAPSTAN, WINDLASS, POWER CONTROL UNIT AND POWER TAKE-OFF	
	2001-HOIST, CAPSTAN, WINDLASS, CRANE, OR WINCH ASSEMBLY 131-1	
	WINCH MOUNTING GROUP 131-1	131
	CABLE GUIDE AND CASE GROUP 132-1	132
	WINCH CONTROL VALVE TUBING 133-1	133
	WINCH GROUP - COVER ASSEMBLY 134-1	134
	SHAFT AND DRUM ASSEMBLY 135-1	135
	DICS AND HUB ASSEMBLY 136-1	136
	GEAR ASSEMBLY 137-1	137
	BREATHING, WINCH MAGNETIC SCREEN AND WINCH ASSEMBLY (PARTIAL) 138-1	138
	DICS ASSEMBLY 139-1	139
	WINCH OIL FILTER 140-1	140
	WINCH INPUT SHAFT 141-1	141
	TOWING WINCH CONTROL GROUP 142-1	142
	WINCH OIL PUMP GROUP 143-1	143
GROUP 22	BODY CHASSIS OR HULL, AND ACCESSORY ITEMS	
	2202-ACCESSORY ITEMS 144-1	
	MIRROR GROUP 144-1	144
	2207-WINTERIZATION EQUIPMENT 145-1	
	FRONT AND REAR DEFROSTER FAN 145-1	145
	FRONT AND REAR WIPER MOTORS 146-1	146
	24 VOLT HEATER ASSEMBLY 147-1	147
	2210-DATA PLATES 148-1	
	PLATES FILM, TAGS, AND STENCILS 148-1	148
GROUP 24	HYDRAULIC LIFT COMPONENTS	
	2401 -HYDRAULIC PUMP 149-1	
	HYDRAULIC PUMP GROUP 149-1	149
	2402-HYDRAULIC CONTROL GROUP 150-1	
	WINCH CONTROL VALVE GROUP 150-1	150
	PRESSURE VALVE 151-1	151
	BODY ASSEMBLY 152-1	152

TABLE OF CONTENTS

	.. PAGE	ILLUS FIG
GROUP 24	HYDRAULIC LIFT COMPONENTS (Cont)	
	CONTROL VALVE GROUP	153
	TILT CONTROL PILOT VALVE GROUP, WITHOUT RIPPER	154
	VALVE GROUP WITH RIPPER	155
	RIPPER CONTROL VALVE	156
	PRESSURE CONTROL VALVE	157
	LIFT AND TILT CONTROL VALVE	158
	LIFT AND TILT CONTROL VALVE	159
	VALVE GROUP(QUICK DROP) (RH AND LH)	160
	2403-HYDRAULIC CONTROL LEVERS AND LINKAGE	161
	CONTROL LINKAGE DOZER TILT	161
	CONTROL LINKAGE RIPPER	162
	2404-HYDRAULIC TILT CYLINDERS AND TILT CRANK	163
	TILT CYLINDER	163
	2406-HYDRAULIC LINES AND FITTINGS	164
	PUMP LINES GROUP	164
	PUMP LINES GROUP	165
	BULLDOZER LINES GROUP	166
	DOZER HOSE AND LINES GROUP	167
	HYDRAULIC TILT CYLINDER LINES GROUP	168
	TILT CYLINDER LINES GROUP	169
	RIPPER LINES GROUP SIDE	170
	RIPPER LINES GROUP FRONT	171
	RIPPER LINES GROUP	172
	WINCH LINES GROUP	173
	2407-HYDRAULIC CYLINDERS	174
	CYLINDER AND VALVE GROUP (RH)	174
	CYLINDER AND VALVE GROUP (LH)	175
	BLADE LIFT CYLINDER (RH AND LH)	176
	BLADE LIFT CYLINDER MOUNTING TABLE	177
	RIPPER LIFT CYLINDER GROUP	178
	2408-LIQUID TANKS OR RESERVOIRS	179
	HYDRAULIC TANK AND VALVE GROUP	179
	HYDRAULIC TANK GROUP	180
	HYDRAULIC TANK FILTER GROUP	181
GROUP 47	GAGES (NON-ELECTRICAL) WEIGHING AND MEASURING DEVICES	
	4701-INSTRUMENTS (SPEED AND DISTANCE)	182
	TACHOMETER DRIVE GROUP	182
	4702-GAGES, MOUNTINGS, LINES AND FITTINGS	182
	GAGE GROUP	183
GROUP 74	CRANES, SHOVELS, AND EARTH MOVING EQUIPMENT COMPONENTS	
	7435-MOLDBOARD ASSEMBLY	184
	BLADE GROUP	184
	7436-LIFT ARMS AND PIVOT ASSEMBLIES	185
	PUSH ARM GROUP AND TRUNNION GROUP	185

TABLE OF CONTENTS

	.. PAGE	ILLUS FIG
GROUP 74	CRANES, SHOVELS, AND EARTH MOVING EQUIPMENT COMPONENTS (Cont)	
	7465-ROOTERS, RIPPERS, PLOWS 186-1	
	RIPPER GROUP 186-1	186
	RIPPER MOUNTING GROUP 187-1	187
	RIPPER TOOTH GROUP 188-1	188
GROUP 94	REPAIR KITS	
	9401-REPAIR KITS KIT-1	
	KIT KIT-1	KIT
GROUP 95	GENERAL USE STANDARDIZED PARTS	
	9501-BULK MATERIEL BULK-1	
	BULK MATERIEL BULK-1	BULK
SECTION III.	SPECIAL TOOLS	
GROUP 26	TOOLS AND TEST EQUIPMENT	
	2604-SPECIAL TOOLS 189-1	
	SPECIAL TOOLS 189-1	189
	JACK STANDS AND ELECTRIC PUMP 190-1	190
SECTION IV.	CROSS-REFERENCE INDEXES	
	NATIONAL STOCK NUMBER INDEX	I-1
	PART NUMBER INDEX	
	FIGURE AND ITEM NUMBER INDEX	

SECTION I

UNIT, DIRECT SUPPORT AND GENERAL SUPPORT INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support and General Support Maintenance of the Tractor. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for repairable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).

b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.


c. Cross-reference Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration, figure and item number appearance. The figure and item number index lists figure and item

numbers in alphanumeric sequence and cross-references NSN, CAGE and part numbers.

3. Explanation of Columns (Sections II and III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR CODE (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria and disposition instructions, as shown in the following breakout:

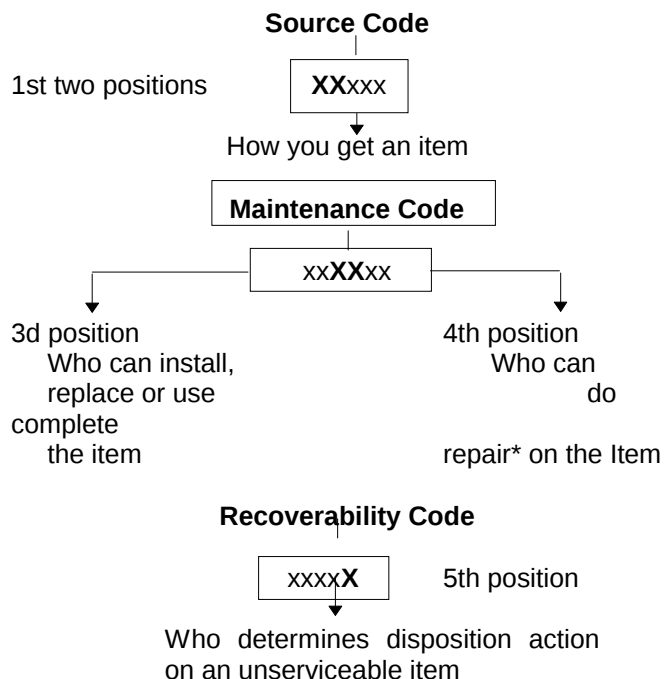

**Complete Repair.* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.