

TECHNICAL MANUAL

UNIT, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS

TRUCK, LIFT, FORK: GASOLINE; PNEUMATIC
TIRED WHEELS; 15, 000 LB CAPACITY;
210 IN. LIFT HEIGHT
ARMY MODEL MHE 178
(NSN 3930-00-897-4632)
HYSTER MODEL H150C
ARMY MODEL MHE 178A
(NSN 3930-01-054-3894)
HYSTER MODEL H150C
ARMY MODEL MHE 178B
(NSN 3930-01-054-3895)
HYSTER MODEL H150C
ARMY MODEL MHE 178C
(NSN 3930-01-052-5218)
HYSTER MODEL H150C
ARMY MODEL MHE 223
(NSN 3930-01-151-4434)
HYSTER MODEL H150F

This manual supersedes TM 10-3930-222-34P, dated 28 March 1985, and TM 10-3930-222-20P,
dated 14 March 1985, and all changes.

Approved for public release; distribution is unlimited

HEADQUARTERS, DEPARTMENT OF THE ARMY MAY 1992

UNIT, DIRECT SUPPORT, AND
GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
TRUCK, LIFT, FORK: GASOLINE; PNEUMATIC
TIRED WHEELS; 15, 000 LB CAPACITY;
210 IN. LIFT HEIGHT
ARMY MODEL MHE178
(NSN 3930-00-897-4632)
HYSTER MODEL H150C
ARMY MODEL MHE178A
(NSN 3930-01-054-3894)
HYSTER MODEL H150C
ARMY MODEL MHE1 78B
(NSN 3930-01-054-3895)
HYSTER MODEL H150C
ARMY MODEL MHE178C
(NSN 3930-01-052-5218)
HYSTER MODEL H150C
ARMY MODEL MHE223
(NSN 3930-01-151-4434)
HYSTER MODEL H150F

Current as of 1 August 1991

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS
You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (*Recommended Changes to Publications and Blank Forms*), or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

		Page	Illus Fig
SECTION	I.	INTRODUCTION.....	1
SECTION	II.	REPAIR PARTS LIST	1-1
GROUP	01	ENGINE	
		0100 ENGINE ASSEMBLY	1-1
		ENGINE MOUNTING PARTS	1-1 1
		0101 CRANKCASE, BLOCK, CYLINDER HEAD.....	2-1
		CYLINDER BLOCK AND CYLINDER HEAD	2-1 2

*This manual supersedes TM 1 0-3930-222-34P, dated 28 March 1985, and TM 10-3930-222-20P, dated 14 March 1985, and all changes.

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
	0102 CRANKSHAFT	3-1	
	CRANKSHAFT	3-1	3
	0104 PISTONS AND CONNECTING RODS	4-1	
	PISTON AND CONNECTING ROD	4-1	4
	0105 VALVES, CAMSHAFTS, AND TIMING SYSTEM	5-1	
	CAMSHAFT AND VALVES	5-1	5
	TIMING GEAR COVER	6-1	6
	0106 ENGINE LUBRICATION SYSTEM	7-1	
	OIL FILTER AND LINES	7-1	7
	ENGINE LUBRICATION COMPONENTS	8-1	8
	0108 MANIFOLDS	9-1	
	MANIFOLD AND HEAT CONTROL	9-1	
GROUP	03 FUEL SYSTEM		
	0301 CARBURETOR, FUEL INJECTOR	10-1	
	CARBURETOR	10-1	10
	0302 FUEL PUMPS	11-1	
	FUEL PUMP	11-1	11
	0304 AIR CLEANER	12-1	
	AIR CLEANER	12-1	12
	0306 TANKS, LINES, FITTINGS, HEADERS	13-1	
	FUEL TANK	13-1	13
	0308 ENGINE SPEED GOVERNOR AND CONTROLS	14-1	
	GOVERNOR	14-1	14
	0312 ACCELERATOR, THROTTLE, OR CHOKE CONTROLS	15-1	
	ACCELERATOR AND LINKAGE	15-1	15
GROUP	04 EXHAUST SYSTEM		
	0401 MUFFLER AND PIPES	16-1	
	MUFFLER AND PIPE	16-1	16
GROUP	05 COOLING SYSTEM		
	0501 RADIATOR, EVAPORATIVE COOLER, OR HEAT EXCHANGER	17-1	
	RADIATOR	17-1	17
	0503 WATER MANIFOLD, HEADERS, THERMOSTATS, AND	18-1	
	HOUSING GASKET		
	RADIATOR HOSES AND THERMOSTAT	18-1	18
	0504 WATER PUMP	19-1	
	WATER PUMP	19-1	19
	0505 FAN ASSEMBLY	20-1	
	FAN ASSEMBLY	20-1	20
GROUP	06 ELECTRICAL SYSTEM		
	0601 GENERATOR, ALTERNATOR	21-1	
	GENERATOR	21-1	21
	ALTERNATOR(MHE223)1	22-1	22
	0602 GENERATOR REGULATOR	23-1	
	GENERATOR REGULATOR VOLTAGE	23-1	23

TABLE OF CONTENTS (Con't)

			Page	Illus Fig
		0603 STARTING MOTOR	24-1	
		STARTER	24-1	24
		0605 IGNITION COMPONENTS	25-1	
		DISTRIBUTOR	25-1	25
		0607 INSTRUMENT OR ENGINE CONTROL PANEL	26-1	
		INSTRUMENTPANEL	26 -1	26
		0609 LIGHTS	27-1	
		HEADLIGHT AND STOPLIGHT	27-1	27
		0610 SENDING UNITS AND WARNING SWITCHES	28-1	
		SENDING UNITS	28-1	28
		0611 HORN, SIREN	29-1	
		HORN BUTTON	29-1	29
		0612 BATTERIES, STORAGE	30-1	
		BATTERY AND CARRIER	30-1	30
GROUP	07	TRANSMISSION		
		0705 TRANSMISSION SHIFTING COMPONENTS	31-1	
		CONTROL LEVERS AND LINKAGE.....	31-1	31
		0708 TORQUE CONVERTER OR FLUID COUPLING	32-1	
		TORQUE CONVERTER HOUSING.....	32-1	32
		TORQUE CONVERTER COMPONENTS (MHE178B,	33-1	33
		MHE178C, AND MHE223)		
		0710 TRANSMISSION ASSEMBLY	34-1	
		TRANSMISSION ASSEMBLY	34-1	34
		PLANETARY CARRIAGE ASSEMBLY	35-1	35
		0713 INTERMEDIATE CLUTCH	36-1	
		CLUTCH ASSEMBLY, HIGH AND LOW.....	36-1	36
		CLUTCH ASSEMBLY, FORWARD AND REVERSE1	37-1	37
		0714 SERVO UNIT	38-1	
		CONTROL VALVE (MHE178 AND MHE178A).....	38-1	38
		CONTROL VALVE (MHE178B AND MHE223).....	39-1	39
		0721 COOLERS, PUMPS, MOTORS	40-1	
		TRANSMISSION OIL FILTER LINES AND FITTINGS		
		(MHE178B, MHE178C, AND MHE223)	40-1	40
		TRANSMISSION OIL FILTER (MHE178B, MHE178C, AND	41-1	41
		MHE223)		
		TRANSMISSION OIL FILTER AND LINES (MHE178 AND	42-1	42
		MHE178A)		
GROUP	09	PROPELLER, PROPELLER SHAFTS, UNIVERSAL JOINTS, COUPLER, AND CLAMP ASSEMBLY		
		0900 PROPELLER SHAFTS.....	43-1	
		PROPELLER SHAFT	43-1	43
GROUP	10	FRONT AXLE		
	1000	FRONT AXLE ASSEMBLY	44-1	
		FRONT AXLE.....	44-1	44
	1002	DIFFERENTIAL	45-1	
		DIFFERENTIAL AND CARRIER ASSEMBLY	45-1	45
		DIFFERENTIAL CASE AND COMPONENTS	46-1	46
GROUP	11	REAR AXLE		
	1100	REAR AXLE ASSEMBLY	47-1	
		REAR AXLE	47-1	47

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
	1104 STEERING, SIDESHIFT, AND WHEEL LEANING	48-1	
	MECHANISM		
	STEERING AXLE	48-1	48
GROUP	12 BRAKES		
	1201 HANDBRAKES	49-1	
	HANDBRAKE	49-1	49
	1202 SERVICE BRAKES	50-1	
	SERVICE BRAKE	50-1	50
	1204 HYDRAULIC BRAKE SYSTEM.....	51-1	
	WHEEL CYLINDER	51-1	51
	MASTER CYLINDER	52-1	52
	MASTER CYLINDER (MHE178B, MHE178C, AND MHE223)	53-1	53
	1205 VACUUM SYSTEM COMPONENTS	54-1	
	CONTROLS INSTALLATION.....	54-1	54
	HYDROVAC ASSEMBLY.....	55-1	55
	HYDROVAC BRAKE BOOSTER	56-1	56
	1206 MECHANICAL BRAKE SYSTEM.....	57-1	
	BRAKE PEDAL AND LINKAGE	57-1	57
GROUP	13 WHEELS AND TRACKS		
	1311 WHEEL ASSEMBLY	58-1	
	WHEEL ASSEMBLY, DRIVE AXLE	58-1	58
	WHEEL ASSEMBLY, STEERING AXLE	59-1	59
	1313 TIRES, TUBES, TIRE CHAINS	60-1	
	TIRE AND TUBE	60-1	60
GROUP	14 STEERING		
	1401 MECHANICAL STEERING GEAR ASSEMBLY	61-1	
	DRAG LINK AND TIE-ROD.....	61-1	61
	1407 POWER STEERING GEAR ASSEMBLY	62-1	
	STEERING GEAR	62-1	62
	1410 HYDRAULIC PUMP OR FLUID MOTOR ASSEMBLY	63-1	
	HYDRAULIC STEERING PUMP	63-1	63
	1411 HOSES, LINES, FITTINGS	64-1	
	STEERING LINES AND FITTINGS.....	64-1	64
	1412 HYDRAULIC OR AIR CYLINDERS.....	65-1	
	POWER STEERING CYLINDER ATTACHING HARDWARE ..	65-1	65
	POWER STEERING CYLINDER (MHE178 AND MHE178A) ...	66-1	66
	POWER STEERING CYLINDER (MHE178B, MHE178C, AND MHE223)	67-1	67
GROUP	18 BODY, CAB, HOOD, AND HULL		
	1806 UPHOLSTERY SEATS, AND CARPETS	68-1	
	SEAT CUSHIONS AND OVERHEAD GUARD	68-1	68
GROUP	24 HYDRAULIC AND FLUID SYSTEMS		
	2401 PUMP AND MOTOR	69-1	
	LIFT PUMP	69-1	69
	LIFT PUMP DRIVE SHAFT	70-1	70

TABLE OF CONTENTS (Con't)

		Page	Illus Fig
	2402	MANIFOLD AND/OR CONTROL VALVES	71-1
		FLOW DIVIDER VALVE	71-1 71
		TILT CONTROL VALVE	72-1 72
		LIFT CONTROL VALVE	73-1 73
	2403	HYDRAULIC CONTROLS AND/OR MANUAL CONTROLS	74-1
		CONTROL LEVERS AND LINKAGE	74-1 74
	2404	TILT CYLINDERS AND TILT CRANK	75-1
		TILT CYLINDER ASSEMBLY	75-1 75
	2405	MAST COLUMN	76-1
		LIFT CHAINS	76-1 76
		LIFT CARRIAGE AND FORK	77-1 77
		LIFT MAST	78-1 78
		LIFT CYLINDER ASSEMBLY	79-1 79
	2406	STRAINERS, FILTERS, LINES, AND FITTINGS, ETC	80-1
		HYDRAULIC OIL FILTER	80-1 80
		LIFT LINES AND FITTINGS	81-1 81
	2408	LIQUID TANKS OR RESERVOIRS	82-1
		HYDRAULIC OIL TANK	82-1 82
GROUP	91	CHEMICAL, BIOLOGICAL, AND RADIOLOGICAL (CBR) EQUIPMENT	
	9120	DECONTAMINATION EQUIPMENT	83-1
		DECONTAMINATION BRACKET ASSEMBLY	83-1 83
GROUP	94	REPAIR KITS	
	9401	REPAIR KITS	KITS-1
		REPAIR KITS	KITS-1 KITS
GROUP	95	GENERAL USE STANDARDIZED PARTS	
	9501	BULK MATERIEL	BULK-1
		BULK MATERIEL	BULK-1 BULK
SECTION	III.	SPECIAL TOOLS LIST (NOT APPLICABLE)	
SECTION	IV.	CROSS-REFERENCE INDEXES	
		NATIONAL STOCK NUMBER INDEX	I -1
		PART NUMBER INDEX	I -13
		FIGURE AND ITEM NUMBER INDEX	I -47

v/(vi Blank)

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

SECTION 1. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support, and General Support Maintenance of the Forklift, Truck. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. *Section II Repair Parts List.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).

b. *Section III. Special Tools List.* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.


c. *Section IV Cross-reference Indexes.* A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. Explanation of Columns (Sections II and III).

a. *ITEM NO. (Column (1)).* Indicates the

number used to identify items called out in the illustration.

b. *SMR CODE (Column (2)).* The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

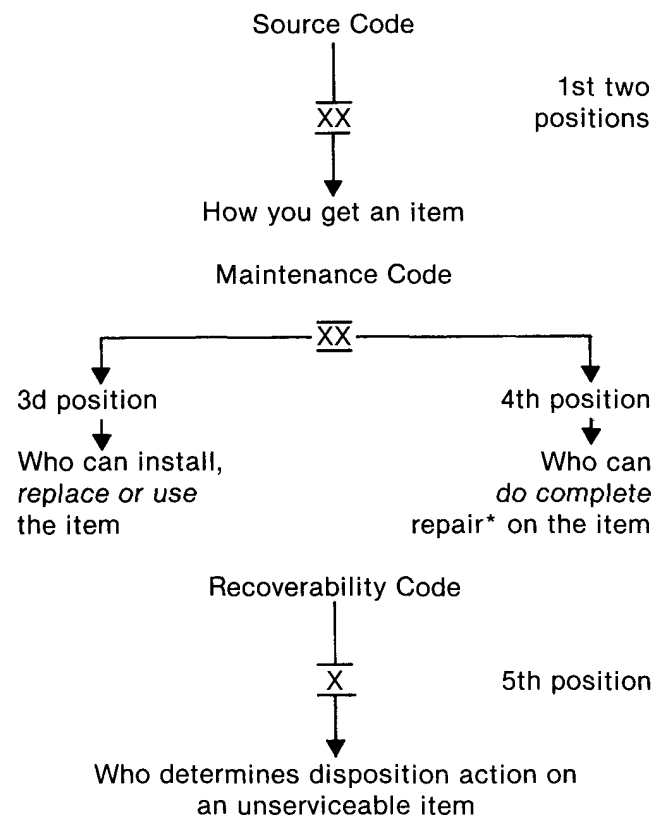

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) *Source Code.* The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: