

---

**TECHNICAL MANUAL****UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE  
REPAIR PARTS AND SPECIAL TOOLS LISTS****TRUCK, LIFT, FORK, GASOLINE,  
4,000-LB CAPACITY**

| <b>TOWMOTOR MODELS</b>         | <b>ARMY MODEL</b> | <b>UOC</b> | <b>NSN</b>       |
|--------------------------------|-------------------|------------|------------------|
| 502PG4024-100 (PNEUMATIC TIRE) | MHE-190           | ANK        | 3930-00-926-3807 |
| 502PG4024-144 (PNEUMATIC TIRE) | MHE-190           | ANJ        | 3930-00-073-9222 |
| 502PG4024-144 (PNEUMATIC TIRE) | MHE-190A          | CRD        | 3930-01-044-0075 |
| 502PG4024-144 (PNEUMATIC TIRE) | MHE-190B          | CRE        | 3930-01-089-8001 |
| 462SG4024-144 (SOLID TIRE)     | MHE-191           | ANH        | 3930-00-781-3855 |
| 462SG4024-100 (SOLID TIRE)     | MHE-191           | ANG        | 3930-00-781-3856 |
| 502PG4024-144 (PNEUMATIC TIRE) | MHE-220           | CRC        | 3930-00-419-5738 |

This manual supersedes TM 10-3930-235-20P, 19 March 1985  
and TM 10-3930-235-34P, 19 March 1985.

Approved for public release, distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY  
OCTOBER 1990

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE  
REPAIR PARTS AND SPECIAL TOOLS LISTS****TRUCK, LIFT, FORK, GASOLINE,  
4,000-LB CAPACITY**

| TOWMOTOR MODELS                | ARMY MODEL | UOC | NSN              |
|--------------------------------|------------|-----|------------------|
| 502PG4024-100 (PNEUMATIC TIRE) | MHE-190    | ANK | 3930-00-926-3807 |
| 502PG4024-144 (PNEUMATIC TIRE) | MHE-190    | ANJ | 3930-00-073-9222 |
| 502PG4024-144 (PNEUMATIC TIRE) | MHE-190A   | CRD | 3930-01-044-0075 |
| 502PG4024-144 (PNEUMATIC TIRE) | MHE-190B   | CRE | 3930-01-089-8001 |
| 462SG4024-144 (SOLID TIRE)     | MHE-191    | ANH | 3930-00-781-3855 |
| 462SG4024-100 (SOLID TIRE)     | MHE-191    | ANG | 3930-00-781-3856 |
| 502PG4024-144 (PNEUMATIC TIRE) | MHE-220    | CRC | 3930-00-419-5738 |

Current as of 13 April 1990

**REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS**

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

**TABLE OF CONTENTS**

|         |     |                                             | Page | Illus<br>Fig |
|---------|-----|---------------------------------------------|------|--------------|
| SECTION | I.  | INTRODUCTION.....                           | 1    |              |
| SECTION | II. | REPAIR PARTS LIST .....                     | 1-1  |              |
| GROUP   | 01  | ENGINE                                      |      |              |
|         |     | 0100 - ENGINE ASSEMBLY .....                | 1-1  |              |
|         |     | ENGINE AND MOUNTING COMPONENTS .....        | 1-1  | 1            |
|         |     | 0101 - CRANKCASE, BLOCK, CYLINDER HEAD..... | 2-1  |              |
|         |     | CYLINDER BLOCK AND BEARINGS.....            | 2-1  | 2            |
|         |     | CYLINDER HEAD .....                         | 3-1  | 3            |

\* This manual supersedes TM 10-3930-235-20P, 19 March 1985 and TM 10-3930-235-34P, 19 March 1985.

## TABLE OF CONTENTS - Continued

|       |    |                                                        | Page | Illus<br>Fig |
|-------|----|--------------------------------------------------------|------|--------------|
|       |    | 0102 - CRANKSHAFT .....                                | 4-1  |              |
|       |    | CRANKCASE VENTILATION .....                            | 4-1  | 4            |
|       |    | CRANKSHAFT AND BEARINGS.....                           | 5-1  | 5            |
|       |    | 0103 - FLYWHEEL ASSEMBLY.....                          | 6-1  |              |
|       |    | FLYWHEEL AND HOUSING .....                             | 6-1  | 6            |
|       |    | 0104 - PISTONS, CONNECTING RODS.....                   | 7-1  |              |
|       |    | PISTON ASSEMBLY.....                                   | 7-1  | 7            |
|       |    | 0105 - VALVES, CAMSHAFTS, AND TIMING SYSTEM.....       | 8-1  |              |
|       |    | VALVES AND LIFTERS.....                                | 8-1  | 8            |
|       |    | CAMSHAFT AND BEARINGS .....                            | 9-1  | 9            |
|       |    | TIMING GEAR COVER.....                                 | 10-1 | 10           |
|       |    | 0106 - ENGINE LUBRICATION SYSTEM .....                 | 11-1 |              |
|       |    | OIL PAN AND FILLER BLOCKS.....                         | 11-1 | 11           |
|       |    | OIL PRESSURE RELIEF VALVE AND OIL PUMP ASSEMBLY ...    | 12-1 | 12           |
|       |    | OIL FILTER .....                                       | 13-1 | 13           |
|       |    | 0108 - MANIFOLDS .....                                 | 14-1 |              |
|       |    | MANIFOLDS .....                                        | 14-1 | 14           |
| GROUP | 03 | FUEL SYSTEM                                            |      |              |
|       |    | 0301 - CARBURETOR, FUEL INJECTOR.....                  | 15-1 |              |
|       |    | CARBURETOR .....                                       | 15-1 | 15           |
|       |    | 0302 - FUEL PUMPS .....                                | 16-1 |              |
|       |    | FUEL PUMP.....                                         | 16-1 | 16           |
|       |    | 0304 - AIR CLEANER .....                               | 17-1 |              |
|       |    | AIR CLEANER .....                                      | 17-1 | 17           |
|       |    | 0306 - TANKS, LINES, FITTINGS, HEADERS .....           | 18-1 |              |
|       |    | FUEL LINES AND FILTER.....                             | 18-1 | 18           |
|       |    | FUEL TANK.....                                         | 19-1 | 19           |
|       |    | 0308 - ENGINE SPEED GOVERNOR AND CONTROLS.....         | 20-1 |              |
|       |    | ENGINE SPEED GOVERNOR .....                            | 20-1 | 20           |
|       |    | 0309 - FUEL FILTERS .....                              | 21-1 |              |
|       |    | FUEL LINES AND FILTER.....                             | 21-1 | 21           |
|       |    | 0312 - ACCELERATOR, THROTTLE OR CHOKE CONTROLS.....    | 22-1 |              |
|       |    | ACCELERATOR LINKAGE AND CONTROLS.....                  | 22-1 | 22           |
| GROUP | 04 | EXHAUST SYSTEM                                         |      |              |
|       |    | 0401 - MUFFLER AND PIPES .....                         | 23-1 |              |
|       |    | MUFFLER AND PIPES .....                                | 23-1 | 23           |
| GROUP | 05 | COOLING SYSTEM                                         |      |              |
|       |    | 0501 - RADIATOR, EVAPORATIVE COOLER, OR HEAT EXCHANGER | 24-1 |              |
|       |    | RADIATOR AND HOSES .....                               | 24-1 | 24           |
|       |    | 0503 - WATER MANIFOLD, HEADERS, THERMOSTATS AND        |      |              |
|       |    | HOUSING GASKET .....                                   | 25-1 |              |
|       |    | THERMOSTAT .....                                       | 25-1 | 25           |
|       |    | RADIATOR HOSES .....                                   | 26-1 | 26           |
|       |    | 0504 - WATER PUMP .....                                | 27-1 |              |
|       |    | WATER PUMP .....                                       | 27-1 | 27           |
|       |    | 0505 - FAN ASSEMBLY .....                              | 28-1 |              |
|       |    | FAN ASSEMBLY.....                                      | 28-1 | 28           |
|       |    | FAN DRIVE ASSEMBLY.....                                | 29-1 | 29           |

## TABLE OF CONTENTS - Continued

|       |    |                                                                                    | Page | Illus<br>Fig |
|-------|----|------------------------------------------------------------------------------------|------|--------------|
| GROUP | 06 | ELECTRICAL SYSTEM                                                                  |      |              |
|       |    | 0601 - GENERATOR, ALTERNATOR .....                                                 | 30-1 |              |
|       |    | GENERATOR .....                                                                    | 30-1 | 30           |
|       |    | 0602 - GENERATOR REGULATOR .....                                                   | 31-1 |              |
|       |    | VOLTAGE REGULATOR AND ENGINE REGULATOR .....                                       | 31-1 | 31           |
|       |    | 0603 - STARTING MOTOR .....                                                        | 32-1 |              |
|       |    | STARTING MOTOR .....                                                               | 32-1 | 32           |
|       |    | 0605 - IGNITION COMPONENTS .....                                                   | 33-1 |              |
|       |    | DISTRIBUTOR .....                                                                  | 33-1 | 33           |
|       |    | SPARK PLUG, COIL .....                                                             | 34-1 | 34           |
|       |    | 0607 - INSTRUMENT OR ENGINE CONTROL PANEL .....                                    | 35-1 |              |
|       |    | INSTRUMENT PANEL, GAGES, AND WARNING SWITCHES ....                                 | 35-1 | 35           |
|       |    | 0608 - MISCELLANEOUS ITEMS .....                                                   | 36-1 |              |
|       |    | SWITCHES AND FUSES .....                                                           | 36-1 | 36           |
|       |    | 0609 - LIGHTS .....                                                                | 37-1 |              |
|       |    | STOP AND TAILLIGHT AND HEADLIGHT .....                                             | 37-1 | 37           |
|       |    | 0611 - HORN, SIREN .....                                                           | 38-1 |              |
|       |    | HORN ASSEMBLY .....                                                                | 38-1 | 38           |
|       |    | 0612 - BATTERIES, STORAGE .....                                                    | 39-1 |              |
|       |    | BATTERY .....                                                                      | 39-1 | 39           |
|       |    | 0613 - HULL OR CHASSIS WIRING HARNESS .....                                        | 40-1 |              |
|       |    | WIRING HARNESSES .....                                                             | 40-1 | 40           |
| GROUP | 07 | TRANSMISSION                                                                       |      |              |
|       |    | 0705 - TRANSMISSION SHIFTING COMPONENTS .....                                      | 41-1 |              |
|       |    | SHIFT LEVER AND LINKAGE .....                                                      | 41-1 | 41           |
|       |    | 0708 - TORQUE CONVERTER OR FLUID COUPLING .....                                    | 42-1 |              |
|       |    | TORQUE CONVERTER .....                                                             | 42-1 | 42           |
|       |    | 0710 - TRANSMISSION ASSEMBLY AND ASSOCIATED PARTS .....                            | 43-1 |              |
|       |    | TRANSMISSION .....                                                                 | 43-1 | 43           |
|       |    | TRANSMISSION CASE, COVERS, GEARS, AND SHAFTS .....                                 | 44-1 | 44           |
|       |    | 0713 - INTERMEDIATE CLUTCH .....                                                   | 45-1 |              |
|       |    | CLUTCH ASSEMBLY .....                                                              | 45-1 | 45           |
|       |    | 0714 - SERVO UNIT .....                                                            | 46-1 |              |
|       |    | SHIFTER CONTROL VALVE .....                                                        | 46-1 | 46           |
|       |    | SHIFT OPERATING CYLINDER .....                                                     | 47-1 | 47           |
|       |    | 0721 - COOLERS, PUMPS, MOTORS .....                                                | 48-1 |              |
|       |    | CONVERTER LINES AND FITTINGS .....                                                 | 48-1 | 48           |
|       |    | CONVERTER LINES AND FITTINGS, MODEL MHE 220 .....                                  | 49-1 | 49           |
|       |    | OIL PUMP .....                                                                     | 50-1 | 50           |
|       |    | 0726 - BRAKES .....                                                                | 51-1 |              |
|       |    | CREEPER PEDAL AND LINKAGE .....                                                    | 51-1 | 51           |
|       |    | CREEPER PEDAL AND LEVERS, MODELS MHE 190, MHE 190A,<br>MHE 190B, AND MHE 220 ..... | 52-1 | 52           |
| GROUP | 09 | PROPELLER, PROPELLER SHAFTS, UNIVERSAL JOINTS,<br>COUPLER AND CLAMP ASSEMBLY       |      |              |
|       |    | 0900 - PROPELLER SHAFTS .....                                                      | 53-1 |              |
|       |    | UNIVERSAL .....                                                                    | 53-1 | 53           |

## TABLE OF CONTENTS - Continued

|       |    |                                                                                           | Page | Illus<br>Fig |
|-------|----|-------------------------------------------------------------------------------------------|------|--------------|
| GROUP | 10 | FRONT AXLE                                                                                |      |              |
|       |    | 1000 - FRONT AXLE ASSEMBLY .....                                                          | 54-1 |              |
|       |    | DRIVE AXLE ASSEMBLY .....                                                                 | 54-1 | 54           |
|       |    | 1002 - DIFFERENTIAL .....                                                                 | 55-1 |              |
|       |    | CARRIER ASSEMBLY .....                                                                    | 55-1 | 55           |
|       |    | DIFFERENTIAL GEARS AND BEARINGS .....                                                     | 56-1 | 56           |
|       |    | 1003 - PLANETARY OR FINAL DRIVE .....                                                     | 57-1 |              |
|       |    | HOUSING AND SPINDLE .....                                                                 | 57-1 | 57           |
|       |    | JACKSHAFT, GEAR, AND BEARINGS .....                                                       | 58-1 | 58           |
| GROUP | 11 | REAR AXLE                                                                                 |      |              |
|       |    | 1100 - REAR AXLE ASSEMBLY .....                                                           | 59-1 |              |
|       |    | AXLE ASSEMBLY, STEERING .....                                                             | 59-1 | 59           |
|       |    | 1104 - STEERING, SIDESHIFT AND WHEEL LEANING MECHANISM..                                  | 60-1 |              |
|       |    | STEERING AXLE BEAM AND KNUCKLES, MODEL MHE 191....                                        | 60-1 | 60           |
|       |    | STEERING AXLE BEAM AND KNUCKLES, MODELS MHE 190,<br>MHE 190A, MHE 190B, AND MHE 220 ..... | 61-1 | 61           |
| GROUP | 12 | BRAKES                                                                                    |      |              |
|       |    | 1201 - HANDBRAKES .....                                                                   | 62-1 |              |
|       |    | BRAKE LEVER AND CONTROLS .....                                                            | 62-1 | 62           |
|       |    | PARKING BRAKE DRUM AND BRAKE SHOES .....                                                  | 63-1 | 63           |
|       |    | 1202 - SERVICE BRAKES .....                                                               | 64-1 |              |
|       |    | BRAKE SHOES AND LINING .....                                                              | 64-1 | 64           |
|       |    | 1204 - HYDRAULIC BRAKE SYSTEM .....                                                       | 65-1 |              |
|       |    | MASTER CYLINDER, WHEEL CYLINDER, AND BRAKE LINES<br>AND FITTINGS .....                    | 65-1 | 65           |
|       |    | 1206 - MECHANICAL BRAKE SYSTEM .....                                                      | 66-1 |              |
|       |    | BRAKE PEDAL AND LINKAGE .....                                                             | 66-1 | 66           |
| GROUP | 13 | WHEELS AND TRACKS                                                                         |      |              |
|       |    | 1311 - WHEEL ASSEMBLY .....                                                               | 67-1 |              |
|       |    | FRONT AXLE WHEELS AND BEARINGS, MODEL MHE 191 .....                                       | 67-1 | 67           |
|       |    | FRONT AXLE WHEELS AND BEARINGS, MODELS MHE 190,<br>MHE 190A, MHE 190B, AND MHE 220 .....  | 68-1 | 68           |
|       |    | REAR AXLE WHEELS AND BEARINGS, MODEL MHE 191 .....                                        | 69-1 | 69           |
|       |    | REAR AXLE WHEELS AND BEARINGS, MODELS MHE 190,<br>MHE 190A, MHE 190B, AND MHE 220 .....   | 70-1 | 70           |
|       |    | 1313 - TIRES, TUBES, TIRE CHAINS .....                                                    | 71-1 |              |
|       |    | TIRES .....                                                                               | 71-1 | 71           |
| GROUP | 14 | STEERING                                                                                  |      |              |
|       |    | 1401 - MECHANICAL STEERING GEAR ASSEMBLY .....                                            | 72-1 |              |
|       |    | STEERING GEAR .....                                                                       | 72-1 | 72           |
|       |    | FRONT DRAG LINK .....                                                                     | 73-1 | 73           |
|       |    | REAR DRAG LINK .....                                                                      | 74-1 | 74           |
|       |    | TIE RODS .....                                                                            | 75-1 | 75           |

## TABLE OF CONTENTS - Continued

|       |    |                                                                                              | Page | Illus<br>Fig |
|-------|----|----------------------------------------------------------------------------------------------|------|--------------|
|       |    | 1410 - HYDRAULIC PUMP OR FLUID MOTOR ASSEMBLY.....                                           | 76-1 |              |
|       |    | STEERING HYDRAULIC PUMP.....                                                                 | 76-1 | 76           |
|       |    | 1411 - HOSES, LINES, FITTINGS.....                                                           | 77-1 |              |
|       |    | STEERING HYDRAULIC LINES AND FITTINGS.....                                                   | 77-1 | 77           |
|       |    | 1412 - HYDRAULIC OR AIR CYLINDERS.....                                                       | 78-1 |              |
|       |    | STEERING HYDRAULIC CYLINDER, MODEL MHE 191 .....                                             | 78-1 | 78           |
|       |    | STEERING HYDRAULIC CYLINDER, MODELS MHE 190, MHE 190A,<br>MHE 190B, AND MHE 220.....         | 79-1 | 79           |
|       |    | 1414 - STEERING SYSTEM VALVES .....                                                          | 80-1 |              |
|       |    | STEERING VALVE .....                                                                         | 80-1 | 80           |
| GROUP | 15 | FRAME, TOWING ATTACHMENTS, DRAWBARS, AND<br>ARTICULATION SYSTEMS                             |      |              |
|       |    | 1501 - FRAME ASSEMBLY .....                                                                  | 81-1 |              |
|       |    | FRAME ASSEMBLY, COUNTERWEIGHTS, AND TOWING EYE                                               | 81-1 | 81           |
| GROUP | 16 | SPRINGS AND SHOCK ABSORBERS                                                                  |      |              |
|       |    | 1601 - SPRINGS .....                                                                         | 82-1 |              |
|       |    | SPRING ASSEMBLY .....                                                                        | 82-1 | 82           |
| GROUP | 18 | BODY, CAB, HOOD AND HULL                                                                     |      |              |
|       |    | 1801 - BODY, CAB, HOOD, AND HULL ASSEMBLIES .....                                            | 83-1 |              |
|       |    | OVERHEAD GUARD AND BODY .....                                                                | 83-1 | 83           |
|       |    | FENDERS .....                                                                                | 84-1 | 84           |
|       |    | FLOOR PLATES .....                                                                           | 85-1 | 85           |
|       |    | 1806 - UPHOLSTERY, SEATS, AND CARPETS .....                                                  | 86-1 |              |
|       |    | SEAT ASSEMBLY.....                                                                           | 86-1 | 86           |
| GROUP | 24 | HYDRAULIC AND FLUID SYSTEMS                                                                  |      |              |
|       |    | 2401 - PUMP AND MOTOR.....                                                                   | 87-1 |              |
|       |    | HYDRAULIC PUMP, MODELS MHE 190, MHE 190A, MHE 190B,<br>AND MHE 191 .....                     | 87-1 | 87           |
|       |    | HYDRAULIC PUMP, MODEL MHE 220 .....                                                          | 88-1 | 88           |
|       |    | 2402 - MANIFOLD AND/OR CONTROL VALVES .....                                                  | 89-1 |              |
|       |    | HYDRAULIC CONTROL VALVE .....                                                                | 89-1 | 89           |
|       |    | 2403 - HYDRAULIC CONTROLS AND/OR MANUAL CONTROLS .....                                       | 90-1 |              |
|       |    | HYDRAULIC CONTROL LEVERS AND LINKAGE .....                                                   | 90-1 | 90           |
|       |    | 2404 - TILT CYLINDERS AND TILT CRANK.....                                                    | 91-1 |              |
|       |    | TILT CYLINDER ASSEMBLY .....                                                                 | 91-1 | 91           |
|       |    | 2405 - MAST COLUMN.....                                                                      | 92-1 |              |
|       |    | LIFT FORKS .....                                                                             | 92-1 | 92           |
|       |    | CROSSHEAD AND BEARINGS, MODELS MHE 190,<br>MHE 190A, MHE 190B, AND MHE 191.....              | 93-1 | 93           |
|       |    | CROSSHEAD AND BEARINGS, MODEL MHE 220.....                                                   | 94-1 | 94           |
|       |    | LIFT CHAINS, MODELS MHE 190, MHE 190A, MHE 190B,<br>AND MHE 191 .....                        | 95-1 | 95           |
|       |    | LIFT CYLINDER, MODELS MHE 190, MHE 190A, MHE 190B,<br>AND MHE 191 .....                      | 96-1 | 96           |
|       |    | LIFT CYLINDER, MODEL MHE 220.....                                                            | 97-1 | 97           |
|       |    | MAST COLUMN, MODELS MHE 190, MHE 190A, MHE 190B,<br>AND MHE 191, CARRIAGE AND BACKREST ..... | 98-1 | 98           |
|       |    | MAST COLUMN, MODEL MHE 220.....                                                              | 99-1 | 99           |

TABLE OF CONTENTS - Continued

|         |      |                                                           | Page   | Illus<br>Fig |
|---------|------|-----------------------------------------------------------|--------|--------------|
|         |      | 2406 - STRAINERS, FILTERS, LINES AND FITTINGIS, ETC ..... | 100-1  |              |
|         |      | HYDRAULIC LINES AND FITTINGS .....                        | 100-1  | 100          |
|         |      | HYDRAULIC LINES AND FITTINGS, MODEL MHE 220 .....         | 101-1  | 101          |
|         |      | HYDRAULIC OIL FILTER .....                                | 102-1  | 102          |
|         |      | 2408 - LIQUID TANKS OR RESERVOIRS .....                   | 103-1  |              |
|         |      | HYDRAULIC OIL TANK .....                                  | 103-1  | 103          |
| GROUP   | 94   | REPAIR KITS                                               |        |              |
|         |      | 9401 - REPAIR KITS .....                                  | KIT-1  |              |
|         |      | REPAIR KITS .....                                         | KIT-1  | KIT          |
| GROUP   | 95   | GENERAL USE STANDARDIZED PARTS                            |        |              |
|         |      | 9501 - BULK MATERIEL .....                                | BULK-1 |              |
|         |      | BULK MATERIEL .....                                       | BULK-1 | BULK         |
| SECTION | III. | SPECIAL TOOLS LIST (NOT APPLICABLE)                       |        |              |
| SECTION | IV.  | CROSS-REFERENCE INDEXES                                   |        |              |
|         |      | NATIONAL STOCK NUMBER INDEX .....                         | I-1    |              |
|         |      | PART NUMBER INDEX .....                                   | I-15   |              |
|         |      | FIGURE AND ITEM NUMBER INDEX .....                        | I-57   |              |

# UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS

## SECTION I. INTRODUCTION

### 1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support, and General Support Maintenance of the Fork Lift Truck. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

### 2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. *Section II. Repair Parts List.* A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in Item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure (s).


b. *Section III. Special Tools List.* A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.

c. *Section IV. Cross-reference Indexes.* A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing; in the listings National stock numbers and part numbers are cross-referenced to each illustration figure and item number appearance. The figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

### 3. Explanation of Columns (Sections II and III).

a. *ITEM NO. (Column (1)).* Indicates the number used to identify items called out in the illustration.

b. *SMR CODE (Column (2)).* The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition Instructions, as shown in the following breakout:

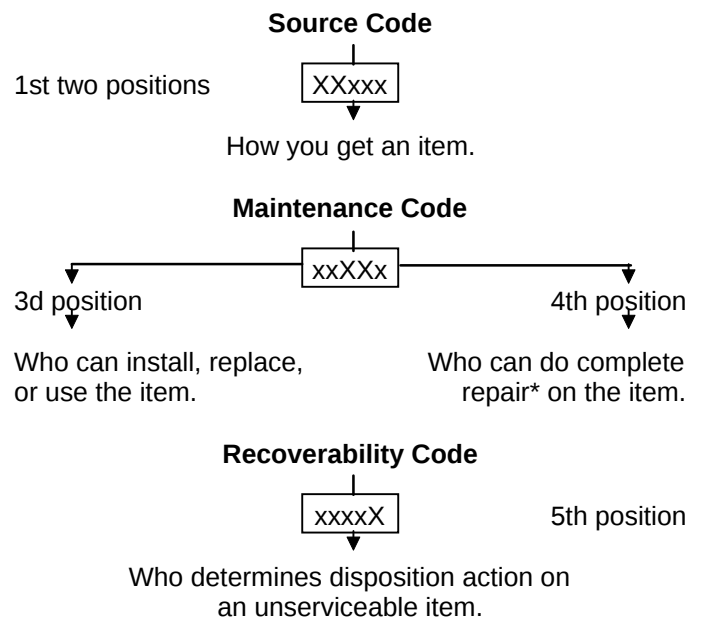

\**Complete Repair.* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) *Source Code* The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: