

TECHNICAL MANUAL

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS LISTS)

TRUCK, FORKLIFT DIESEL ENGINE DRIVEN,
PNEUMATIC-TIRED WHEELS, ROUGH
TERRAIN, 6000 LB CAPACITY,
24 IN. LOAD CENTER

ARMY MODEL MHE-200

NSN 3930-00-903-0900

ANTHONEY MODEL MLT-6

NSN 3930-01-054-3831

ANTHONEY MODEL MLT-6 WITH ROPS

AND

ARMY MODEL MHE-202

NSN 3930-00-937-0220

CHRYSLER MODEL MLT-6CH

NSN 3930-01-053-4823

CHRYSLER MODEL MLT-6CH WITH ROPS

AND

ARMY MODEL MHE-222

NSN 3930-00-419-5744

ATHEY MODEL ARTFT-6

NSN 3930-01-054-3830

ATHEY MODEL ARTFT-6 WITH ROPS

This manual supersedes TM 10-3930-242-24P, dated 28 December 1990

Approved for public release: distribution is unlimited.

**UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE
REPAIR PARTS AND SPECIAL TOOLS LISTS
(INCLUDING DEPOT MAINTENANCE REPAIR
PARTS AND SPECIAL TOOLS LISTS)**

**TRUCK, FORKLIFT DIESEL ENGINE DRIVEN,
PNEUMATIC-TIRED WHEELS, ROUGH
TERRAIN, 6000 LB CAPACITY,
24 IN. LOAD CENTER**

ARMY MODEL MHE-200

NSN 3930-00-903-0900

ANTHONEY MODEL MLT-6

NSN 3930-01-054-3831

ANTHONEY MODEL MLT-6 WITH ROPS

AND

ARMY MODEL MHE-202

NSN 3930-00-937-0220

CHRYSLER MODEL MLT-6CH

NSN 3930-01-053-4823

CHRYSLER MODEL MLT-6CH WITH ROPS

AND

ARMY MODEL MHE-222

NSN 3930-00-419-5744

ATHEY MODEL ARTFT-6

NSN 3930-01-054-3830

ATHEY MODEL ARTFT-6 WITH ROPS

Current as of 26 March 1993

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (*Recommended Changes to Publications and Blank Forms*), or DA Form 2028-2, located in the back of this manual, direct to: Commander, U.S. Army Tank-Automotive Command, ATTN: AMSTA-MB, Warren, MI 48397-5000. A reply will be furnished to you.

Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

	Page	Illus Fig
SECTION I. INTRODUCTION	1	
SECTION II. REPAIR PARTS LIST	1-1	

* This manual supersedes TM 10-3930-242-24P, dated 28 December 1990.

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
GROUP 01 ENGINE		
0100 - ENGINE ASSEMBLY	1-1	
ENGINE ASSEMBLY AND SUPPORT	1-1	
ENGINE MOUNTS AND LIFTING BRACKET	2-1	1
0101 - CRANKCASE, BLOCK, CYLINDER HEAD	3-1	2
CYLINDER HEAD ASSEMBLY	3-1	
ENGINE BLOCK ASSEMBLY	4-1	3
0102 - CRANKSHAFT	5-1	4
CRANKSHAFT AND PULLEY	5-1	
0103 - FLYWHEEL ASSEMBLY	6-1	5
FLYWHEEL AND HOUSING	6-1	6
0104 - PISTONS AND CONNECTING RODS	7-1	
PISTON AND CONNECTING ROD	7-1	
0105 - VALVES, CAMSHAFTS, AND TIMING SYSTEM	8-1	7
CYLINDER VALVES AND IDLER GEAR	8-1	
ROCKER ARM COVER AND BREATHER	9-1	8
ENGINE FRONT COVER	10-1	9
CAMSHAFT AND BALANCE SHAFT	11-1	10
ROCKER ARMS	12-1	11
0106 - ENGINE LUBRICATION SYSTEM	13-1	12
OIL PUMP AND COVER	13-1	
OIL FILTER AND SAMPLING SYSTEM	15-1	13
OIL PAN AND SUCTION TUBE	15-1	14
OIL FILLER PIPE AND DIPSTICK	16-1	15
OIL COOLER	17-1	16
0108 - MANIFOLDS	18-1	17
EXHAUST MANIFOLD	18-1	18
GROUP 03 FUEL SYSTEM		
0301 - CABURETOR, FUEL INJECTOR	19-1	
FUEL INJECTION LEVERS AND TUBES	19-1	19
FUEL INJECTOR ASSEMBLY	20-1	20
0302 - FUEL PUMPS	21-1	
FUEL PUMP ASSEMBLY	21-1	21
0304 - AIR CLEANER	22-1	
AIR CLEANER ASSEMBLY	22-1	22
AIR CLEANER RELATED PARTS	23-1	23
0305 - SUPERCHARGER, BLOWER, TURBOCHARGER, OR ALTITUDE COMPENSATOR	24-1	
BLOWER INLET HOUSING	24-1	24
BLOWER ASSEMBLY (UPPER HALF)	25-1	25
BLOWER ASSEMBLY (LOWER HALF) AND COUPLINGS	26-1	26
BLOWER DRIVE	27-1	27
0306 - TANKS LINES, FITTINGS, HEADERS	28-1	
FUEL TANK BREATHER	28-1	28
FUEL TANK ASSEMBLY AND RELATED PARTS	29-1	29
FUEL TANK AND LINES AND FITTINGS	30-1	30
0308- ENGINE SPEED GOVERNOR AND CONTROLS		
GOVERNOR ASSEMBLY AND RELATED PARTS	31-1	31
GOVERNOR COVER	32-1	32

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
0308 - ENGINE SPEED GOVERNOR AND CONTROLS (Con't)		
LIMITING SPEED HOUSING	33-1	33
GOVERNOR ATTACHING PARTS	34-1	34
0309 - FUEL FILTERS	35-1	
FUEL AND WATER SEPARATOR	35-1	35
FUEL FILTER	36-1	36
0311 - ENGINE STARTING AIDS	37-1	
STARTING AID	37-1	37
0312 - ACCELERATOR, THROTTLE, OR CHOKE CONTROLS	38-1	
THROTTLE CONTROL LINKAGE	38-1	38
THROTTLE SHAFT AND LINKAGE	39-1	39
ACCELERATOR PEDAL AND MOUNTING PLATE	40-1	40
GROUP 04 EXHAUST SYSTEM		
0401 - MUFFLER AND PIPES	41-1	
MUFFLER GUARD	41-1	41
MUFFLER AND PIPES	42-1	42
GROUP 05 COOLING SYSTEM		
0501 - RADIATOR, EVAPORATIVE COOLER, OR HEAT EXCHANGER	43-1	
RADIATOR ASSEMBLY AND RELATED PARTS	43-1	43
0502 - COWLING, DEFLECTORS, AIR DUCTS, SHROUDS, ETC.	44-1	
RADIATOR SHROUD	44-1	44
0503 - WATER MANIFOLD, HEADERS, THERMOSTATS, AND HOUSING GASKET	45-1	
RADIATOR HOSES AND CLAMPS	45-1	45
THERMOSTAT AND WATER CONNECTIONS	46-1	46
0504 - WATER PUMP	47-1	
WATER PUMP	47-1	47
0505 - FAN ASSEMBLY	48-1	
FAN AND PULLEY	48-1	48
FAN RELATED PARTS	49-1	49
BELT TIGHTENER	50-1	50
GROUP 06 ELECTRICAL SYSTEM		
0601 - GENERATOR, ALTERNATOR	51-1	
GENERATOR AND RELATED PARTS	51-1	51
0602 - GENERATOR REGULATOR	52-1	
VOLTAGE REGULATOR	52-1	52
0603 - STARTING MOTOR	53-1	
STARTER, UPPER HALF (MHE-200 AND MHE-202)	53-1	53
STARTER, LOWER HALF (MHE-200 AND MHE-202)	54-1	54
STARTER, UPPER HALF (MHE-222)	55-1	55
STARTER, LOWER HALF (MHE-222)	56-1	56
STARTER RELAY AND ATTACHING PARTS	57-1	57
0607 - INSTRUMENT OR ENGINE CONTROL PANEL	58-1	
INSTRUMENT AND CONTROL PANEL	58-1	58
CONTROL PANEL ATTACHING PARTS	59-1	59
0608 - MISCELLANEOUS ITEMS	60-1	
PRESSURE SWITCHES	60-1	60

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
0609 - LIGHTS	61-1	
HEADLIGHTS	61-1	61
FLOODLIGHT	62-1	62
BLACKOUT DRIVE LIGHT	63-1	63
STOPLIGHT AND TAILLIGHT	64-1	64
BLACKOUT MARKER LIGHT	65-1	65
0610 - SENDING UNITS AND WARNING SWITCHES	66-1	
FUEL PRESSURE WARNING SWITCH	66-1	66
0611 - HORN, SIREN	67-1	
HORN AND BUTTON,	67-1	67
0612 - BATTERIES, STORAGE	68-1	
HOOD AND BATTERY SUPPORT	68-1	68
BATTERY HOLD-DOWN, AND CABLES	69-1	69
0613 - HULL OR CHASSIS WIRING HARNESS	70-1	
CHASSIS WIRING HARNESS	70-1	70
GROUP 07 TRANSMISSION		
0705 - TRANSMISSION SHIFTING COMPONENTS	71-1	
TRANSMISSION COLUMN SHIFT LINKAGE	71-1	71
TRANSMISSION CONTROLS (MHE-222)	72-1	72
TRANSMISSION CONTROLS (MHE-200 AND MHE-202)	73-1	73
0708 - TORQUE CONVERTER OR FLUID COUPLING	74-1	
TORQUE CONVERTER	74-1	74
TORQUE CONVERTER DRIVE	75-1	75
TORQUE CONVERTER HOUSING	76-1	76
0710 - TRANSMISSION ASSEMBLY AND ASSOCIATED PARTS	77-1	
TRANSMISSION HOUSING AND COMPONENTS	77-1	77
TRANSMISSION AND MOUNTING HARDWARE	78-1	78
TRANSMISSION OUTPUT SHAFT	79-1	79
TRANSFER GEARS AND HOUSING	80-1	80
TRANSFER HOUSING COMPONENTS	81-1	81
PLANETARY UNIT (FORWARD)	82-1	82
PLANETARY UNIT (REVERSE)	83-1	83
0713 - INTERMEDIATE CLUTCH	84-1	
INTERMEDIATE CLUTCH AND PLANETARY UNIT	84-1	84
HIGH AND LOW RANGE CLUTCHES	85-1	85
0714 - SERVO UNIT	86-1	
TRANSMISSION CONTROL VALVE	86-1	86
0721 - COOLERS, PUMPS, MOTORS	87-1	
TRANSMISSION BREATHER AND HOSES	87-1	87
PRESSURE REGULATOR VALVE	88-1	88
TRANSMISSION OIL FILTER	89-1	89
TORQUE CONVERTER CHARGING PUMP	90-1	90
0725 - IDLER GEARS	91-1	
TRANSMISSION IDLER GEAR	91-1	91
GROUP 08 TRANSFER, FINAL DRIVE, PLANETARY AND DROP GEARBOX ASSEMBLIES		
0801 - POWER TRANSFER, FINAL DRIVE, PLANETARY, OR DROP GEARBOX ASSEMBLIES	92-1	
POWER TAKE-OFF	92-1	92
GROUP 09 PROPELLER, PROPELLER SHAFTS, UNIVERSAL JOINTS, COUPLER, AND CLAMP ASSEMBLY		
0900 - PROPELLER SHAFTS		
PROPELLER SHAFT (FRONT)	93-1	93

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
0900 - PROPELLER SHAFTS (Con't)		
PROPELLER SHAFT (REAR)	94-1	94
PROPELLER SHAFT.	95-1	95
 GROUP 10 FRONT AXLE		
1000 - FRONT AXLE ASSEMBLY.	96-1	
FRONT AXLE, HOUSING, AND ATTACHING PARTS	96-1	96
TRUNNIONS, INNER AND OUTER	97-1	97
1002 - DIFFERENTIAL	98-1	
DIFFERENTIAL PINION RELATED PARTS	98-1	98
DIFFERENTIAL CARRIER	99-1	99
DIFFERENTIAL SHIFT CONTROL	100-1	100
DIFFERENTIAL LOCK ACTUATOR	101-1	101
DIFFERENTIAL LOCK PEDAL	102-1	102
DIFFERENTIAL LOCK LINES	103-1	103
1003 - PLANETARY OR FINAL DRIVE	104-1	
PLANETARY DRIVE	104-1	104
1004 - STEERING AND LEANING WHEEL MECHANISM	105-1	
STEERING SUPPORT AND SPINDLE	105-1	105
 GROUP 11 REAR AXLE		
1100 - REAR AXLE ASSEMBLY	106-1	
AXLE DISCONNECT	106-1	106
AXLE ASSEMBLY SHAFTS, AND ATTACHING PARTS	107-1	107
TRUNNIONS, INNER AND OUTER	108-1	108
1101 - HOUSING, BEAM, HOUSING COVERS, PLUGS, SEALS, ETC.	109-1	
AXLE HOUSING	109-1	109
1102 - DIFFERENTIAL	110-1	
DIFFERENTIAL PINION RELATED PARTS	110-1	110
DIFFERENTIAL CARRIER.	111-1	111
DIFFERENTIAL SHIFT CONTROL	112-1	112
DIFFERENTIAL LOCK LINES	113-1	113
1103 - PLANETARY OR FINAL DRIVE	114-1	
PLANETARY DRIVE	114-1	114
1104 - STEERING, SIDESHIFT, AND WHEEL LEANING MECHANISM	115-1	
STEERING SUPPORT AND SPINDLE	115-1	115
 GROUP 12 BRAKES		
1201 - HANDBRAKES	116-1	
PARKING BRAKE	116-1	116
PARKING BRAKE LEVER AND LINKAGE.	117-1	117
PARKING BRAKE LINK AND RELATED PARTS	118-1	118
1202 - SERVICE BRAKES	119-1	
SERVICE BRAKES	119-1	119
AUTOMATIC BRAKE ADJUSTER	120-1	120
1204 - HYDRAULIC BRAKE SYSTEM		
HYDRAULIC BRAKE ACCUMULATOR AND HOSES	121-1	121
BRAKE VALVE AND RELATED PARTS.	122-1	122
BRAKE VALVE, EXPLODED VIEW	123-1	123

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
1204 - HYDRAULIC BRAKE SYSTEM (Con't)		
HYDRAULIC BRAKE LINES AND HOSES (FORWARD SECTIONS)	124-1	124
HYDRAULIC BRAKE LINES AND HOSES (REAR SECTIONS)	125-1	125
1206 - MECHANICAL BRAKE SYSTEM	126-1	
BRAKE PEDAL LINKAGE	126-1	126
GROUP 13 WHEELS AND TRACKS		
1311 - WHEEL ASSEMBLY	127-1	
HUB AND BRAKEDRUM ASSEMBLY	127-1	127
WHEEL ASSEMBLY	128-1	128
1313 - TIRES, TUBES, TIRE CHAINS	129-1	
TIRES	129-1	129
GROUP 14 STEERING		
1401 - MECHANICAL STEERING GEAR ASSEMBLY	130-1	
TIE-ROD ASSEMBLY	130-1	130
DRAG LINK (FRONT)	131-1	131
DRAG LINK (REAR)	132-1	132
STEERING LINKAGE	133-1	133
STEERING GEAR (UPPER SECTION)	134-1	134
STEERING GEAR (LOWER SECTION)	135-1	135
STEERING GEAR LINKAGE	136-1	136
1410 - HYDRAULIC PUMP OR FLUID MOTOR ASSEMBLY	137-1	
HYDRAULIC STEERING PUMP (REAR)	137-1	137
1411 - HOSES, LINES, FITTINGS	138-1	
STEERING CYLINDER TUBE AND FITTINGS	138-1	138
POWER STEERING VALVE HOSES AND FITTINGS	139-1	139
POWER STEERING HOSES AND FITTINGS	140-1	140
POWER STEERING BULKHEAD FITTINGS AND HOSES	141-1	141
POWER STEERING MANIFOLD, HOSES, AND FITTINGS	142-1	142
POWER STEERING VALVE TO BULKHEAD LINES, HOSES, AND FITTINGS	143-1	143
STEERING CYLINDER HOSES, LINES, AND FITTINGS	144-1	144
1412 - HYDRAULIC OR AIR CYLINDERS	145-1	
STEERING CYLINDER (MHE-200 AND MHE-222)	145-1	145
STEERING CYLINDER (MHE-202)	146-1	146
THREE POSITION CYLINDER (MHE-200 AND MHE-222)	147-1	147
THREE POSITION CYLINDER (MHE-202)	148-1	148
1414 - STEERING SYSTEM VALVES	149-1	
STEERING SELECTOR VALVE	149-1	149
STEERING SELECTOR VALVE CONTROLS	150-1	150
HYDRAULIC STEERING VALVE	151-1	151
STEERING GEAR CONTROL VALVE (UPPER)	152-1	152
GROUP 15 FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEMS		
1501 - FRAME ASSEMBLY	153-1	
FRAME AND RELATED PARTS	153-1	153
ROLL-OVER PROTECTIVE STRUCTURE (RAPS)	154-1	154
1502 - COUNTERWEIGHTS	155-1	
COUNTERWEIGHT	155-1	155

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
1503 -PINTLES AND TOWING ATTACHMENTS	156-1	
PINTLE	156-1	156
GROUP 18 BODY CAB, HOOD, AND HULL		
1801 -BODY, CAB, HOOD, AND HULL ASSEMBLIES	157-1	
HOOD AND SIDE PANEL NOISE ABATEMENT PARTS	157-1	157
HOOD AND SIDE PANELS	158-1	158
COCKPIT AND MOUNTING HARDWARE	159-1	159
COCKPIT COVERS	160-1	160
CONSOLE COVERS,	161-1	161
1802 - FENDERS, RUNNING BOARDS WITH MOUNTING AND ATTACHING PARTS, OUTRIGGERS, WINDSHIELD, GLASS, ETC.	162-1	
FENDER PANELS	162-1	162
FENDERS	163-1	163
1805 - FLOORS, SUBFLOORS, AND RELATED COMPONENTS	164-1	
COCKPIT FLOOR PLATES	164-1	164
TRANSMISSION GUARD PLATES	165-1	165
1806 -UPHOLSTERY, SEATS, AND CARPETS	166-1	
OPERATOR'S SEAT (MHE-200 AND MHE-202)	166-1	166
OPERATOR'S SEAT (MHE-222)	167-1	167
SEAT BASE (MHE-200 AND MHE-202)	168-1	168
1808 - STOWAGE RACKS, BOXES, STRAPS, CARRYING CASES, CABLE REELS, HOSE REELS, ETC.	169-1	
TOOLBOX	169-1	169
GROUP 22 BODY CHASSIS, AND HULL ACCESSORY ITEMS		
2210 - DATA PLATES AND INSTRUCTION HOLDERS	170-1	
DATA PLATES	170-1	170
GROUP 24 HYDRAULIC AND FLUID SYSTEMS		
2401 - PUMP AND MOTOR	171-1	
MAIN HYDRAULIC PUMP	171-1	171
ENGINE DRIVEN HYDRAULIC PUMP	172-1	172
2402 -Manifold AND/OR CONTROL VALVES	173-1	
CONTROL VALVE (TWO SPOOL)	173-1	173
CONTROL VALVE (THREES POOL).	174-1	174
HYDRAULIC REPLENISHING VALVE AND RETURN MANIFOLD	175-1	175
2403- HYDRAULIC CONTROLS AND/OR MANUAL CONTROLS	176-1	
HYDRAULIC VALVE CONTROLS	176-1	176
HYDRAULIC AND MANUAL CONTROLS	177-1	177
2404 -TILT CYLINDERS AND TILT CRANK	178-1	
TILT CYLINDER (MHE-200 AND MHE-222)	178-1	178
TILT CYLINDER (MHE-202)	179-1	179
2405 - MAST COLUMN	180-1	
MAST COLUMN, LIFT AND SLAVE CYLINDER SUPPORTS	180-1	180
BOOM ASSEMBLY	181-1	181
LIFT FORK AND CARRIAGE,	182-1	182
CARRIAGE ATTACHING PARTS	183-1	183
LIFT CYLINDER (MHE-200 AND MHE-222)	184-1	184
LIFT CYLINDER (MHE-202)	185-1	185

TABLE OF CONTENTS (Con't)

	Page	Illus Fig
2406 - STRAINERS, FILTERS, LINES, AND FITTINGS, ETC.	186-1	
HYDRAULIC REPLENISHING VALVE LINES AND HOSES	186-1	186
RETURN MANIFOLD LINES AND HOSES.	187-1	187
CONTROL VALVE LINES AND HOSES	188-1	188
HYDRAULIC TANK LINES AND HOSES	189-1	189
SLAVE CYLINDER LINES AND HOSES	190-1	190
OSCILLATING CYLINDER LINES AND FITTINGS	191-1	191
EXTENSION CYLINDER LINES AND HOSES	192-1	192
LIFT CYLINDER LINES AND HOSES...	193-1	193
SIDESHIFT CYLINDER AND TILT CYLINDER, LINES AND HOSES	194-1	194
2407 - HYDRAULIC CYLINDERS	195-1	
SLAVE CYLINDER (MHE-200 AND MHE-222)	195-1	195
SLAVE CYLINDER (MHE-202)	196-1	196
SIDESHIFT CYLINDER (MHE-200 AND MHE-222)	197-1	197
SIDESHIFT CYLINDER (MHE-202)	198-1	198
OSCILLATING CYLINDER	199-1	199
EXTENSION CYLINDER (MHE-200 AND MHE-222)	200-1	200
EXTENSION CYLINDER (MHE-202)	201-1	201
2408 - LIQUID TANKS OR RESERVOIRS	202-1	
CONTAMINATION INDICATOR	202-1	202
HYDRAULIC RESERVOIR	203-1	203
GROUP 94	REPAIR KITS	
9401 - REPAIR KITS	KIT-1	
REPAIR KITS	KIT-1	KIT
GROUP 95	GENERAL USE STANDARDIZED PARTS	
9501 - BULK MATERIEL	BULK-1	
BULK MATERIEL	BULK-1	BULK
SECTION III.	SPECIAL TOOLS (NOT APPLICABLE)	
SECTION IV.	CROSS-REFERENCE INDEXES	
	NATIONAL STOCK NUMBER INDEX	I-1
	PART NUMBER INDEX	I-34
	FIGURE AND ITEM NUMBER INDEX	I-129

UNIT, DIRECT SUPPORT, AND GENERAL SUPPORT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS (INCLUDING DEPOT MAINTENANCE REPAIR PARTS AND SPECIAL TOOLS LISTS)

SECTION I. INTRODUCTION

1. Scope.

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit, Direct Support, and General Support Maintenance of the Forklift Truck. It authorizes the requisitioning, issue, and disposition of spares, repair parts and special tools as indicated by the source, maintenance and recoverability (SMR) codes.

2. General.

In addition to Section I. Introduction, this Repair Parts and Special Tools List is divided into the following sections:

a. Section II. Repair Parts List. A list of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. The list also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Bulk materials are listed in item name sequence. Repair kits are listed separately in their own functional group within Section II. Repair parts for reparable special tools are also listed in the section. Items listed are shown on the associated illustration(s)/figure(s).

b. Section III. Special Tools List. A list of special tools, special TMDE, and other special support equipment authorized by this RPSTL (as indicated by Basis of Issue (BOI) information in DESCRIPTION AND USABLE ON CODE column) for the performance of maintenance.


c. Section IV. Cross-reference Indexes. A list, in National Item Identification Number (NIIN) sequence, of all National stock numbered items appearing in the listing, followed by a list in alphanumeric sequence of all part numbers appearing in the listings. National stock numbers and part numbers are cross-referenced to each illustration/figure and item number appearance. The

figure and item number index lists figure and item numbers in alphanumeric sequence and cross-references NSN, CAGE, and part numbers.

3. Explanation of Columns (Sections II and III).

a. ITEM NO. (Column (1)). Indicates the number used to identify items called out in the illustration.

b. SMR CODE (Column (2)). The Source, Maintenance, and Recoverability (SMR) code is a 5-position code containing supply/requisitioning information, maintenance category authorization criteria, and disposition instructions, as shown in the following breakout:

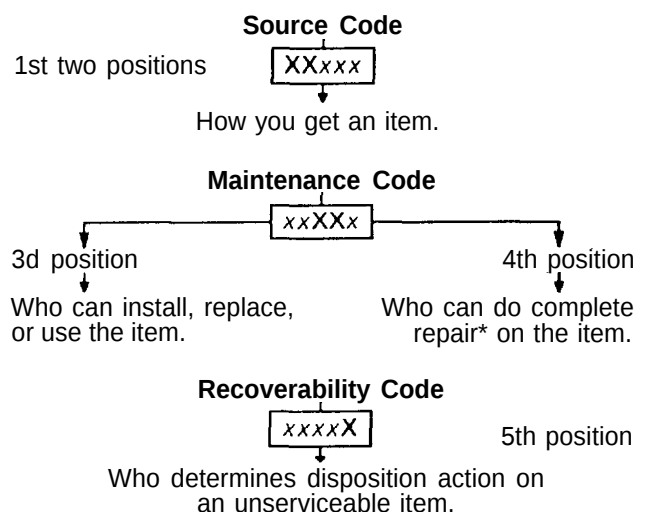

*Complete Repair: Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

(1) Source Code. The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follows: